 


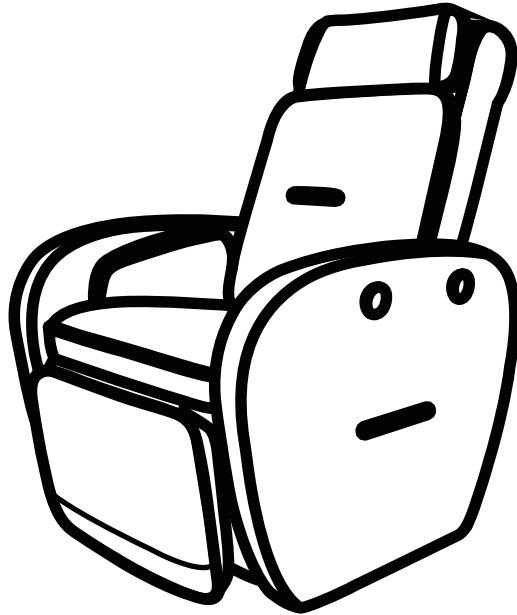

MODA sofa

摩登沙发



User Manual
OS 3008A 使用手册



MODA sofa

摩登沙发

User Manual
OS 3008A 使用手册

CONTENTS

Safety Instructions	03
Warranty Claims	05
Main Unit & Accessories	06
Controller Diagram	07
Button Name and Function	08
Product Installation	09
Product Operation Guide	12
Display	13
Product Maintenance	14
Trouble Shooting	15
Product Specification	15
Contact us	16

Safety Instructions

i. Usage environment

- Do not use the appliance in a wet condition or dusty environment as this may result in malfunction or electric shock.
- Place the appliance in a safe location.
- Do not expose the appliance to a heater or direct sunlight.
- This product is only intended for personal use only. Commercial use is prohibited.

ii. Health precautions

If you are experiencing health complications or conditions as stated below, please consult your doctor before use:

- Suffering from heart disease.
- Pregnancy.
- Any health concerns.

iii. When the product should not be used

- If the use exceeds 15 minutes at one time.
- This unit should not be used by children or invalids without adult supervision.
- Before sleeping.
- If the fabric cover is torn.
- If water is accidentally spilled onto the appliance.
- If the user feels abnormal or severe pain during the massage.
- If the user detects any malfunction or other abnormal conditions during operation.
- If there is lightning.

iv. Caution and warning

- Unplug the appliance from the outlet when not in use.
- Do not use any attachments that are not recommended by OGAWA.
- Do not operate this appliance if it has a damaged cord or plug. Please return the unit to OGAWA Service Center for examination and repairs.
- Do not insert your hands or any foreign matters into the massager's vents and gaps.
- Handle heated surfaces carefully. The unattended use of the heated surfaces by children or invalids may be dangerous.
- This product is only intended for personal use only. Commercial use is prohibited.

Safety Instructions

- Do not cover the appliance during operation. As this may result in malfunction or fire.
- Do not crush the appliance and avoid any sharp folds.
- The appliance has a heated surface. Persons insensitive to heat must be careful when using the appliance.

V. Note

- This appliance can be used by children at the age of 8 or above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge under guidance or if they have been informed of the risks involved and instructions concerning use of the appliance in a safe way.
- Children shall not play on the appliance.
- Cleaning and maintenance shall not be performed by children without supervision.
- To ensure safe and proper use of the appliance, do not operate it before reading this user manual carefully first.
- Extensive usage could lead to excessive heating and a shorter product lifespan. Should this occur, discontinue the use and allow the unit to cool before operating again.
- It is normal to hear the noises during use, because they are resulted from vibration of product.
- For people under medication or with a medical condition, please consult your doctor before use. Please do not use the product if you are not feeling well.
- If the appliance is used in a cold room, do not increase the room temperature abruptly. It is advised that the temperature is gradually increased to a normal level.
- If the appliance is stored in a cold place and being taken into a warm environment, please wait one hour before use to get the optimum massaging level.
- Do not remove the cover of the appliance. Mishandling the internal components may result in malfunction or electric shock.
- Do not connect or disconnect the power plug from the electrical outlet with wet hands.
- Do not use the appliance if the electrical outlet is loose.
- If damaged, the supply cord must be repaired by the manufacturer, after-sales service provider or qualified persons in similar field so as to avoid a hazard.
- The appliance has a heated surface. Persons insensitive to heat must be careful when using the appliance.
- Maximum user weight is 120Kg.



Safety Instructions

 
 
 
- The appliance is only to be used with power supply provided.
- The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.

Warranty Claims


1. Warranty is not transferable.
2. This warranty is effective only if the product is purchased from OGAWA.
3. Proof of purchase (original receipt) is required for all warranty repairs.
4. All implied warranties, including but not limited to these implied warranties of fitness and merchantability, are limited to the duration stated in the warranty policy.
5. Damage due to misuse, improper treatment and unauthorized modification and repair are not covered by this warranty.
6. Warranty does not cover accessories and attachments which do not belong to the massage unit.
7. Warranty is not effective to rental, business, commercial, institutional or other non-residential users.
8. All services covered by this warranty must be approved by OGAWA and repaired by authorized technicians only.
9. If replacement parts for defective materials are not available, OGAWA reserves the right to make substitution in lieu of repair or replacement.



Main Unit & Accessories

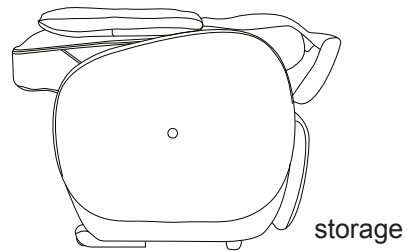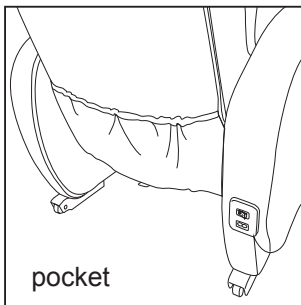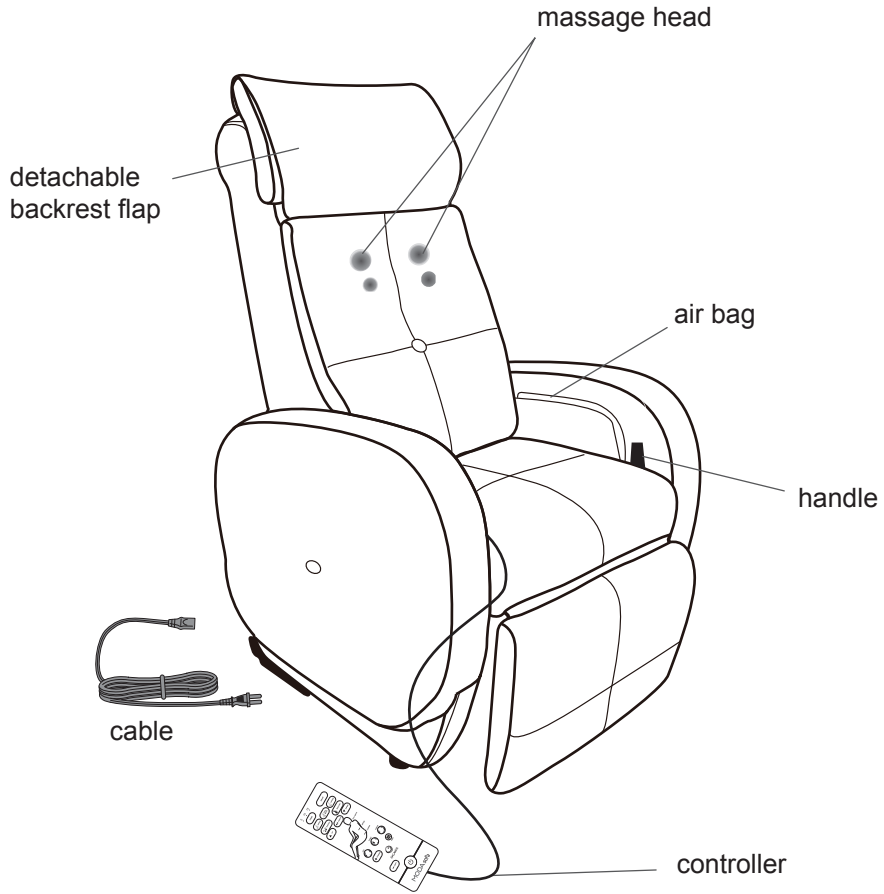

Controller Diagram

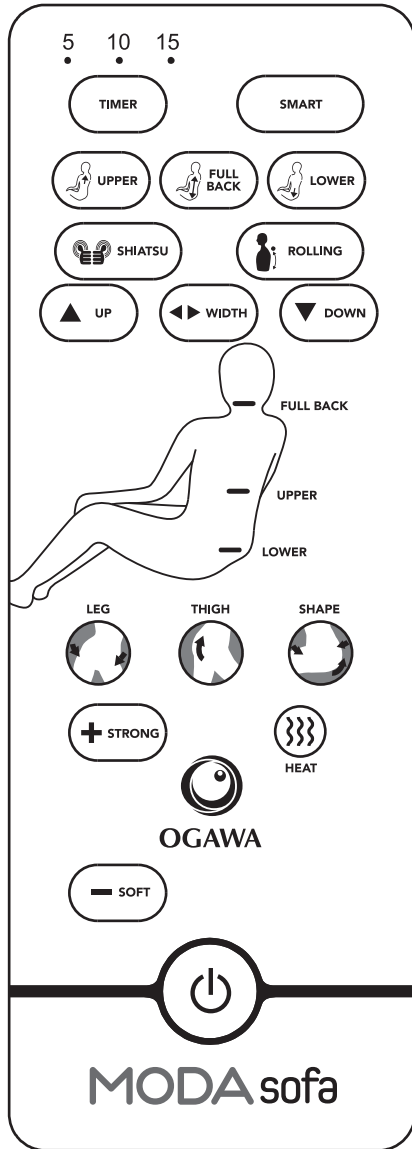 


Button Name and Function

1. Timer - use to select massage time
2. Smart - for back and thigh massage
3. Area - use to select massage area
4. Shiatsu - use for back shiatsu massage
5. Rolling - for back and thigh massage
6. Width - use to select massage head width
7. Up/Down - use to select massage position
8. Let - Leg massage program
9. Thigh - thigh massage program
10. Shape - leg and thigh massage program
11. Intensity - air bag pressure selection
12. Heat - controller button for heat at back
13. Power - button to ON/OFF machine

Product Installation

 
Step 1. Lift up the backrest, Make sure the backrest was lock
(locking sound “ka”)

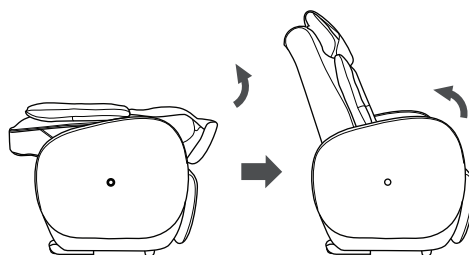


<backrest>

Step 2. Assemble the connection by follow
the indication

 Caution: Unproper connection will cause
machine unoperated.

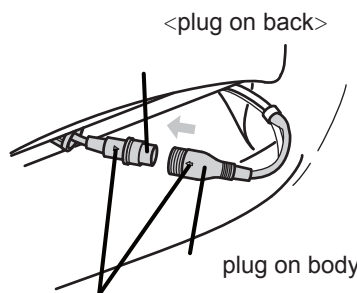


 
Step 3. Plug in socket.
as picture

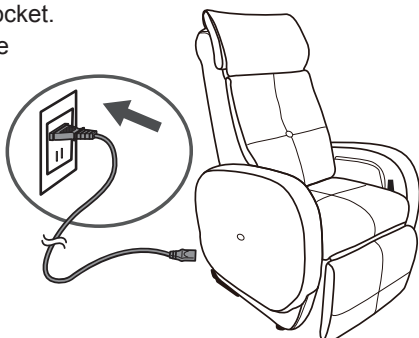

Back rest storage

Caution: Make sure the massage head is return to bottom
positon before dismantel. Remove the plug.

  1. Remove the connection
2. Press the button to release
the backrest as picture

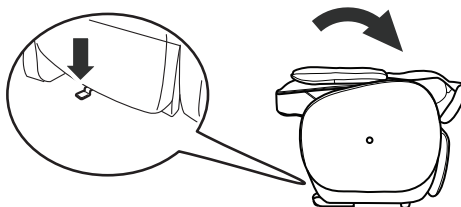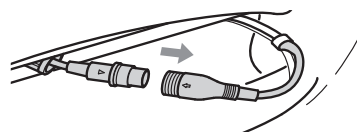



Product Operation Guide

1. [Power]

Insert power plug into electric outlet. Turn on the power. If the roller are not at bottom position, the light of the [Power] button will flash and the rollers will return to the bottom position. Press [Power] button, light will on and start countdown of 15 minute. Press [Power] second time, the unit will stop functioning and the light is off.

2. [Timer]

Each massage is set for 15 minute, each time button was press, the time will change in cycle 5-10-15. The light in each location will on.

3. [SMART]

Press [SAMRT] button, whole body, shiatsu, heat , thigh and leg massage. air pressure in low level for 15 minute. [Heat] and [Intensity] can be press to switch off or change level. If other button is press(except width), [SMART] will be off and proceed to the related function. Press [SMART] again to turn off this program.

Back massage

1 . [Shiatsu]

Press [Shiatsu] to switch on the shiatsu massage. Press again the stop shiatsu massage.

2. [Up / Down]

Long pres [Up] button, massage head will move upward and stop when button is release.

Long pres [Down] button, massage head will move upward and stop when button is release.

3. [Rolling]

Press [Rolling] button, rolling massage will activate. Press [Rolling] button again, rolling massage will stop.

4. [Width]

Width only will be function under rolling mode.

During rolling, each time when [Width] is press, massage head turn to provide different width.

Product Operation Guide

5. [Full Back] , [Upper] , [Lower]

[Full Back],[Upper],[Lower] button is to select the massage area. If none of the button is press, machine default as full back, if none of [Shiatsu], [Rolling] button is press, machine will default as shiatsu. Press [Full Back] button, button light will on and massage head move all location. Press [Upper] button, button light will on and massage head move only upper half. Press [Lower] button, button light will on and massage head move only lower half.

6. [Heating]

Heating only function when shiatsu, rolling is activated. Press [Heating] button, heating will start. Press again to stop it.

Air pressure massage

1. [Leg]

Press [Leg] button, button light will on, masage on leg and hip.

2. [Thigh]

Press [Thigh] button, button light will on, masage on thigh.

3. [Shape]

Press [Shape] button, button light will on, air bag on hip and thigh will exchange massage.

4. [+Strong] [-Soft]

Use to select air pressure intensity. Default as low pressure. Last setting will be memory if [Power] button not press to off.

 
Caution:

- Please use backrest flap if found the massage is too strong.
- For new user, please select low air intensity.
- After use, press power button to off the machine. Once the massage head had back to the origin.

Product Operation Guide

5. Backrest angle control

Backrest incline decline angle can be adjust.

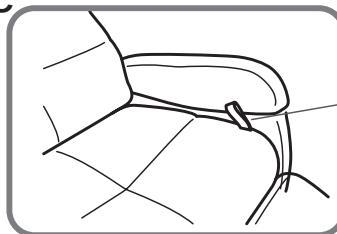

handle

A. Decline:

 
Before decline, please make sure no disturbance behind chair. Pull up handle, lay down backrest.

B. Incline:

Pull up handle, backrest will back to the origin position.

6. Relocation:

Design with roller at rear bottom. To shift, press down chair as picture and pull.

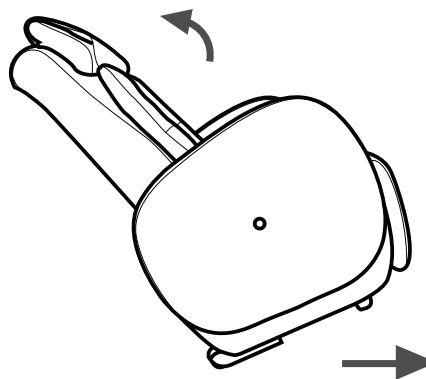

Caution:

- Please use backrest flap if found the massage is to strong.
 - For new user, please select low air intensity.
 - After use, press power button to off the machine.
- Once the masage head had back to the origin,remove the power plug from machine.

Display

1. Shiatsu and rolling massaging programs can relax your back.
2. Fixed-position massaging function provides Shiatsu of specific position.
3. Heat function can increase the Shiatsu and Rolling effect and improve blood circulation.
4. Easy to use remote controller.
5. Auto shut-off after 15 minutes.
6. LED light indicators.

Effects by using the appliance

1. Relieves the muscle ache and pain.
2. Relieves the tension and reduce the stress.
3. Improves blood circulation.

When you do not use the product, press the [Power] button, and please don't cut off the power immediately until the rollers have resumed to the bottom and the indicator light is off.

Press the [Power] button after use and the massager will stop operating. Massage roller will resume to their original position. Unplug the appliance from power outlet.



Product Maintenance

TO STORE

- Keep massager in a safe, dry and cool place.
- Keep away the massager from sharp edges or pointy objects that might cut or puncture the product's fabric surface.
- Do not wrap the power cord around the unit.

TO CLEAN

- Unplug the unit and allow it to cool before cleaning.
- Clean only with a soft, slightly damp sponge.
- Keep the appliance away from water or any liquid.
- Avoid using abrasive cleaners, brushes, gasoline, kerosene, glass/furniture polish or paint thinner to clean the product.

CAUTION

- Do not lean on the dual massage mechanism in the cushion when adjusting your body position to avoid tears on the products cushion surface.
- Do not jam or force any part of your body against the moving massage mechanism.
- Only gentle force should be exerted against the unit in order to eliminate any risk of injury.
- Do not attempt to repair the product, please contact 'OGAWA Service Center' for any servicing required.



Troubleshooting

Symptoms	Solutions
Not operating.	<ul style="list-style-type: none"> • Use the product when electricity is restored. • Reconnect the power cord. • Turn on the power switch.
No heating after pressing the heat switch.	<ul style="list-style-type: none"> • Press the 'shiatsu' switch before turning the 'Heat' switch. • Press the 'Rolling' switch before turning on the 'Heat' switch.
During operation, the controller is working but the massager is not working.	<ul style="list-style-type: none"> • The massager could be overheated after prolonged use. It will automatically cool down to resume its normal condition. Please turn off the power and stop using the massager for 30 to 50 minutes to facilitate heat dissipation of the engine.
Back massage function does not work.	<ul style="list-style-type: none"> • Turn on the power switch. • Reconnect the power cord.
Sudden stop.	<ul style="list-style-type: none"> • Use the product when electricity is restored. • Reconnect the power cord.

Product Specifications

Product Name	MODA sofa
Model number of the product	OS 3008A
Power source	220-240V
Frequency	50~60Hz
Power consumption	72W
Dimension (Length/width/height)	Decline:880*680*1020 (mm)
	Incline: 1350*680*880 (mm)
Weight	33KG

Contact Us



MALAYSIA
Healthy World Lifestyle Sdn Bhd
No. 22 Jalan Anggerik Mokara 31/47
Kota Kemuning, 40460 Shah Alam
Selangor Darul Ehsan, Malaysia
Tel : +603-5121 4286
Fax: +603-5121 4386



HONG KONG, CHINA
OGAWA Health Care International (HK) Ltd
31/F,YHC Tower,1 Sheung Yuet Road
Kowloon Bay
Kowloon
Hong Kong
Tel :+852 3465 6262
Fax:+852 2410 0119



SINGAPORE
OGAWA Health-Care Pte Ltd
27 Tampines Industrial Avenue 5,
T5 @ Tampines
Singapore 528623
Tel : +065-6846 8588
Fax: +065-6846 7677



VIETNAM
OGAWA Vietnam
171 Nguyen Thi Thap Street
Tan Phu Ward
Dist 7
Ho Chi Minh City, Vietnam
Tel : +84 8 3775 3093 / 3775 3094
Fax: +84 8 3775 3095



INDONESIA
PT Healthy World
Lodan Center Block O No 20
Jalan Lodan Raya No 2
Jakarta Utara 14430
Tel : +62 21-6983 1123
Fax: +62 21-6983 1124



PHILIPPINES
O-Healthcare Solution Phil. Inc.
2303, 4th Floor, G&A Building,
Chino Roces Avenue Extension,
Makati City, Philippines
Tel : +632 889 0676 / +632 844 6851
Fax: +632 812 0421

目录

安全说明	19
保修权限	20
主要部件及附件	21
手控器说明	22
部件名称及功能	23
产品的安装	24
产品操作说明	27
性能指示	28
产品保养	29
疑难解答	30
产品规格	30
联系我们	31

安全说明

i. 使用环境

- 请勿在潮湿或灰尘密集的环境下使用本产品，以免导致触电或机器故障
- 请将本产品存放在安全的地方。
- 请勿将此产品暴露于热源或阳光直射下。
- 本产品仅为个人使用，禁止用于商业用途。

ii. 健康注意事项

以下人士，请在使用前先咨询医生的意见：

- 心脏病患者
- 怀孕
- 身体不适者

iii. 以下情况请勿使用本产品

- 当一次使用本产品超过15分钟时。
- 小孩或残病人士在无人监督的情况下。
- 睡前。
- 产品外层破损。
- 液体泼溅到产品上。
- 使用过程中感到不寻常或剧烈疼痛。
- 使用中过程中发觉任何机件故障或不寻常状况。
- 打雷时

iv. 警告

- 没有使用时，请拔下电源插头。
- 请勿使用非OGAWA提供的配件。
- 当电源线或插头损坏时，请勿使用并及时联系OGAWA服务中心进行维修检查。



安全说明

- 请勿将手或任何异物塞入按摩器间隙中。
- 请务必谨慎使用按摩器的导热功能，勿用于对热能反应较为迟钝的皮肤上及血液循环不良的部位。请问让儿童或身心功能障碍者自行使用导热功能。
- 本产品仅为个人使用，禁止用于商业用途。
- 请勿在使用中覆盖本产品，以免引起故障或火灾。
- 请勿挤压或用尖锐物刮破本产品
- 该设备具有加热表面。对热不敏感的人一定要小心使用设备。

v. 注意

- 8岁及大于该年龄的儿童，肢体不健全、感官或者精神上有障碍或缺乏相关知识经验的人必须在被告知相关风险以及正确使用方法，并在有人指导并监督的情况下使用该产品。
- 儿童不能在产品上玩耍。
- 儿童必须在有监管的条件下才能对该产品进行清洁及维护。
- 为确保安全及正确使用，使用前请务必详细参阅本说明书。
- 过度使用可能会导致产品过热或缩短产品寿命，重复使用时，须让产品冷却一段时间后再使用。
- 使用时发出的声响属正常，这是由产品振动而产生的。
- 正在接受药物或医疗治疗者，请在使用前咨询医师。若您感觉不适，请勿使用本产品。
- 如果在低温室中使用，请勿骤然升高温度。建议将温度逐渐升高调整到正常温度后。
- 若将产品存放于低温或高温的环境中，建议您在一小时后才进行使用本产品以达到最佳的按摩体验
- 请勿拆卸本产品。触碰内部机件可能导致故障或触电意外。
- 请勿用潮湿的手安插或拔出电源插头。
- 当电源插座有松动时，请勿使用。
- 如果电源线破损，必须由该产品的制造商、售后服务提供商或者由类似有资质的个人维修，以避免不良后果的产生。
- 该产品有加热表面，对于热不敏感的人必须小心使用。
- 最高机芯承受用户重量是120公斤。





安全说明

 
 
 
- 该产品仅限于与所提供的电源使用。
- 此设备可以让年龄从8岁以上儿童，肢体，感官或心智能力有缺陷，或者缺乏经验知识的人使用，如果他们被监督，或者有经过有关使用本产品安全方式和理解其危害性的指导。
- 如果儿童不受监督，不能进行产品的清洁和用户维护。
- 儿童不得把产品当玩具玩。

保修权限


1. 本保修权限不可转让。
2. 本保修服务仅对在OGAWA购买的产品有效。
3. 当要求保修服务时，请出示购买证明（正本收据）。
4. 所有保修项目，包括但不限于这些健身及适销性的保修项目有效期限需视保修政策而定。
5. 因错误使用、处理不当以及未经授权私自改装和维修产品而导致的损坏，不属于保修范围。
6. 此保修范围不包括不属于产品本身的附件。
7. 此保修范围不适用于租凭、交易、商业、机构或其他非住宅用户。
8. 此保修范围内所涉及的维修服务需经过OGAWA授权，且必须由授权的技术人员维修。
9. 若需更换的维修附件缺货，OGAWA有权采用替代配件进行维修。



主要部件及附件

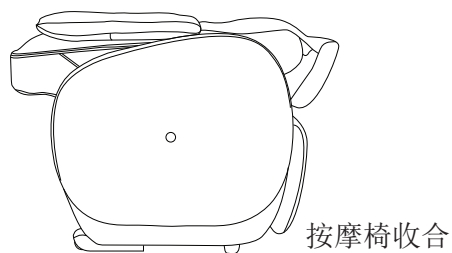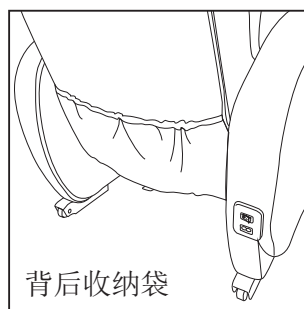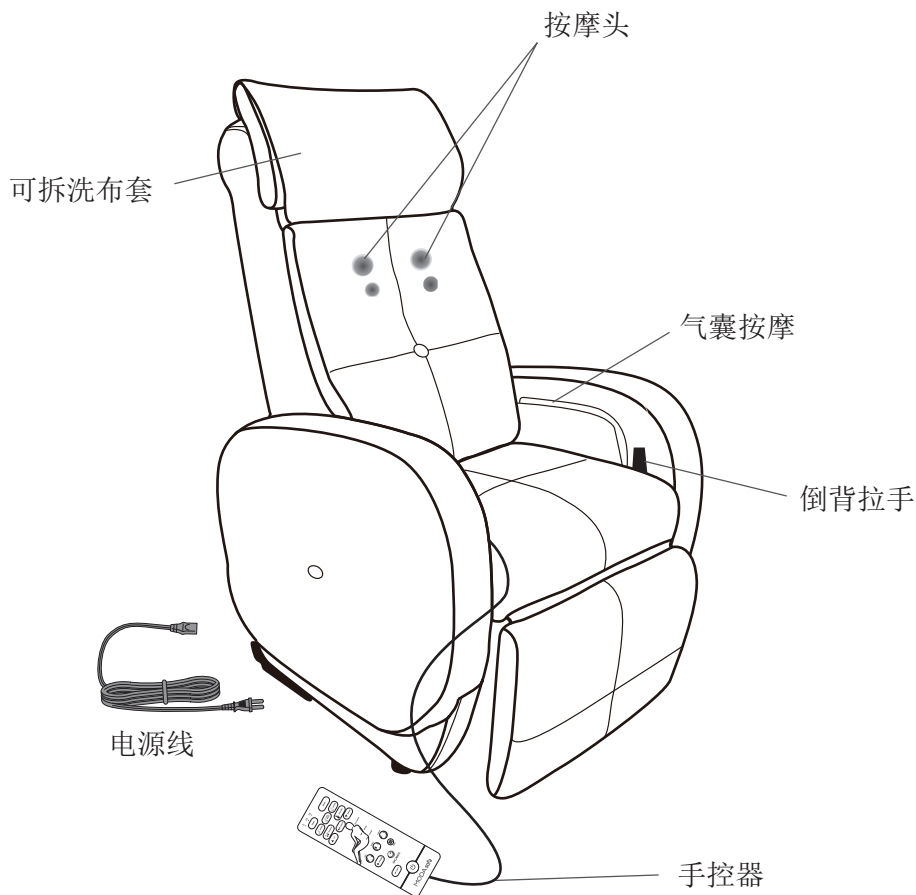

手控器说明

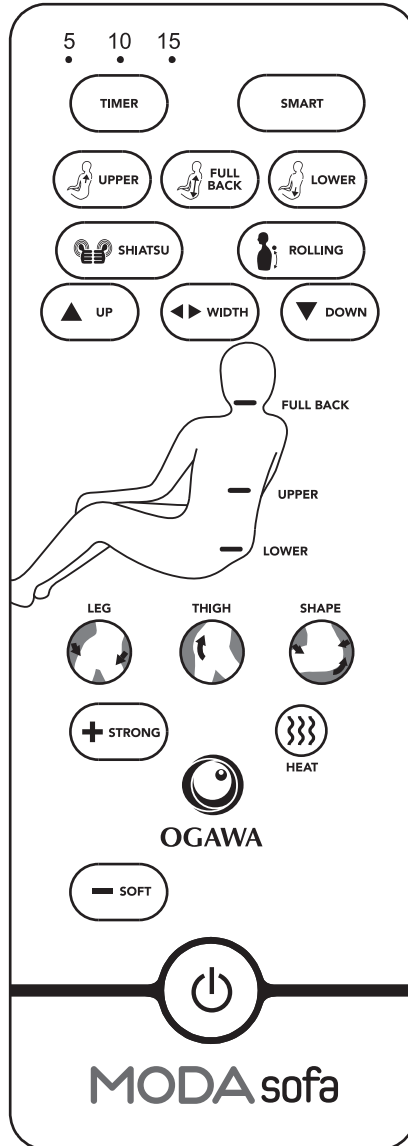 


部件名称与功能

1. 定时键- 用于按摩时间的选择
2. 智能键- 用于背部及座部按摩功能
3. 行走按摩选择区 - 用于背部揉捏/推拿按摩时，全/上/下背行走区域性选择
4. 揉捏键 - 用于背部揉捏按摩功能
5. 推拿键 - 用于背部推拿按摩功能
6. 揉捏宽度调节键- 用于背部揉捏按摩时宽度调节
7. 揉捏定点按摩键 - 用于背部推拿按摩时订单调节
8. 塑腿键- 用于座部腿侧处进行气囊按摩
9. 塑臀键 - 用于座部臀部处进行气囊按摩
10. 塑性键 - 用于座部腿侧/臀部处进行气囊按摩
11. 强度键 - 用于气囊按摩强、弱调节
12. 温热键 - 用于背部按摩温热功能
13. 开关键 - 用于功能的开启及关闭

产品的安装

第一步：将背部向后扳起，竖起背部。请确认背部被完全固定。

 
如图所示（可以听到“咔”的声音）

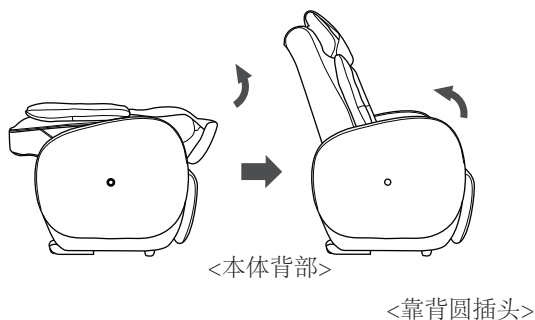

第二步：靠背插头与本体插头的链接


将靠背圆插头与本体圆插头表面的箭头对准，径直对插，并确认插到位。

 注意：若未插到位，会出现按摩头不运转的现象。

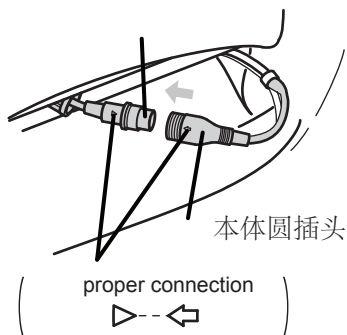

第三步：连接电源线。

 如图所示

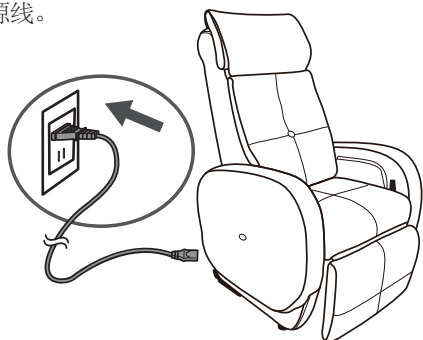


靠背拆卸说明

注意：拆卸前检查背部按摩机芯复位至最底部；将开关电源从插座拔出，方可进行操作。

1. 将靠背圆插头与本体圆插头拔出。

 2. 按下按钮，将背部协放如图所示。

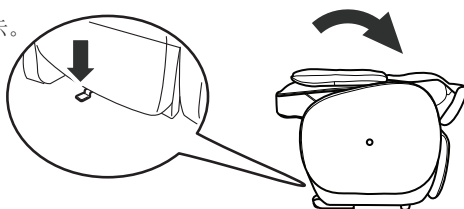



产品操作说明

1. [电源开关]

将本机所配的AC电源线一端插入按摩器的AC插座，然后将电源插头插入电源插座，打开AC插座上的开关，按摩器获得电源，此时如果按摩机芯不在底部，手控器开关键的灯闪烁，并自行复位到底部开关键灯熄灭。按开关键一次，开关键指示灯亮，同时按摩器开始待机并进入15分钟倒计时；15分钟定时到，按摩器所有功能停止工作，所有指示灯灭，机芯复位；按开关键2次，按摩器所有功能停止，如果按摩器机芯在底部，所有指示灯熄灭，如果按摩器机芯不在底部，机芯复位，手控器除开关键闪烁外其他指示灯熄灭，所有按键无作用，按摩机芯回到底部后，开关键灯熄灭。

2. [定时键]

当按摩程序启动时定时功能自动设为15分钟，每按一次定时键，将按5-10-15循环切换，对应的时间等会亮起。

3. [智能模式键]

按下智能模式键，全背、揉捏、温热、塑形模式、充气弱档指示灯亮，并开启温热、揉捏与行走、塑形充气模式弱档、一直持续循环直到15分钟停止行走揉捏、温热、充气功能。

在智能模式下，可按温热键开关温热，按充气强度键改变充气强度，按其他功能键（除宽度调节键），将关闭智能模式，进入相应其他功能；再按一次智能模式键，将会关闭智能模式并停止行走揉捏、温热、充气功能。



背部按摩模式的使用

1. [揉捏键]

按揉捏键，切换到揉捏按摩功能（对应的按键灯亮起）。

再按此键，将停止揉捏，对应的按键灯熄灭。

2. [上/下]

当按摩头揉捏工作时，上/下定点键才会作用。

长按上键时，机芯向上行走，直到放开按键或机芯碰到上行程开关时上才会停止行走。

长按下键时，机芯向下行走，直到放开按键或机芯碰到下行程开关时下才会停止行走。

3. [推拿键]

按推拿键，切换到推拿按摩功能，对应的按键灯亮起，预设为全程行走。

再按一下此键，关闭推拿，对应的按键灯熄灭。

4. [宽度键]

只有在推拿状态下，宽度键才会作用。

在进行行走功能时，每按一次，可以旋转按摩头定角度来调整按摩头的宽度。





产品操作说明

5. [全背],[上背],[下背]

全背、上背、下背键三个键为选择机芯行走的距离或范围，如果3个键未按时，就预设为全背键的全程行走功能，如果揉捏、推拿键未按时，预设为揉捏。

按全背键，机芯行走范围设为全程，同时对应的按键灯亮起；全背、上背、下背键为选择机芯行走的距离或范围，如果3个键未按时，就预设为全背键的全程行走功能，如果揉捏、推拿键未按时，预设为揉捏。按上背键，机芯行走范围设为上半部位，对应的按键灯亮起；按下背键，机芯行走范围设为下半部位，同时对应的按键灯亮起。

6. [温热键]

只有揉捏、推拿、智能开启后，温热键才会作用。

当按下此键时，机芯开启温热，对应的指示灯亮起；当再按下此键时，机芯关闭温热，对应的按键灯熄灭。

气囊模式的应用

1. 按下塑腿键

指示灯亮起，主要针对大腿以及骨盆周围进行气囊按摩。

2. 按下塑臀键

指示灯亮起，主要是座部气囊充气，进行臀部按摩。

3. 按下塑性键

指示灯亮起，骨盆周围气囊与座部气囊交替充气，对骨盆、大腿及臀部进行交替按摩。

4. 按下强弱键

用来设定气囊强弱的选择。预设为弱档。

按一下转换为强档，按一下转换为弱档，当充气键关闭时，指示灯灭。

在不关掉开关键的情况下，同时保持强弱档记忆的功能。

注意:

-如感觉按摩力度过大，可将背部靠垫盖住使用。

-初次使用，请选择弱档进行按摩。

 
-使用完毕后，按下电源键，指示灯闪烁，机芯复位，动作停止，电源切断。

请将插头从插座中拔出。



5. 靠背使用说明

靠背可依个人喜好调节角度。

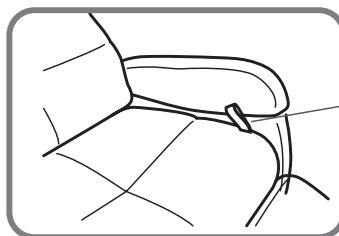

倒背拉手

A. 倒背

在倒背前，请确保按摩椅的背后以及前端无任何阻碍物。

拉住拉手，背部向后靠。

B. 复位：

拉住拉手，使椅子复位为原始状态。

6. 轻便移动轮

简易滑轮设计，以后倾仰角度技能轻易移动。

注意

 
--注意使用完毕后

按下电源开关键，指示灯闪烁，机芯复位，动作停止，电源切断。请将插头从插座中拔出。

--产品设定机芯按摩不在工作的时候处下最低点。

如果在机芯还没有回到底部时就切断电源，那么下次开机的时候，机芯会自动复位到最低点。

--为安全起见，产品有15分钟的定时功能。15分钟后自动关机。

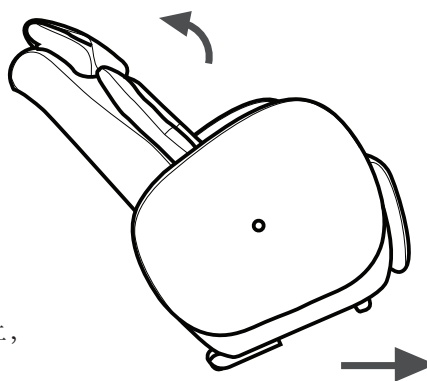



性能指示

1. 指压及搓揉按摩程序能让背部达到放松。
2. 定点按摩功能提供了特定位置的指压按摩。
3. 导热功能增加指压及搓揉的按摩效果，并促进血液循环。
4. 遥控器易操作。
5. 使用15分钟后，产品自动停止操作。
6. LED 显示灯。

使用效果

1. 缓解肌肉疼痛
2. 缓解精神紧张并降低压力
3. 促进血液循环

在不使用时，要先按下[开关]键，请勿立即切断电源，需待滚轮回复到底部及指示灯熄灭后才切断电源。

使用完毕之后，请按下'开/关'键，产品将停止操作，按摩滚轮将自动复位。复位完成后，可以安全拔出电源线。



产品保养

贮藏

- 请将置放于安全、干爽通风的地方。
- 远离尖状物以免刮破按摩椅表面。
- 请勿将电线缠绕按摩椅。

清洁

- 清洗时只须用柔软微湿的海绵抹拭即可。
- 清洗前切记关掉电源并待按摩椅冷却。
- 将按摩椅远离水或其他液体。
- 切勿用清洁剂、刷子、汽油、煤油、玻璃清洁剂或者稀释剂清洗按摩椅。

提示

- 为了避免加热按摩垫外套破损，在调整按摩位置时，请不要依靠在按摩垫上。
- 请勿用身体阻挡在移动中的按摩机制。
- 使用过程中，避施力过度于按摩椅以防受伤。
- 请勿自行维修本产品，如需维修服务，请与OGAWA售后服务中心联系。

疑难解答

异常情况	解决办法
按摩器无法工作。	<ul style="list-style-type: none">● 插电● 适配器插好● 电源开关打开
按[导热]、[导热]功能无法启动。	<ul style="list-style-type: none">● [导热] 键前先按搓揉功能键● 按[导热] 键前先按指压功能键
使用过程中，控制器可以操作，但按摩器无法操作	<ul style="list-style-type: none">● 长时间操作后，按摩器引擎的温度若过高，按摩器将自动处于温度保护状态。请关闭电源并暂停使用30~50分钟以上让引擎内部散热。
背部按摩功能无法操作。	<ul style="list-style-type: none">● 电源开关打开● 电源线插好
突然停止操作。	<ul style="list-style-type: none">● 通电● 电线接好

产品规格

产品名称	MODA sofa
产品型号	OS 3008A
额定电压	220-240 伏特
额定频率	50~60 赫
额定功率	72 瓦特
尺寸 (长*宽*高)	未放躺: 880*680*1020
	放躺: 1350*680*880
重量	33KG



联络我们



马来西亚
Healthy World Lifestyle Sdn Bhd
No. 22 Jalan Anggerik Mokara 31/47
Kota Kemuning, 40460 Shah Alam
Selangor Darul Ehsan, Malaysia
Tel: +603-5121 4286
Fax: +603-5121 4386



中国香港
OGAWA Health Care International |
31/F,YHC Tower,1 Sheung Yuet Road
Kowloon Bay
Kowloon
Hong Kong
Tel: +852 3465 6262
Fax: +852 2410 0119



新加坡
OGAWA Health-Care Pte Ltd
27 Tampines Industrial Avenue 5,
T5 @ Tampines
Singapore 528623
Tel: +065-6846 8588
Fax: +065-6846 7677



越南
OGAWA Vietnam
171 Nguyen Thi Thap Street
Tan Phu Ward
Dist 7
Ho Chi Minh City, Vietnam
Tel: +84 8 3775 3093/ 3775 3094
Fax: +84 8 3775 3095



印尼
PT Healthy World
Lodan Center Block O No 20
Jalan Lodan Raya No 2
Jakarta Utara 14430
Tel: +62 21-6983 1123
Fax: +62 21-6983 1124



菲律宾
O-Healthcare Solution Phil. Inc.
2303, 4th Floor, G&A Building,
Chino Roces Avenue Extension,
Makati City, Philippines
Tel : +632 889 0676 / +632 844 68
Fax: +632 812 0421



Ogawa is grateful
to have received
these awards:



PUTRA
BRAND AWARDS 2010
SILVER

Ogawa Wellness Hubs : Malaysia . Singapore . Vietnam . Philippines . Indonesia . Myanmar . India . China
Hong Kong . Taiwan . Turkey . Pakistan . Saudi Arabia . Mauritius . Russia . France
Canada

