 




iModa

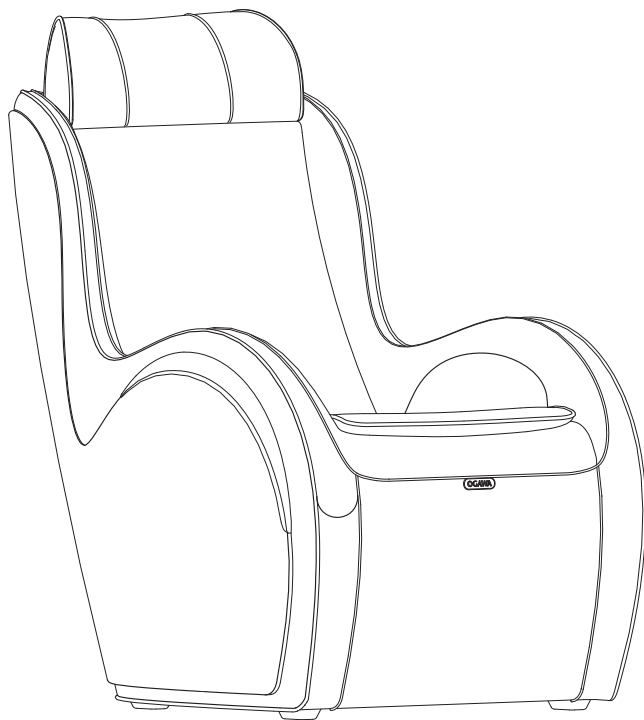

User Manual
OS 3108 使用手册



www.ogawaworld.net

CONTENTS

Safety Instructions	03
Warranty Claims	06
Moving the Chair	07
Product Parts and Accessories	08
Controller Diagram	09
Product Features	14
Product Specifications	15
Product Maintenance	15
Troubleshooting	16
Contact us	18

Safety Instructions

i. Usage environment

- Do not use the appliance in a wet condition or dusty environment as this may result in malfunction or electric shock.
- Do not use the appliance in the bathroom.
- Do not place or store the appliance where it can fall or be pulled into a tub or sink.
- Place the appliance in a safe location.
- Do not expose the appliance to a heater or direct sunlight.

ii. Unsuitable user

If you are experiencing health complications or conditions as stated below, please consult your doctor before use:

- Suffering from heart disease
- Pregnancy
- Any health concerns

iii. When the product should not be used

- If the use exceeds 15 minutes at one time.
- This unit should not be used by children or invalids without adult supervision.
- Do not use this product before sleep.
- If the fabric cover is torn.
- If liquid is spilled onto the appliance.
- If the user feels abnormal or severe pain during the massage.
- If the user detects any malfunction or other abnormal conditions during operation.

Safety Instructions

iv. Caution and warning

- Unplug the appliance from the outlet when not in use.
- Do not use any attachments that are not recommended by OGAWA.
- Do not operate this appliance if it has a damaged cord or plug. Please return the unit to OGAWA Service Center for examination and repairs.
- Do not insert your hands or any object into the massager's vents and gaps.
- Use the heated surfaces carefully. It should not be used by children or incapacitated persons. May be dangerous.
- Do not lift or carry this appliance by the power cord or any cord.
- This product is only intended for home use only.
Commercial use is prohibited.
- Do not cover the appliance during operation.
- Do not crush appliance and avoid it from sharp folds.

Safety Instructions


v. Note

- Please read these safety notes thoroughly beforehand to ensure the safety and correct use of the appliance.
- The appliance is not intended for use by persons suffering from physical, sensory or mental disabilities, or persons who lack experience and knowledge about the product. They need to be supervised and instructed by a person responsible for their safety.
- Extensive usage could lead to excessive heating and shorter product lifespan. Should this occur, discontinue usage and allow the unit to cool before operating.
- Some levels of noise during usage are normal due to vibration.
- Consult the doctor before use if the person using it is under medication or with a medical condition. Please do not use the product if you are not feeling well.
- Do not increase the room temperature abruptly if the appliance is used in the cold room. It is advisable that the temperature should increase gradually to a normal level.
- If the appliance is stored in a cold place or in a warm environment, please wait for one hour before use to reach the optimum massaging level.
- Do not remove the cover of the appliance. Touching the internal components may result in malfunction or electric shock.
- Do not connect or disconnect the power cord from the electrical outlet with wet hands.
- Do not use the appliance if the electrical outlet is loose.

Warranty Claims

1. Warranty is not transferable.
2. This warranty is effective only if the product is purchased from OGAWA.
3. Proof of purchase (original receipt) is required for all warranty repairs.
4. All implied warranties, including but not limited to these implied warranties of fitness and merchantability, are limited to the duration stated in the warranty policy.
5. Damage due to misuse, improper treatment and unauthorized modification and repair are not covered by this warranty.
6. Warranty does not cover accessories and attachments which do not belong to the massage unit.
7. Warranty is not effective to rental, business, commercial, institutional or other non-residential users.
8. All services covered by this warranty must be approved by OGAWA and repaired by authorized technicians only.
9. If replacement parts for defective materials are not available, OGAWA reserves the right to make substitution in lieu of repair or replacement.


Moving the Chair

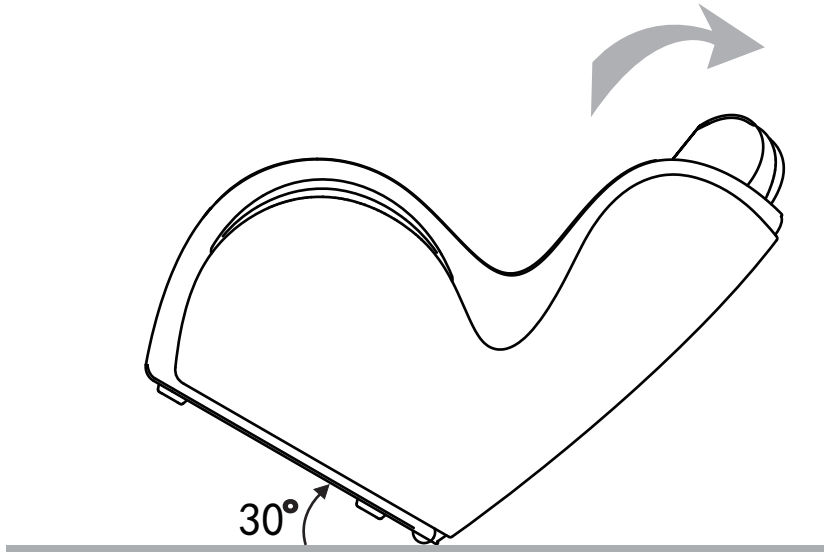


Caution:

Avoid moving the massage chair when there is someone seated on it.
Placing a mat underneath the massage chair is advisable, as the moving process might scratch the floor surface.

Product Parts and Accessories

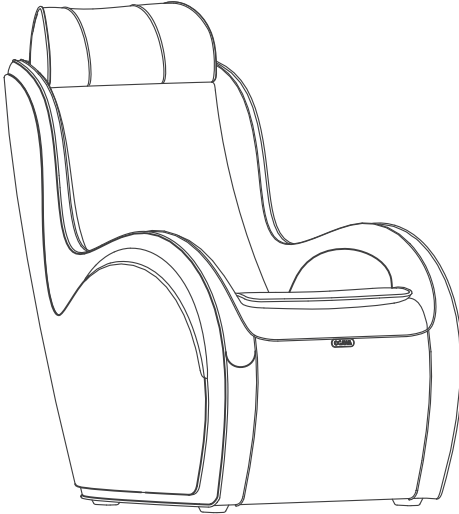


Body of the Massage Chair

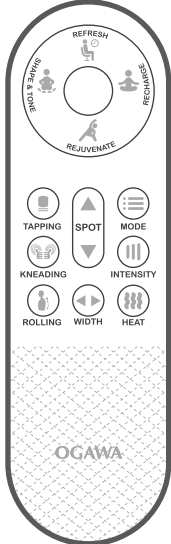

Controller

Controller Diagram

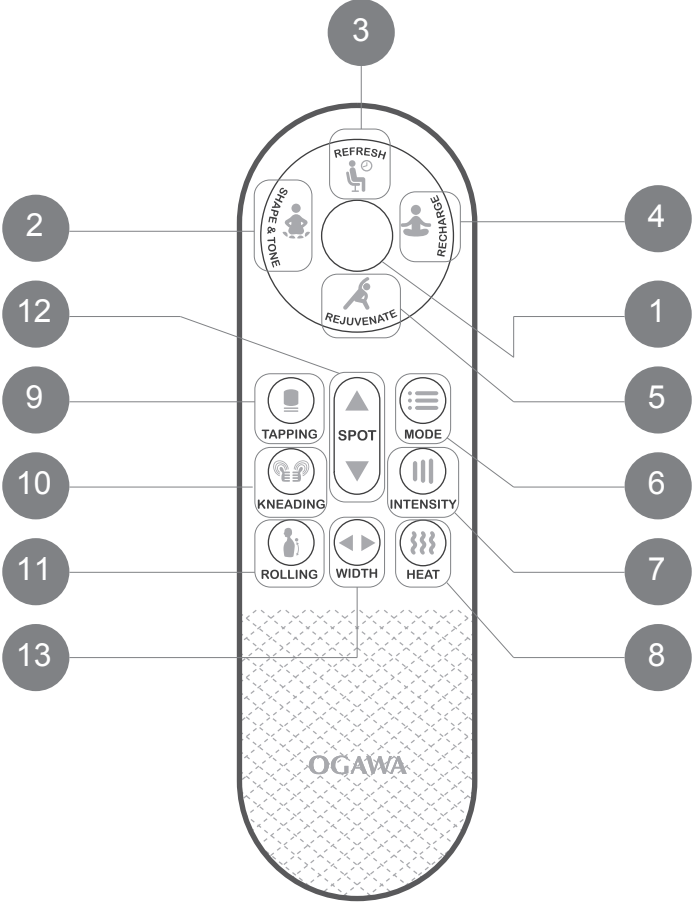

Control Buttons for the Massage Chair

1. ON / OFF

Place three AAA batteries into the controller with the positive and negative poles correctly connected. Insert the plug of the massage chair into an appropriate outlet to power the chair. If massage rollers are not at the waist, then they will return to their original position (during this process, the ON / OFF indicator is lit, but no buttons work), and the indicator will be unlit later. Long press (more than 2 seconds) the ON / OFF button to activate the chair, the indicator will be lit, then a desired massage function can be selected. After the chair is activated, the timer is preset at 15 minutes (The CHERISH Auto mode is set at 20 minutes). After the chair is activated, short press (less than 2 seconds) the ON / OFF button, the controller will be set to the power-saving sleep mode. Short press the button again, the present massage parameters will be displayed on the controller. Long press the ON / OFF button after the chair is activated or the preset program ends, all functions will stop and the massage rollers will return to their original position.

2. SHAPE & TONE

When the chair is operating, short press this button to start the SHAPE & TONE AUTO mode, and the indicator will be lit. Press it again to close the mode.

3. REFRESH

When the chair is operating, short press this button to start the REFRESH AUTO mode, and the indicator will be lit. Press it again to close the mode.

Note: this program is preset at 20 minutes.

4. REJUVENATE

When the chair is operating, short press this button to start the REJUVENATE AUTO mode, and the indicator will be lit. Press it again to close the mode.

5. RECHARGE

When the chair is operating, short press this button to start the RECHARGE AUTO mode, and the indicator will be lit. Press it again to close the mode.

6. MODE

When the chair is operating and the tapping function is activated, short press this button to switch between three tapping modes. The indicator light turns to green for mode 1, blue for mode 2, and red for mode 3.

7. INTENSITY

After the intensity indicator is lit, short press the INTENSITY button to switch among 3 modes in cycle. The backlight of the INTENSITY button displays 3 colours based on the present intensity levels: green for low intensity, blue for medium intensity, and red for high intensity.

8. HEAT

When the chair is operating, press this button to start the HEAT function independently, and the HEAT indicator will be lit. Short press the button again to stop the function, and the indicator will be unlit.

9. TAPPING

When the chair is operating, short press this button to activate the tapping function and start the moving massaging. The tapping mode is preset at mode 1 in green light, and the intensity is preset at medium level in blue light. Press the WIDTH ADJUSTMENT button to adjust the width of tapping position. Press this button again to close the mode. If the kneading function is activated before the tapping function, then both functions will work together. If the present tapping function is in the Spot massage mode (when the mode light flashes), press this button, the chair will resume its moving tapping mode and the indicator will be lit.

10. KNEADING

When the chair is operating, short press the KNEADING button, the indicator will be lit, and the kneading function and the moving massaging will start. The intensity is preset at medium level in blue light. Press the button again to close the mode. If the tapping function is activated before the kneading function, then both functions will work together. If the present function is set at Spot massage mode (when the Spot massage light flashes), press this button, the chair will resume a moving kneading mode and the mode light will be lit.

11. ROLLING

When the chair is operating, short press the ROLLING button, the indicator will be lit, and the rolling function and the moving massage will start. If there exist any other activated massage modes, such modes will be closed before the rolling mode starts. Short press the button again to close the rolling function, and the indicator will be unlit. Width adjustment is also applicable for the rolling mode.

12. SPOT or Localised massage

Under the tapping or kneading function after the chair activation, press the SPOT button (up and down arrows) to start the Spot massage function, and the mode light will flash. Press and hold the up or down arrow to move the massage rollers upward or downward. Release the button to stop the roller adjustment and start the Spot massage function. Meanwhile, the corresponding upward or downward indicator light will be turned off.

13. WIDTH Adjustment

When the rolling or tapping mode is activated, press the WIDTH ADJUSTMENT button to adjust the rolling or tapping width. The indicator will be lit in the process of the adjustment and unlit after the adjustment.

Caution:

1. After the chair starts operating, the timer is preset at 15 minutes (REFRESH mode is set at 20 minutes), and the time interval between different modes will not be cleared. When the timer reaches zero, the chair will shut down (For the REFRESH mode, the chair will shut down if it is switched to other modes after 15 minutes). The timer will give three beep sounds when there are only 30 seconds left, and when the timer reaches zero, the chair will beep and shut down.

2. Sleep Mode of the Controller

After the chair is activated, when the controller is first used to activate the massage mode, the controller will be in the sleep mode after working 60 seconds, and then no buttons can control the chair. In the sleep mode, press the ON/OFF button to re-enable the controller and display its present massage parameters. 20 seconds later, the controller will go to the sleep mode once again. If the controller shows a low battery (under 3V), the ON/OFF, CHERISH and REVITAL indicators will flash for 5 seconds before the controller goes to the sleep mode. If the signal between the controller and the chair fails, the ON/OFF, FITNESS and RELIEF indicators will flash for 5 seconds before the controller goes into the sleep mode.

3. Matching Instructions for the Controller and the Chair

Each massage chair is matched with a specific controller. If the controller fails to connect with the chair or needs a replacement, please refer to following steps to match the controller with the massage chair.

Step 1: Connect the power cord of the chair, turn off the switch in the back of the chair (when the massage chair is power off), press and hold the ON/OFF button for 5 seconds;

Step 2: Release the ON/OFF button when the HEAT indicator flashes, press and hold the HEAT button (within 5 seconds). Then turn on the switch in the back of the chair to power the chair (within 3 seconds);

Step 3: When there are 3 continuous and short beep sounds, it indicates that the matching is completed successfully.

Product Features

- With a compact size and fashionable appearance, the massage chair is an excellent partner for a healthy life.
- Its “L” shape rail is designed to make your back, waist and hip more comfortable, giving you a better massage experience.
- Besides the traditional kneading massage, a vibrating tapping function is added to create a more professional feeling of massage by human hands.
- 4 automatic massage modes are optional for different requirements to improve your physical conditions.
- Its precise program focuses on waist and hip massage by strengthening hip muscles and shaping beautiful curves of the hip.
- The wireless controller with precise performance sets your free and enables a smart home and smart life.
- With excellent and thoughtful design in details, it is an ideal choice for a delicate life and a high-quality home.

Product Specifications

Product Name	i Moda
Product Model	OS 3108
Rated Voltage	100 - 240V~
Rated Power	96W
Dimension	925mm x 625mm x 960mm
Timer	15 minutes
Battery of the Controller	Three AAA batteries

Note: The REFRESH AUTO program is set at 20 minutes.

Product Maintenance

- Do not use water or other cleaning detergents to wash the massage chair.
- Do not stack, knock with hard objects, pull harshly or scratch the surface of the massage chair.
- Press the buttons gently during operation; avoid pressing with sharp objects.
- Always pull out the power supply plug after use or before cleaning.
- Please keep the controller away from water or liquid.

Troubleshooting

If you are caught in any problems when using this product, please refer to the following tips or possible solutions. If the solutions are not applicable, please send the product to our service centre or contact our authorized technical staff for inspection and repair.

Possible situations	Possible reason	Solutions
The chair won't operate	<ol style="list-style-type: none"> 1. No power supply 2. The ON/OFF button is off 	<ol style="list-style-type: none"> 1. Check whether the power is connected or connected well 2. Check whether the power switch at the right bottom of the chair is turned on to "1"
The chair stops functioning suddenly or won't operate as usual	<ol style="list-style-type: none"> 1. Power off 2. Machine failure 	<ol style="list-style-type: none"> 1. Check whether the power plug is well connected 2. Contact the service centre for help
The controller does not work after the ON / OFF button is pressed	<ol style="list-style-type: none"> 1. Dead batteries 2. Batteries are placed in the wrong direction 	<ol style="list-style-type: none"> 1. Change batteries 2. Insert the batteries correctly
The ON/OFF indicator of the controller keeps flashing	The chair returns to its original position	Keep the chair in regular settings
The SHAPE & TONE, ON/OFF or RECHARGE indicators are flashing	<ol style="list-style-type: none"> 1. The communication is cut without matching 2. The chair hasn't been turned on 	<ol style="list-style-type: none"> 1. Refer to the matching instructions for the controller and the chair to re-match them 2. Switch on the power, and press the ON / OFF button to start the chair

The light of REFRESH button, ON/OFF button or REJUVENATE button flashes	Low battery	Change the batteries
The chair has seized up with unusual sounds	<ol style="list-style-type: none"> 1. The chair is overloaded 2. Machine failure 	<ol style="list-style-type: none"> 1. Adjust the sitting position and restart the chair 2. Contact the service centre for assistance

Contact us



MALAYSIA
Healthy World Lifestyle Sdn Bhd
No. 22 Jalan Anggerik Mokara 31/47
Kota Kemuning, 40460 Shah Alam
Selangor Darul Ehsan, Malaysia
Tel: +603-5121 4286
Fax: +603-5121 4386



HONG KONG, CHINA
OGAWA Health Care International (HK) Ltd
31/F, YHC tower, 1 Sheung Yuet Road
Kowloon Bay
Kowloon
Hong Kong
Tel: +852 3465 6262
Fax: +852 2410 0119



SINGAPORE
OGAWA Health-Care Pte Ltd
27 Tampines Industrial Avenue 5,
T5 @ Tampines
Singapore 528623
Tel: +065-6846 8588
Fax: +065-6846 7677



VIETNAM
OGAWA Vietnam Co Ltd
2nd floor, Petroland Tower,
12 Tan Trao, Tan Phu ward
District 7
Ho Chi Minh
Tel: +84 8 3775 3093/3775 3094
Fax: +84 8 3775 3095



INDONESIA
Pt Healthy World
Lodan Center Block O No 20
Jalan Lodan Raya No 2
Jakarta Utara 14430
Tel: +62 21-6983 1123
Fax: +62 21-6983 1124



PHILIPPINES
O-Healthcare Solution Phil. Inc.
2303, 4th Floor, G&A Building,
Chino Roces Avenue Extension,
Makati City, Philippines
Tel: +632 889 0676 / +632 844 6851
Fax: +632 812 0421

目录

安全说明	20
保修权限	23
产品移动说明	24
产品零件及配件	25
遥控器说明	26
产品特点	31
产品规格	31
产品保养	31
故障排除	32
联系我们	33

安全说明

i. 使用环境

- 请勿在潮湿或灰尘密集的环境下使用本产品，以免导致触电或机器故障。
- 请勿在浴室中使用本产品。
- 请勿将此产品放在浴缸或水槽旁，以免脱落。
- 请将本产品存放在安全的地方。
- 请勿将此产品暴露于热源或阳光直射下。

ii. 不适宜人群

以下人士，请在使用前先咨询医生的意见：

- 心脏病患者
- 孕妇
- 身体不适者

iii. 以下情况请勿使用本产品

- 当一次使用本产品超过15分钟时。
- 小孩或残病人士在无人监督的情况下。
- 睡前。
- 产品外层破损。
- 液体泼溅到产品上。
- 使用过程中感到不寻常或剧烈疼痛。
- 使用中过程中发觉任何机件故障或不寻常状况。

安全说明

iv. 警告

- 没有使用时，请拔下电源插头。
- 请勿使用非 OGAWA 提供的配件。
- 当电源线或插头损坏时，请勿使用并及时联系 OGAWA 服务中心进行维修检查。
- 请勿将手或任何异物塞入按摩器间隙中。
- 请务必谨慎使用按摩器的导热功能，勿用于对热能反应较为迟钝的皮肤上及血液循环不良的部位。请问让儿童或身心功能障碍者自行使用导热功能。
- 请勿扯动电源线来移动本产品。
- 本产品仅为个人使用，禁止用于商业用途。
- 请勿在使用中覆盖本产品，以免引起故障或火灾。
- 请勿挤压或用尖锐物刮破本产品。

安全说明

 
v. 注意

- 为确保安全及正确使用，使用前请务必详细参阅本说明书。
- 若儿童、身心功能或智能障碍者使用本产品，必须有人在旁指导且能确保其安全。
- 过度使用可能会导致产品过热或缩短产品寿命，重复使用时，须让产品冷却一段时间后再使用。
- 使用时发出的声响属正常，这是由产品振动而产生的。
- 正在接受药物或医疗治疗者，请在使用前咨询医师。若您感觉不适，请勿使用本产品。
- 如果在低温室中使用，请勿骤然升高温度。建议将温度逐渐升高调整到正常温度后。
- 若将产品存放于低温或高温的环境中，建议您在一小时后才进行使用本产品以达到最佳的按摩体验。
- 请勿拆卸本产品。触碰内部机件可能导致故障或触电意外。
- 请勿用潮湿的手安插或拔出电源插头。
- 当电源插座有松动时，请勿使用。

保修权限

1. 本保修权限不可转让。
2. 本保修服务仅对在 OGAWA 购买的产品有效。
3. 当要求保修服务时，请出示购买证明（正本收据）。
4. 所有保修项目，包括但不限于这些健身及适销性的保修项目有效期限需视保修政策而定。
5. 因错误使用、处理不当以及未经授权私自改装和维修产品而导致的损坏，不属于保修范围。
6. 此保修范围不包括不属于产品本身的附件。
7. 此保修范围不适用于租赁、交易、商业、机构或其他非住宅用户。
8. 此保修范围内所涉及的维修服务需经过 OGAWA 授权，且必须由授权的技术人员维修。
9. 若需更换的维修附件缺货，OGAWA 有权采用替代配件进行维修。

产品移动说明

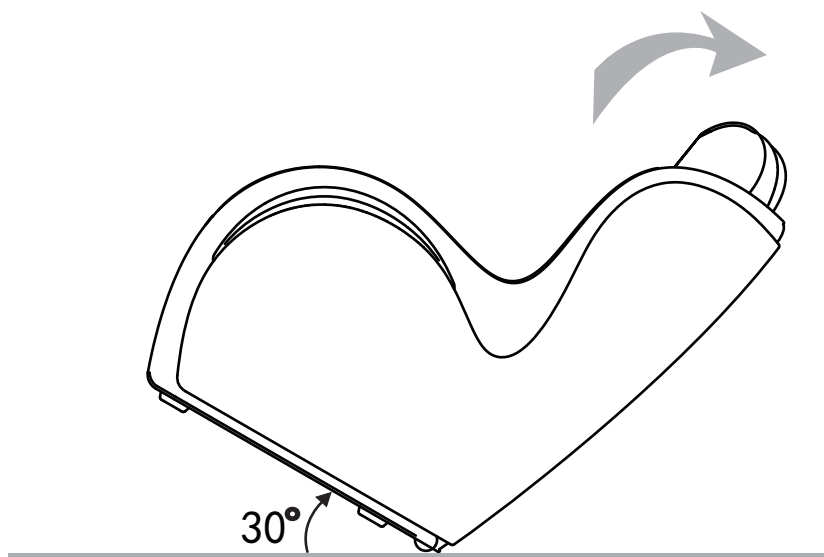


注意：


当有人坐在按摩沙发上时，请不要移动椅子。

移动按摩沙发时可能损坏地板，建议在本产品下铺上垫子等。

 产品零件及配件

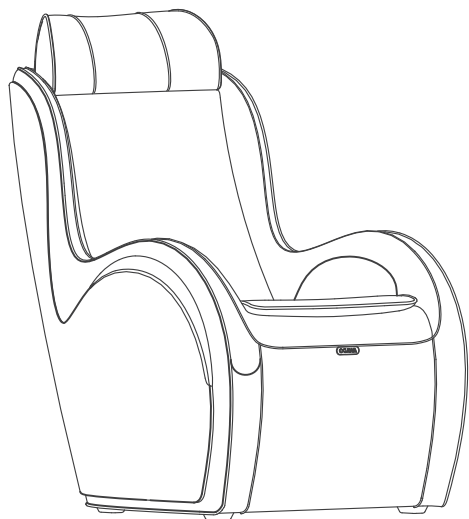


按摩沙发主体

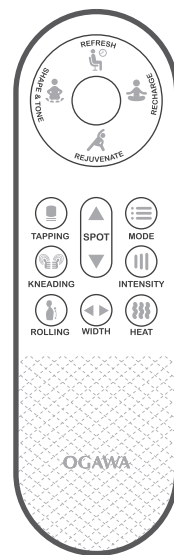 

遥控器

 遥控器说明

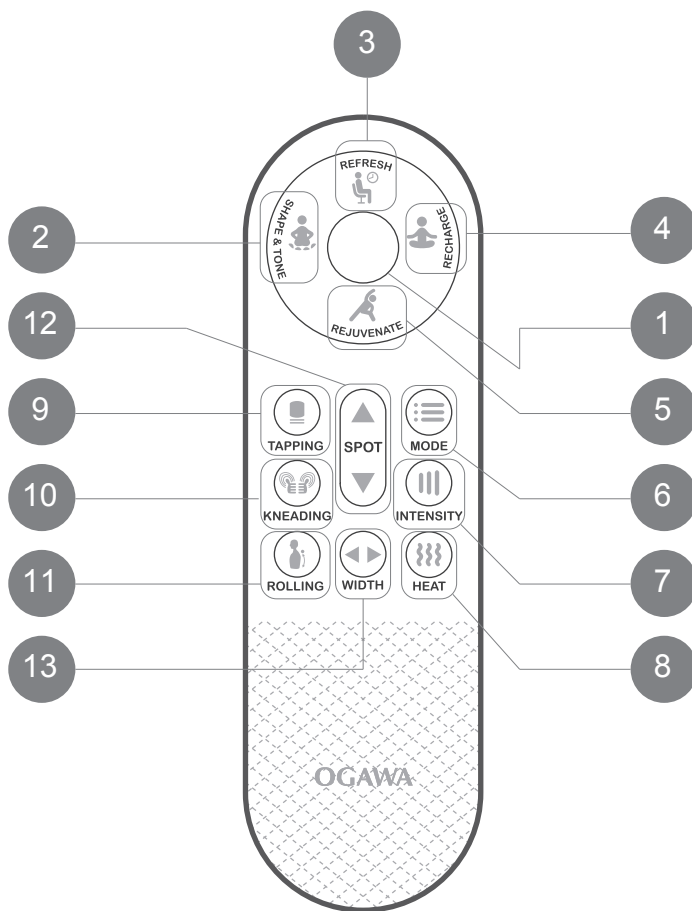

按摩沙发控制键

1. 开关键

将遥控器内按正负极指示正确装入三节AAA电池, 沙发主体的电源插头插入市电后, 按摩沙发主体获得电源, 此时如果按摩机芯不在腰部, 机芯将自行复位(复位过程开关键指示灯闪亮, 所有按键不响应), 机芯复位完成, 开关键指示灯灭。长按(大于2秒)开关键开机, 指示灯亮, 此时可选择所需的功能, 开机后默认工作时间为15分钟(久坐焕活自动模式工作时间为20分钟), 开机后短按(小于2秒)开关键, 遥控器进入省电休眠模式, 再次短按开关键, 遥控器显示当前按摩参数, 开机后长按开关键或程序默认工作时间到则关机, 所有功能停止工作, 按摩机芯复位。

2. 美臀塑形键

在开机状态下, 短按该键开启美臀塑形自动模式, 并且相应的指示灯亮, 再按一下该键则关闭此自动模式。

3. 久坐焕活键

在开机状态下, 短按该键开启久坐焕活自动模式, 并且相应的指示灯亮, 再按一下该键则关闭此自动模式。

注: 此程序定时为20分钟。

4. 元气复苏键

在开机状态下, 短按该键开启元气复苏自动模式, 并且相应的指示灯亮, 再按一下该键则关闭此自动模式。

5. 开背释压键

在开机状态下, 短按该键开背释压自动模式, 并且相应的指示灯亮, 再按一下该键则关闭此自动模式。



6. 模式键

开机状态下，当有开启捶击功能时，短按该键，捶击模式在三个模式间切换。模式1亮绿灯，模式2亮蓝灯，模式3亮红灯。

7. 强度键

强度键指示灯亮起时，短按强度键则可在3个强度间循环切换。强度键按当前模式强度分颜色显示，弱档显示绿色，中档显示蓝色，强档显示红色。

8. 加热键

开机状态下，可独立开启，加热键指示灯亮。再次短按该键，加热功能关闭，加热键指示灭。

9. 捶击键

开机状态下，短按该键，则开启捶击功能，并全程行走。捶击模式默认为模式1，模式键显示绿色，强度默认为中档，强度键显示蓝色，此时可按宽窄调节键，进行捶击位置宽窄调节。若再次按该键则关闭此模式。若开启捶击功能之前有揉捏模式，则揉捏，捶击两种模式一起工作。若当前为定点捶击模式（定点模式对应模式灯闪烁），按此键则恢复全程行走捶击模式，对应功能模式灯常亮。

10. 揉捏键

在开机状态下，短按揉捏键，则该指示灯亮，揉捏功能开启并全程行走，强度默认为中档，强度键显示蓝色。若再次按该键则关闭此模式。若开启揉捏功能之前有捶击模式，则揉捏，捶击两种模式一起工作。若当前为定点揉捏模式（定点模式对应模式灯闪烁），按此键则恢复全程行走揉捏模式，对应功能模式灯常亮。



11. 推拿键

在开机状态下，短按推拿键，则该指示灯亮，推拿功能开启并全程行走。若之前有其他按摩模式，则关闭之前模式，进入推拿模式。再次短按推拿键，则关闭推拿功能，推拿指示灯灭。推拿模式下，可进行宽窄调节。

12. 位置调节键

开机后，开启捶击或揉捏状态下，按位置调节键（上下箭头位置），则进入对应模式定点按摩功能，同时对应模式指示灯闪烁。按住上下箭头位置时，按摩机芯向上或向下行走进行按摩位置调节。按键松开后，按摩机芯停止行走进行定点按摩，对应向上、向下指示灯灭。

13. 宽窄调节键

推拿模式或单独捶击模式开启时，可按宽窄调节键进行推拿或捶击宽窄调节。宽窄调节时，指示灯亮，调节完毕，指示灯灭。

注：

1. 开机后，时间默认为15分钟(久坐焕活模式工作时间为20分钟)，各模式间切换定时时间不清零，当定时时间计满后则进行关机（久坐焕活模式工作超过15分钟后切换到其他模式时由于定时时间计满15分则直接关机）；当计时剩下最后30秒时会进行三声“叮咚”声提示，计时满后会进行关机声提示。

2. 遥控器休眠

开机后遥控器第一次开机开启模式工作时，工作60秒后进入休眠状态，进入休眠状态后整个遥控器都不显示，按所有按键主机都不会响应。遥控器休眠后按开关键可重新唤醒并显示当前的按摩参数，后续唤醒遥控器显示20秒后自动再进入休眠模式。当遥控器电池低电压时（小于3V），遥控器开关键/久坐焕活键/元气复苏键三个指示灯闪烁5秒然后进入休眠。当手控器与按摩椅通信断掉时，遥控器开关键/美臀塑形键/开背释压键三个指示灯闪烁5秒然后进入休眠。

3. 遥控器与按摩沙发主机配对操作说明

按摩沙发与遥控器为一对一配对，若遥控器与按摩沙发主机通信中断或更换遥控器时，请参考下列步骤使遥控器与按摩沙发主机配对。

步骤一：连接按摩沙发主机电源线，关闭按摩沙发主机后面的开关（此时按摩沙发处于断电状态），按下遥控器开关键5秒；

步骤二：按下开关键5秒后，当看到加热键指示灯闪烁时，松开开关键，然后（5秒内）按住加热键，此时打开按摩沙发主机后面的开关给按摩沙发上电（3秒内给按摩沙发上电）；

步骤三：当听到连续三声快速“叮咚”声表示配对成功。

产品特点

- 产品占地面积小，外观精巧时尚，是健康生活的家居伙伴。
- 采用 L 型导轨更贴合背，腰，臀曲线，按摩更到位。
- 在传统揉捏按摩功能下增加抖动敲击，仿如人手般按摩，手法更丰富全面到位。
- 提供 4 种自动模式，专门针对不同需求设计程序改善身体状态。
- 精准程序重点腰臀部按摩，强化臀部肌肉，塑造臀部优美曲线。
- 无线遥控，精准控制，摆脱束缚，智能家居，智能生活。
- 产品细节考虑完善，是打造时尚精致生活，提升家居生活品质的不二之选。

产品规格

产品名称	i Moda
产品型号	OS 3108
额定电压	100 - 240V~
额定功率	96W
尺寸	925mm x 625mm x 960mm
定时时间	15分钟
遥控器电源	3节AAA电池

注：久坐焕活自动模式定时时间为20分钟

产品保养

- 避免用水或其他化学剂来清洗按摩沙发。
- 避免重压、硬物敲击、强拉、刮花按摩沙发表面。
- 操作时请轻触按键，勿用硬物按压。
- 使用完毕后或清洁产品前，请将电源插头从插座中拔除。
- 请勿让控制开关接触水等液体。

故障排除

若在使用此产品时遇到问题，请参考下列几点提示及可能解决方式。若此产品仍处于故障状态请将产品送至服务中心或经授权技术人员进行检查及维修。

异常情况	可能原因	处理方法
主机无法开机	1. 未通电 2. 开/关按钮未开启	1. 接入电源或检查电源是否连接良好 2. 开启按摩沙发后下方的电源开关是否处于“I”的位置
突然停止操作或无法正常运行	1. 断电 2. 机器故障	1. 检查电源接口是否接好 2. 向服务中心提供帮助
按遥控器开关键,遥控器无反应	1. 电池无电 2. 电池正负极装反	1. 更换电池 2. 正确装入电池
遥控器开关键指示灯闪烁	主机复位	机器正常设置
遥控器美臀塑形键/开关键/开背释压键三灯闪烁	1. 通信中断,无配对 2. 主机未开机	1. 参考遥控器与按摩沙发主机配对操作说明重新配对 2. 接通电源,打开主机开关,开启主机
遥控器久坐焕活键/开关键/元气复活键三灯闪烁	电池电量过低	更换电池
机器卡住异响	1. 负载过大 2. 机器故障	1. 调整坐姿,重新开机 2. 向服务中心提供帮助

联络我们



MALAYSIA
Healthy World Lifestyle Sdn Bhd
No. 22 Jalan Anggerik Mokara 31/47
Kota Kemuning, 40460 Shah Alam
Selangor Darul Ehsan, Malaysia
Tel: +603-5121 4286
Fax: +603-5121 4386



HONG KONG, CHINA
OGAWA Health Care International (HK) Ltd
31/F,YHC tower,1Sheung Yuet Road
Kowloon Bay
Kowloon
Hong Kong
Tel: +852 3465 6262
Fax: +852 2410 0119



SINGAPORE
OGAWA Health-Care Pte Ltd
27 Tampines Industrial Avenue 5,
T5 @ Tampines
Singapore 528623
Tel: +065-6846 8588
Fax: +065-6846 7677



VIETNAM
OGAWA Vietnam Co Ltd
2nd floor,Petroland Tower,
12 Tan Trao,Tan Phu ward
District 7
Ho Chi Minh
Tel: +84 8 3775 3093/3775 3094
Fax: +84 8 3775 3095



INDONESIA
Pt Healthy World
Lodan Center Block O No 20
Jalan Lodan Raya No 2
Jakarta Utara 14430
Tel: +62 21-6983 1123
Fax: +62 21-6983 1124



PHILIPPINES
O-Healthcare Solution Phil. Inc.
2303, 4th Floor, G&A Building,
Chino Roces Avenue Extension,
Makati City, Philippines
Tel: +632 889 0676 / +632 844 6851
Fax: +632 812 0421

Ogawa is grateful
to have received
these awards:

