 




# iModa da PLUS

modern massage sofa

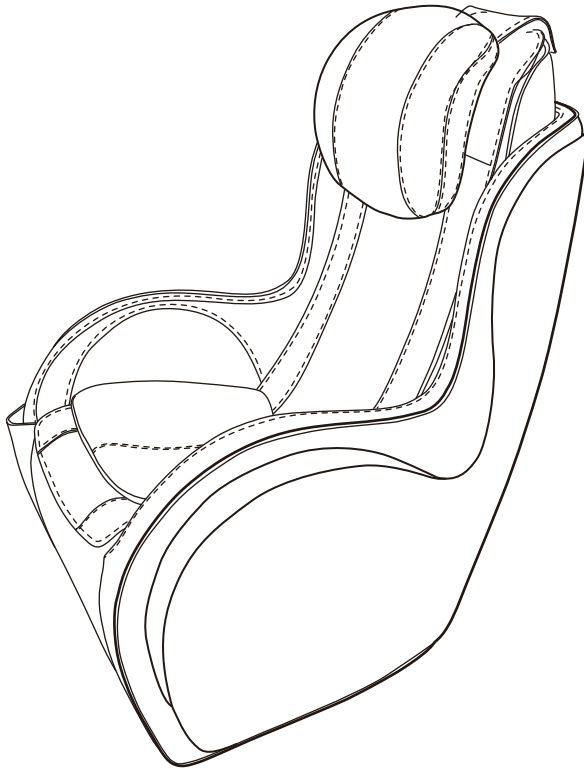

User Manual  
OS 3128 使用手册

iM  da **PLUS**  
modern massage sofa

# CONTENTS

Safety Instructions	03
Warranty Claims	06
Moving the Chair	07
Product Parts and Accessories	08
Controller Diagram	09
Product Features	13
Product Specifications	14
Product Maintenance	14
Troubleshooting	15
Contact us	16

# Safety Instructions

## i. Usage environment

- Do not use the appliance in a wet condition or dusty environment as this may result in malfunction or electric shock.
- Do not use the appliance in the bathroom.
- Do not place or store the appliance where it can fall or be pulled into a tub or sink.
- Place the appliance in a safe location.
- Do not expose the appliance to a heater or direct sunlight.

## ii. Unsuitable user

If you are experiencing health complications or conditions as stated below, please consult your doctor before use:

- Suffering from heart disease
- Pregnancy
- Any health concerns

## iii. When the product should not be used

- If the use exceeds 15 minutes at one time.
- This unit should not be used by children or invalids without adult supervision.
- Do not use this product before sleep.
- If the fabric cover is torn.
- If liquid is spilled onto the appliance.
- If the user feels abnormal or severe pain during the massage.
- If the user detects any malfunction or other abnormal conditions during operation.
- If there is lightning.

# Safety Instructions

## iv. Caution and warning

- Unplug the appliance from the outlet when not in use.
- Do not use any attachments that are not recommended by OGAWA.
- Do not operate this appliance if it has a damaged cord or plug. Please return the unit to OGAWA Service Center for examination and repairs.
- Do not insert your hands or any object into the massager's vents and gaps.
- Use the heated surfaces carefully. It should not be used by children or incapacitated persons. May be dangerous.
- Do not lift or carry this appliance by the power cord or any cord.
- This product is only intended for home use only.  
Commercial use is prohibited.
- Do not cover the appliance during operation.
- Do not crush appliance and avoid it from sharp folds.

# Safety Instructions

 
## v. Note

- Please read these safety notes thoroughly beforehand to ensure the safety and correct use of the appliance.
- The appliance is not intended for use by persons suffering from physical, sensory or mental disabilities, or persons who lack experience and knowledge about the product. They need to be supervised and instructed by a person responsible for their safety.
- Extensive usage could lead to excessive heating and shorter product lifespan. Should this occur, discontinue usage and allow the unit to cool before operating.
- Some levels of noise during usage are normal due to vibration.
- Consult the doctor before use if the person using it is under medication or with a medical condition. Please do not use the product if you are not feeling well.
- Do not increase the room temperature abruptly if the appliance is used in the cold room. It is advisable that the temperature should increase gradually to a normal level.
- If the appliance is stored in a cold place or in a warm environment, please wait for one hour before use to reach the optimum massaging level.
- Do not remove the cover of the appliance. Touching the internal components may result in malfunction or electric shock.
- Do not connect or disconnect the power cord from the electrical outlet with wet hands.
- Do not use the appliance if the electrical outlet is loose.
- The appliance has a heated surface. Persons insensitive to heat must be careful when using the appliance.

# Warranty Claims

1. Warranty is not transferable.
2. This warranty is effective only if the product is purchased from OGAWA.
3. Proof of purchase (original receipt) is required for all warranty repairs.
4. All implied warranties, including but not limited to these implied warranties of fitness and merchantability, are limited to the duration stated in the warranty policy.
5. Damage due to misuse, improper treatment and unauthorized modification and repair are not covered by this warranty.
6. Warranty does not cover accessories and attachments which do not belong to the massage unit.
7. Warranty is not effective to rental, business, commercial, institutional or other non-residential users.
8. All services covered by this warranty must be approved by OGAWA and repaired by authorized technicians only.
9. If replacement parts for defective materials are not available, OGAWA reserves the right to make substitution in lieu of repair or replacement.

# Moving the Chair

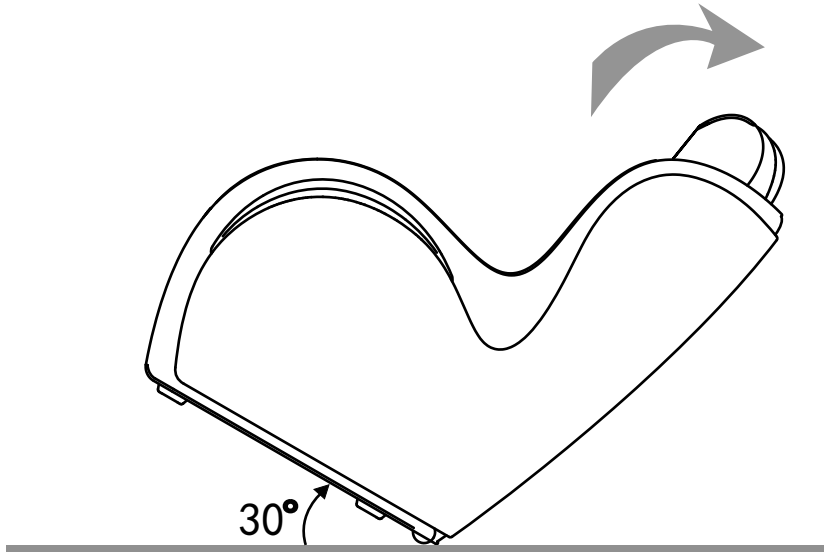


**Caution:**


Avoid moving the massage chair when there is someone seated on it.  
Placing a mat underneath the massage chair is advisable, as the moving process might scratch the floor surface.


 
# Product Parts and Accessories

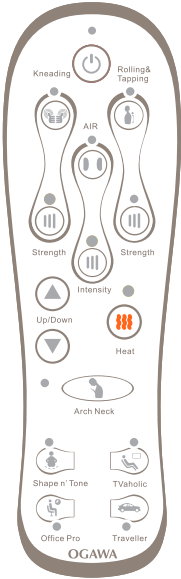


Controller

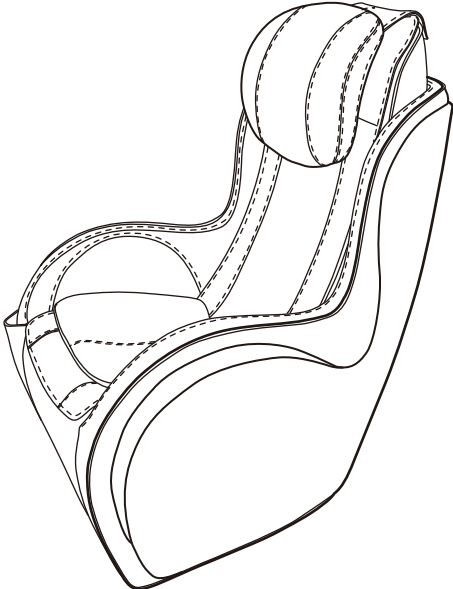 

Body of the Massage Chair

# Controller Diagram

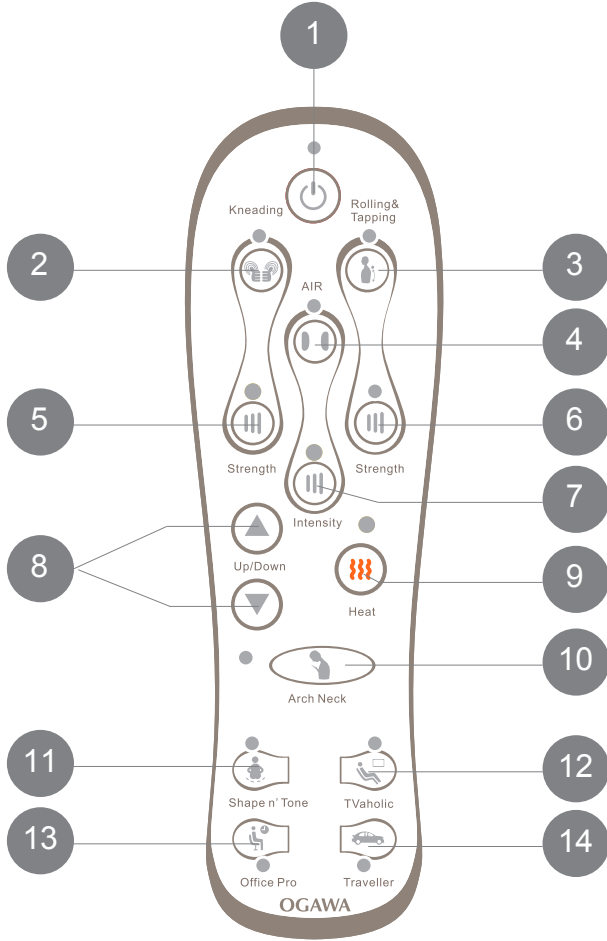 

# Control Buttons for the Massage Chair

## 1. ON / OFF

Insert the plug of the massage chair into an appropriate outlet to power the chair. If massage rollers are not at the waist, then they will return to their original position (during this process, the ON / OFF indicator is lit, but no buttons work), and the indicator will be unlit later. Press the ON / OFF button to activate the chair, the indicator will be lit, then a desired massage function can be selected. After the chair is activated, the timer is preset at 15 minutes will be displayed on the controller. Long press the ON / OFF button after the chair is activated or the preset program ends, all functions will stop and the massage rollers will return to their original position.

## 2. KNEADING

When the chair is operating, short press the KNEADING button, the indicator will be lit, and the kneading function will start. The intensity is preset at high level, strength button light will lit. Press the button again to close the mode. If the tapping function is activated the kneading function, then both functions will work together.

## 3. TAPPING + ROLLING

When the chair is operating, short press this button to activate the tapping function and rolling massage. The the intensity is preset high level, speed button light will lit. Press this button again to close the mode. If the kneading function is activated before the tapping function, then both functions will work together. If the present kneading function is in the Spot massage mode, press this button, the chair will resume its moving and the indicator will be lit.

## 4. AIR PRESSURE MESSAGE

Press this button to activate air pressure massage. Press again to turn off this function.

## 5. STRENGTH

The Strength Adjustment Button for Kneading - high and low level to be adjusted. After activating the Kneading function, every time the button is pressed, the strength can be adjusted to "high > low" in one cycle. In high level, the light is lit, in low level the light will flash and Rolling.

## 6. SPEED

The Speed Adjustment Button for Tapping and Rolling - high and low level to be adjusted. After activating the Tapping and Rolling, every time the button is pressed, the speed can be adjusted to "high > low" in one cycle. In high level the light is lit in low level the light will flash.

## 7. INTENSITY

After the air massage is activated, short press the INTENSITY button to switch among high and low intensity in cycle. Light flash for low intensity, and light lit for high intensity.

## 8. SPOT OR LOCALISED MESSAGE

Under the kneading function after the chair activation, press the SPOT button (up and down arrows) to start the Spot massage function, and the mode light will flash. Press and hold the up or down arrow to move the massage rollers upward or downward. Release the button to stop the roller adjustment and start the Spot massage function. Meanwhile, the corresponding upward or downward indicator light will be turned off.

## 9. HEAT / WIDTH ADJUSTMENT

When the chair is operating, press this button to start the HEAT function independently, and the HEAT indicator will be lit. Short press the button again to stop the function, and the indicator will be unlit.

When the Tapping mode is activated, long press the HEAT / WIDTH adjustment button 2 second to adjust the Tapping width. The indicator will be lit in the process of the adjustment and unlit after the adjustment.

## **10. ARCH NECK**

When the chair is operating,short press this button to start the Arch Neck AUTO mode, and the indicator will be lit. Press it again to close the mode.

## **11. SHAPE N' TONE**

When the chair is operating,short press this button to start the Shape n' Tone AUTO mode,and the indicator will be lit. Press it again to close the mode.

## **12. TVAHOLIC**

When the chair is operating,short press this button to start the TVaholic AUTO mode, and the indicator will be lit. Press it again to close the mode.

## **13. OFFICE PRO**

When the chair is operating,short press this button to start the Office Pro AUTO mode, and the indicator will be lit. Press it again to close the mode.

## **14. TRAVELLER**

When the chair is operating,short press this button to start the Traveller AUTO mode, and the indicator will be lit. Press it again to close the mode.

# Product Features

- With a compact size and fashionable appearance, the massage chair is an excellent partner for a healthy life.
- Its “L” shape rail is designed to make your neck, back, waist and hip more comfortable, giving you a better massage experience.
- Besides the traditional kneading massage, a tapping function is added to create a more professional feeling of massage by human hands.
- 5 automatic massage modes are optional for different requirements to improve your physical conditions.
- Its precise program focuses on waist and hip massage by strengthening hip muscles and shaping beautiful curves of the hip.
- With excellent and thoughtful design in details, it is an ideal choice for a delicate life and a high-quality home.

# Product Specifications

Product Name	i Moda Plus
Product Model	OS 3128
Rated Voltage	100 - 240V~
Rated Power	96W
Dimension	970mm x 950mm x 650mm
Timer	15 minutes

# Product Maintenance

- Do not use water or other cleaning detergents to wash the massage chair.
- Do not stack, knock with hard objects, pull harshly or scratch the surface of the massage chair.
- Press the buttons gently during operation; avoid pressing with sharp objects.
- Always pull out the power supply plug after use or before cleaning.
- Please keep the controller away from water or liquid.

# Troubleshooting

If you are caught in any problems when using this product, please refer to the following tips or possible solutions. If the solutions are not applicable, please send the product to our service centre or contact our authorized technical staff for inspection and repair.

Possible situations	Possible reason	Solutions
The chair won't operate	<ol style="list-style-type: none"><li>1. No power supply</li><li>2. The ON/OFF button is off</li></ol>	<ol style="list-style-type: none"><li>1. Check whether the power is connected or connected well</li><li>2. Check whether the power switch at the right bottom of the chair is turned on to "1"</li></ol>
The chair stops functioning suddenly or won't operate as usual	<ol style="list-style-type: none"><li>1. Power off</li><li>2. Machine failure</li></ol>	<ol style="list-style-type: none"><li>1. Check whether the power plug is well connected</li><li>2. Contact the service centre for help</li></ol>
The ON/OFF indicator of the controller keeps flashing	The chair returns to its original position	Keep the chair in regular settings
The chair has seized up with unusual sounds	<ol style="list-style-type: none"><li>1. The chair is overloaded</li><li>2. Machine failure</li></ol>	<ol style="list-style-type: none"><li>1. Adjust the sitting position and restart the chair</li><li>2. Contact the service centre for assistance</li></ol>



# Contact us



**MALAYSIA**  
Healthy World Lifestyle Sdn Bhd  
No. 22 Jalan Anggerik Mokara 31/47  
Kota Kemuning, 40460 Shah Alam  
Selangor Darul Ehsan, Malaysia  
Tel: +603-5121 4286  
Fax: +603-5121 4386



**HONG KONG, CHINA**  
OGAWA Health Care International (HK) Ltd  
31/F, YHC tower, 1 Sheung Yuet Road  
Kowloon Bay  
Kowloon  
Hong Kong  
Tel: +852 3465 6262  
Fax: +852 2410 0119



**SINGAPORE**  
OGAWA Health-Care Pte Ltd  
27 Tampines Industrial Avenue 5,  
T5 @ Tampines  
Singapore 528623  
Tel: +065-6846 8588  
Fax: +065-6846 7677



**VIETNAM**  
OGAWA Vietnam Co Ltd  
2nd floor, Petroland Tower,  
12 Tan Trao, Tan Phu ward  
District 7  
Ho Chi Minh  
Tel: +84 8 54133 222 / 54133 223  
Fax: +84 8 5416 1736



**INDONESIA**  
Pt Healthy World  
Lodan Center Block O No 20  
Jalan Lodan Raya No 2  
Jakarta Utara 14430  
Tel: +62 21-6983 1123  
Fax: +62 21-6983 1124



**PHILIPPINES**  
O-Healthcare Solution Phil. Inc.  
2303, 4th Floor, G&A Building,  
Chino Roces Avenue Extension,  
Makati City, Philippines  
Tel: +632 889 0676 / +632 844 6851  
Fax: +632 812 0421

# 目录

安全说明	18
保修权限	21
产品移动说明	22
产品零件及配件	23
遥控器说明	24
产品特点	28
产品规格	28
产品保养	28
故障排除	29
联系我们	30

# 安全说明

## i. 使用环境

- 请勿在潮湿或灰尘密集的环境下使用本产品，以免导致触电或机器故障。
- 请勿在浴室中使用本产品。
- 请勿将此产品放在浴缸或水槽旁，以免脱落。
- 请将本产品存放在安全的地方。
- 请勿将此产品暴露于热源或阳光直射下。

## ii. 不适宜人群

以下人士，请在使用前先咨询医生的意见：

- 心脏病患者
- 孕妇
- 身体不适者

## iii. 以下情况请勿使用本产品

- 当一次使用本产品超过15分钟时。
- 小孩或残病人士在无人监督的情况下。
- 睡前。
- 产品外层破损。
- 液体泼溅到产品上。
- 使用过程中感到不寻常或剧烈疼痛。
- 使用中过程中发觉任何机件故障或不寻常状况。
- 打雷时。

# 安全说明

## iv. 警告

- 没有使用时，请拔下电源插头。
- 请勿使用非 OGAWA 提供的配件。
- 当电源线或插头损坏时，请勿使用并及时联系 OGAWA 服务中心进行维修检查。
- 请勿将手或任何异物塞入按摩器间隙中。
- 请务必谨慎使用按摩器的导热功能，勿用于对热能反应较为迟钝的皮肤上及血液循环不良的部位。请勿让儿童或身心功能障碍者自行使用导热功能。
- 请勿扯动电源线来移动本产品。
- 本产品仅为个人使用，禁止用于商业用途。
- 请勿在使用中覆盖本产品，以免引起故障或火灾。
- 请勿挤压或用尖锐物刮破本产品。

# 安全说明

 
## v. 注意

- 为确保安全及正确使用，使用前请务必详细参阅本说明书。
- 若儿童、身心功能或智能障碍者使用本产品，必须有人在旁指导且能确保其安全。
- 过度使用可能会导致产品过热或缩短产品寿命，重复使用时，须让产品冷却一段时间后再使用。
- 使用时发出的声响属正常，这是由产品振动而产生的。
- 正在接受药物或医疗治疗者，请在使用前咨询医师。若您感觉不适，请勿使用本产品。
- 如果在低温室中使用，请勿骤然升高温度。建议将温度逐渐升高调整到正常温度后。
- 若将产品存放于低温或高温的环境中，建议您在一小时后才进行使用本产品以达到最佳的按摩体验。
- 请勿拆卸本产品。触碰内部机件可能导致故障或触电意外。
- 请勿用潮湿的手安插或拔出电源插头。
- 当电源插座有松动时，请勿使用。
- 该设备具有加热表面。对热不敏感的人一定要小心使用设备。

# 保修权限

1. 本保修权限不可转让。
2. 本保修服务仅对在 OGAWA 购买的产品有效。
3. 当要求保修服务时，请出示购买证明（正本收据）。
4. 所有保修项目，包括但不限于这些健身及适销性的保修项目有效期限需视保修政策而定。
5. 因错误使用、处理不当以及未经授权私自改装和维修产品而导致的损坏，不属于保修范围。
6. 此保修范围不包括不属于产品本身的附件。
7. 此保修范围不适用于租赁、交易、商业、机构或其他非住宅用户。
8. 此保修范围内所涉及的维修服务需经过 OGAWA 授权，且必须由授权的技术人员维修。
9. 若需更换的维修附件缺货，OGAWA 有权采用替代配件进行维修。

# 产品移动说明

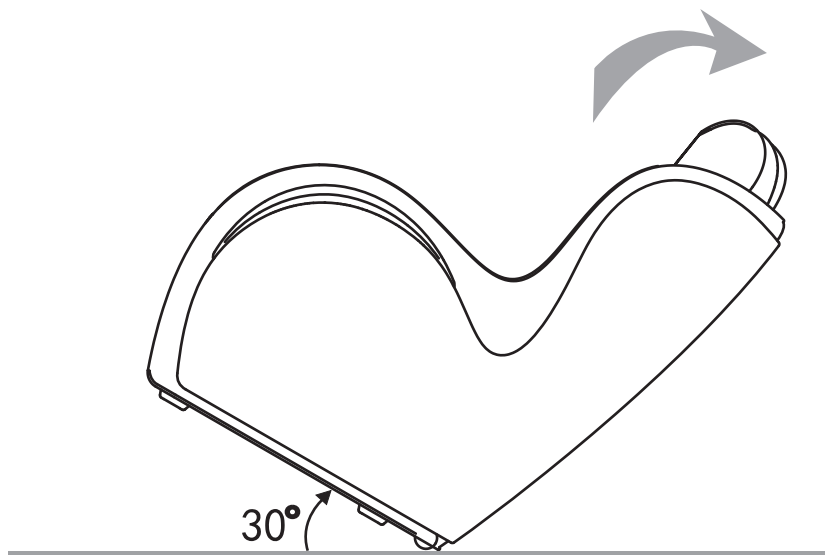


## 注意：


当有人坐在按摩沙发上时，请不要移动椅子。

移动按摩沙发时可能损坏地板，建议在本产品下铺上垫子等。
 
# 产品零件及配件

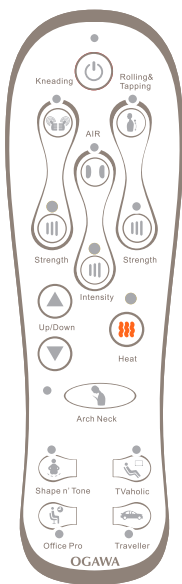


手控器

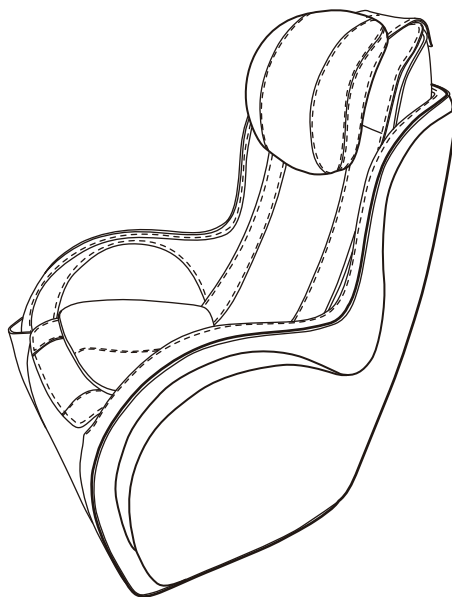 

按摩沙发主体



# 遥控器说明

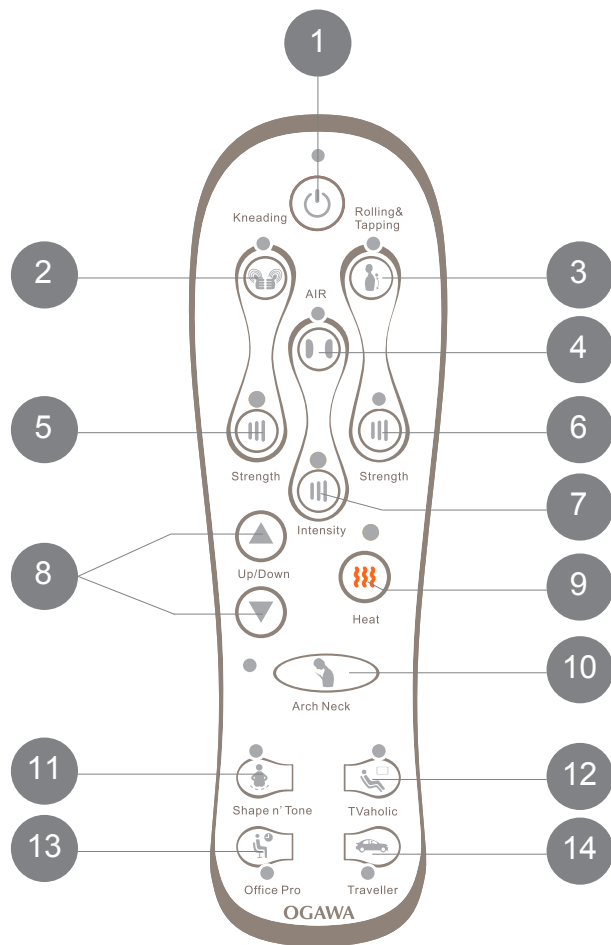 

# 按摩沙发控制键

## 1. 开关键

沙发主体的电源插头插入市电后，按摩沙发主体获得电源，此时如果按摩机芯不在腰部，机芯将自行复位（复位过程开关键指示灯闪亮，所有按键不响应），机芯复位完成，开关键指示灯灭。长按（大于2秒）开关键开机，指示灯亮，此时可选择所需的功能，开机后默认工作时间为15分钟，开机后长按开关键或程序默认工作时间到则关机，所有功能停止工作，按摩机芯复位。

## 2. 揉捏键

在开机状态下，短按揉捏键，则该指示灯亮，揉捏功能开启并全程行走，强度默认为强档，揉捏强度键指示亮灯。若再次按该键则关闭此模式。若开启揉捏功能之前有捶击模式，则揉捏，捶击两种模式一起工作。

## 3. 捶击键 + 推拿

开机状态下，短按该键，则开启捶击+推拿功能，并全程行走。强度默认为强档，捶击强度键指示亮灯，若再次按该键则关闭此模式。若开启捶击功能之前有揉捏模式，则揉捏，捶击两种模式一起工作。若当前为定点揉捏模式，按此键则恢复全程行走模式，对应功能模式灯常亮。

## 4. 气压按摩

在开机状态下，短按该键，则开启气压按摩功能。若再次按该按键则关闭此模式。

## 5. 揉捏强度

揉捏功能力度调节控制键 - 高低档可调

开机后揉捏功能开启状态下，此键才有效；按一下揉捏强度键，揉捏强度在强档和弱档间循环切换，开启强档时，强度指示灯常亮，开启弱档时，强度指示灯闪烁提示。开启揉捏时，强度默认为强档。



## 6. 锤击强度

锤击，推拿按摩功能的速度调节控制键 - 高低档可调

开机后行走锤击功能开启状态下，此键才有效；按一下锤击强度键，锤击强度在强档和弱档间循环切换，开启强档时，强度指示灯常亮，开启弱档时，强度指示灯闪烁指示。开启行走锤击时，强度默认强档。

## 7. 气压强度

开机后气压按摩功能强度开启状态下，此键才有效；按一下气压强度键，气压强度在强档和弱档间循环切换，开启强度时，强度指示灯常亮，开启弱档时，强度指示灯闪烁指示。开启气压按摩时，强度默认强档。

## 8. 位置调节键

开机后，开启揉捏状态下，按位置调节键（上下箭头位置），则进入对应模式定点按摩功能，同时对应模式指示灯闪烁。按住上下箭头位置时，按摩机芯向上或向下行走进行按摩位置调节。按键松开后，按摩机芯停止行走进行定点按摩，对应向上、向下指示灯灭。

## 9. 加热/宽度调节键

开机状态下，有开启机芯按摩功能时，按一下加热/宽度调节键，开启加热功能，对应指示灯亮，再按一下关闭加热功能，对应指示灯灭掉。当关闭所有机芯按摩功能时，加热关闭。

开机状态下，单独开启行走锤击功能时，长按2s加热/宽度调节键，开启锤击宽度调节功能，宽度调节完成后，自动退出该调节功能。



#### 10. 低头族

在开机状态下，短按该键开启低头族自动模式，并且相应的指示灯亮，再按一下该键则关闭此自动模式。

#### 11. 美臀族

在开机状态下，短按该键开启美臀族自动模式，并且相应的指示灯亮，再按一下该键则关闭此自动模式。

#### 12. 追剧族

在开机状态下，短按该键开启追剧族自动模式，并且相应的指示灯亮，再按一下该键则关闭此自动模式。

#### 13. 上班族

在开机状态下，短按该键开启上班族自动模式，并且相应的指示灯亮，再按一下该键则关闭此自动模式。

#### 14. 驾车族

在开机状态下，短按该键开启驾车族自动模式，并且相应的指示灯亮，再按一下该键则关闭此自动模式。

## 产品特点

- 产品占地面积小，外观精巧时尚，是健康生活的家居伙伴。
- 采用 L 型导轨更贴合颈，背，腰，臀曲线，按摩更到位。
- 在传统揉捏按摩功能下增加敲击，仿如人手般按摩，手法更丰富全面到位。
- 提供 5 种自动模式，专门针对不同需求设计程序改善身体状态。
- 精准程序重点腰臀部按摩，强化臀部肌肉，塑造臀部优美曲线。
- 产品细节考虑完善，是打造时尚精致生活，提升家居生活品质的不二之选。

## 产品规格

产品名称	i Moda Plus
产品型号	OS 3128
额定电压	100 - 240V~
额定功率	96W
尺寸	970mm x 950mm x 650mm
定时时间	15分钟

## 产品保养

- 避免用水或其他化学剂来清洗按摩沙发。
- 避免重压、硬物敲击、强拉、刮花按摩沙发表面。
- 操作时请轻触按键，勿用硬物按压。
- 使用完毕后或清洁产品前，请将电源插头从插座中拔除。
- 请勿让控制开关接触水等液体。

# 故障排除

若在使用此产品时遇到问题，请参考下列几点提示及可能解决方式。若此产品仍处于故障状态请将产品送至服务中心或经授权技术人员进行检查及维修。

异常情况	可能原因	处理方法
主机无法开机	1. 未通电 2. 开/关按钮未开启	1. 接入电源或检查电源是否连接良好 2. 开启按摩沙发后下方的电源开关是否处于“I”的位置
突然停止操作或无法正常运行	1. 断电 2. 机器故障	1. 检查电源接口是否接好 2. 向服务中心提供帮助
遥控器开关键指示灯闪烁	主机复位	机器正常设置
机器卡住异响	1. 负载过大 2. 机器故障	1. 调整坐姿,重新开机 2. 向服务中心提供帮助

# 联络我们



**MALAYSIA**  
Healthy World Lifestyle Sdn Bhd  
No. 22 Jalan Anggerik Mokara 31/47  
Kota Kemuning, 40460 Shah Alam  
Selangor Darul Ehsan, Malaysia  
Tel: +603-5121 4286  
Fax: +603-5121 4386



**SINGAPORE**  
OGAWA Health-Care Pte Ltd  
27 Tampines Industrial Avenue 5,  
T5 @ Tampines  
Singapore 528623  
Tel: +065-6846 8588  
Fax: +065-6846 7677



**INDONESIA**  
Pt Healthy World  
Lodan Center Block O No 20  
Jalan Lodan Raya No 2  
Jakarta Utara 14430  
Tel: +62 21-6983 1123  
Fax: +62 21-6983 1124



**HONG KONG, CHINA**  
OGAWA Health Care International (HK) Ltd  
31/F,YHC tower,1Sheung Yuet Road  
Kowloon Bay  
Kowloon  
Hong Kong  
Tel: +852 3465 6262  
Fax: +852 2410 0119



**VIETNAM**  
OGAWA Vietnam Co Ltd  
2nd floor,Petroland Tower,  
12 Tan Trao,Tan Phu ward  
District 7  
Ho Chi Minh  
Tel: +84 8 54133 222 / 54133 223  
Fax: +84 8 5416 1736



**PHILIPPINES**  
O-Healthcare Solution Phil. Inc.  
2303, 4th Floor, G&A Building,  
Chino Roces Avenue Extension,  
Makati City, Philippines  
Tel: +632 889 0676 / +632 844 6851  
Fax: +632 812 0421

Ogawa is grateful  
to have received  
these awards:



PUTRA  
BRANDS AWARDS 2010  
SILVER  
TO HONORARY ONLY  
MALAYSIA'S MOST VALUABLE BRANDS

Ogawa Wellness Hubs : Malaysia . Singapore . Vietnam . Philippines . Indonesia . Myanmar . India . China  
Hong Kong . Taiwan . Turkey . Pakistan . Mauritius . Russia . France . Canada  
Thailand . Korea . Australia . Dubai . K.S.A . Nigeria . Egypt . Lebanon . Denmark  
Sweden . U.S.A