

LUXE AMOUR MASSAGE SOFA



User Manual OS3160 使用手册



Before Use

● Important safety instructions 02 ● Grounding instructions 06 ● Setup of the massage lounger 06 ● Before use 08 ● Product parts 10	
How to Use	
Operation Guide	
Maintenance	
●Cleaning and maintenance	
Q&A/Important notes	
● Specification	

Important safety instructions Must be followed

These safety instructions must be strictly followed in use to avoid personal injuries and property damage are as follows:

■ All the safety instructions are described in compliance with degrees of the injuries or damage as a result of wrong use.

Warning

Actions tending to cause serious injuries or death

Caution

Actions tending to cause minor injuries or property damage

■ Pay attention to the symbols before safety instructions (an example is given below).



Actions that must be absolutely forbidden



Actions that must be done

🔨 Warning

- Before using the product, persons who are being treated or have any of the following symptoms should consult a physician.
 - (1) Persons with a pacemaker or another in-vivo electronic medical device tending to suffer electronic jamming;
 - (2) Patients with malignant tumors;
 - (3) Patients with heart disease;
 - (4) Persons proved to be unable to identify temperatures;
 - (5) Pregnant persons or women who have just had childbirth:
 - (6) Persons with perceptual disturbance because of diabetes or another serious peripheral circulation (12) Persons with protrusion of intervertebral disturbance:
 - (7) Osteoporosis patients, spinal fracture patients. or persons with acute painful diseases such as sprains or muscle strains;

- (8) Persons with injuries in the massaged parts;
- (9) Persons with a body temperature above 38 °C (with a fever) (For example, persons with intense acute inflammation symptoms such as listlessness, cold shivers and blood pressure change or persons in poor health);
- (10) Persons who are unwell or must have a rest;
- (11) Persons with an abnormal or bent vertebra;
- (13) Persons who feel very uncomfortable (except for the circumstances above)

Otherwise accidents or physical discomfort may happen.

 If you feel physically abnormal while using or no effect after use, stop the product immediately and consult a physician about it.

Otherwise accidents or physical discomfort may happen.



- Before being massaged or moving the backrest or the Lower Leg/Foot massage section, make sure there is no person or pet close to the product (in front, behind, below or on the side). Before use, make sure there is no foreign matter between the backrest and the back cover. Otherwise accidents or physical discomfort may happen.
- Before use, lift the back cushion and check whether fabric of traveling sections of the massage wheels or of other positions are damaged. (Even if the fabric is slightly damaged, stop the product immediately, pull out the power plug and send the product to repair.)
- In the first time of use, select AM Routine mode.
- Do not massage for more than 30 minutes each time.
- Do not massage a single part for more than 5 minutes.

If any of these safety instructions is not followed, you may suffer an adverse effect and be injured.

If the product is used when the fabric is damaged, you may get injured or get an electric shock.

• After use each time, turn the power switch to the "O" position and then pull out the power plug.

Otherwise accidents or injuries may happen due to naughty behaviors of children.

- Follow the regulations about use of the socket and the wiring devices.
- Use a 220-240V~,50/60Hz power supply.

(Do not use the product in a foreign country or connect it with a transformer without permission.) Otherwise electric shocks, product faults or fires because of overheat may happen.

Insert the power plug thoroughly into the socket.

Otherwise electric shocks or fires caused by overheat may happen.

 Remove such dirt as dust on the power plug at regular intervals. Otherwise fires caused by poor insulation due to factors such as moisture may happen. (Wipe the power plug with dry cloth.)

Marning



- In the case of any abnormality or fault, stop the product immediately and pull out the power plug to avoid smoke, fires and electric shocks.
 Abnormality and fault examples
 - The product fails to work after the power switch is turned to the ON position;
 - After the power line is moved, the product is discontinuously powered on;
- In use, the product gives off a burning smell or an abnormal sound;
- The product is deformed or abnormally heating;
- → In any of these abnormalities and faults, have the product inspected and repaired by an authorized service center immediately.
- Do not put the back cushion between the backrest and the back cover.
 Otherwise product faults may happen.
- When handling the product, hold its frame.

Otherwise product faults or personal injuries may happen.

The following persons should not use the product.
 Persons for whom massage is forbidden by doctors, such as persons with thrombosis, serious aneurysm, acute venous aneurysm, various skin inflammations (such as subcutaneous tissue inflammation) or various skin infections.
 Otherwise diseases may get worse.

- The following persons should not massage their waists.
 - Persons with acute lumbago, protrusion of intervertebral disc, or displacement of a lumbar vertebra;
 - Persons with deformation or other discomfort of the hip joint;
 Otherwise diseases may get worse.
- Do not put hands, arms or feet into the backrest's fabrics of traveling sections of the massage wheels.
- Children should not use the product. Keep them from playing on the product or climbing onto the Lower Leg/Foot massage section, the seat, the backrest or the armrests.
- Do not climb onto the backrest or the armrests.
- Do not lean or sit on the backrest.
 - Keep your head from reachable areas of the backrest and the back cover.
 - Persons unable to express themselves clearly or unable to operate the product should not use the product.
 - When massing the neck, pay attention to moving directions of the massage wheels and do not massage with a too large force or massage front part of the neck.
 Otherwise accidents or personal injuries may happen.
 - Do not damage the power line or the power plug.

(Do not damage, machine, forcedly bend, twist or prolong the power line or the power plug, or place the power line or the power plug close to a heater, or tie or bind any heavy objects on the power line or the power plug.)

A damaged power line or power plug may result in electric shocks, short circuit faults or fires. Please consult the shop from which you bought the product or a designated authorized service center about maintenance method of the power line or the power plug.

- When using the Warm massage wheels, avoid longtime contact with the skin in one position.
- Do not use the Knee Warm massage for a long time.

Otherwise you may get low-heat burns.

*Even if the temperature is relatively lower (40 °C \sim 60 °C), low-heat burns may happen after longtime contact with skin (in spite of no obvious hot or painful feeling).

- Do not damage the Knee Warm (heater) section.
 - Do not insert pins or needles into the product.
 - Do not cut the product with a cutter.

If the internal heater is damaged, fires or electric shocks may happen.



 
Forbidden

Wet-hand operation forbidden Do not insert or pull out the power plug with wet hands.
 Otherwise electric shocks may happen.



Do not refit, disassemble or repair the product without permission.
 Otherwise fires, abnormal movements or personal injuries may happen.





- The following persons (even if they are physically healthy at present) should consult a physician before using the product.
 - (1) Persons with muscular atrophy due to aging or thin persons;
 - (2) Persons feeling lumbago because of bone or viscus problems;
 - (3) Persons tending to suffer sprains or bruising;
 - (4) Persons with carsickness or seasickness or strong response when taking other transport means;
 - (5) Persons who once received a heart operation or another visceral operation;
 - Otherwise health may get worse.
- Before sitting on the product, make sure there is no foreign matter between any two parts of it.

(Make sure there is no foreign matter on the back cover, the backrest, the seat surface, the Lower Leg/Foot massage section or inside surface of the back cushion.)

Otherwise accidents injuries or product faults caused by clamping of bands, feet, or other articles.

Otherwise accidents, injuries, or product faults caused by clamping of hands, feet, or other articles by the product may happen.

- Do not use the product when wearing any hard decorative article on head (such as hair pin).
- If there is any hard article (such as mobile phone or key) in a pocket of the trousers, take it
 out before massage.
- Before hand or arm massage, remove watch, nail wrap, ring, etc.
 Otherwise injuries may happen.



- Before sitting on the seat, make sure the massage wheels are in the retracting positions.
 If you want to leave the seat during the massage, stop the product first.
 Otherwise accidents or injuries may happen.
- When pulling out the power plug, do not pull the power line but hold the power plug. Otherwise an electric shock or a short circuit fault may happen.
- Before moving the product, make the Lower Leg/Foot massage section back to the original position by adjusting its angle.
 Otherwise injuries may happen.
- When moving the product by pulleys, put articles such as mats on the floor.
 Otherwise marks may be left on the floor.
- Keep children from the retaining screws on the remote controller holder.
 Otherwise children may cause accidents or suffer injuries by eating it or playing with it.
- Before moving the product by pulleys, remove the obstructions close to it. Lift the seat surface of the Lower Leg/Foot massage section to a position a little lower than the waist and move the product slowly.
 Otherwise accidents or injuries may happen because of turnover of the product.
- In use, place the product horizontally.

 Otherwise accidents due to turnover of the product may happen.
- If any symptom such as skin inflammation, itching or swelling in use, stop the product immediately and consult a physician.
 Otherwise accidents or physical discomfort may happen.
- If the product is used again for massage after a period of out-of-service, read the Operating Instructions again and make sure the product can run normally first.
 Otherwise accidents or injuries may happen.
- Do not use the product and other devices at the same time.
 Otherwise accidents or physical discomfort may happen.



- Keep head, abdomen or skin from the massage wheels and do not put hands or feet between the massage wheels.
- Do not put the knees between the Lower Leg/Foot massage section.
- Do not fall asleep while using the product. Do not use the product after drinking.
- If air in the filling the air bag on the seat is not completely discharged, do not stand or jump on the seat or put things on it.
- Otherwise accidents or injuries may happen.

⚠ Caution

- Do not put hands or feet between the product and the Lower Leg/Foot massage section.
 Do not put hands, arms, or head into the seam of the Lower Leg/Foot massage section (footrest).
 - For safety, admit the Lower Leg/Foot massage section after massage.
- Do not put hands, feet or head between the backrest and the back cover.
- Do not put pets on the product (such as its back cover, backrest and armrest).
- Do not pull out the power plug or turn OFF the power switch suddenly during massage.
 Otherwise injuries may happen.
- Do not stand or sit on the back cover.
 Otherwise personal injuries due to the product toppling may occur.
- Do not stand or sit on the armrests.



Do not stand or sit on the armrests.
 Otherwise personal injuries may happen.

Do not stand or sit on the Lower Leg/Foot massage section or the footrest.
 Otherwise accidents or injuries due to rotation of front of the footrest or turnover of the product may happen.
 If bottom of the Lower Leg/Foot massage section runs into the floor, the floor may be damaged.

- Do not drag or push the product after it is installed.
 Otherwise the floor may be damaged.
- Do not move the product while there is a person on it.
 Otherwise, accidents, or injuries may happen due to a toppling of the product.
- Do not use the product on heating devices such as electric blankets.
 Otherwise fires may happen.
- Do not put the remote controller on the product.
 Otherwise the product may be damaged.



Do not use the product in a bathroom or another wet place.
 Otherwise electric shocks or product faults may happen.



Do not sprinkle substances such as water on the product or its remote controller.
 Otherwise electric shocks, short circuit, or product faults may happen.



- Before cleaning or maintaining the product, pull out the power plug first.
 Otherwise electric shocks or injuries may happen.
- In the case of a power failure, pull out the power plug at once.

 Otherwise accidents or injuries may happen when power is restored.
- Pull out the power plug
- When the product is not used, pull out the power plug.
 Otherwise electric leakage fires may happen because of insulation aging caused by dust and moisture.

Grounding instructions

- The product must be grounded to reduce the electric shock hazard because of functional faults of the product.
- The product has a power line with a grounding conductor and a grounding plug. The grounding plug must be inserted into an appropriate socket that has been correctly installed and grounded in full compliance with the local code and decree.

Caution

- If the grounding conductor is not correctly connected, electric shocks may happen. If you are not sure about correctness of the grounding, have it inspected by a professional electrician. Even if the grounding plug provided with the product does not match with the socket you have, do not refit it by yourself but ask a professional electrician to install an appropriate socket.
- The product has a grounding plug. Make sure the product is connected with a socket matching with shape of the grounding plug.
- Do not connect the product to a multi-plug.
- If the power plug is damage,it must be replaced by a special plug available from OGAWA or authorize agents.

Setup of the massage lounger

Before use (installation position)

Make sure there is enough space for the tilting of the product.



the floor

- Do not expose the product to direct sunlight or a high-temperature place (e.g., in front of heating equipment); otherwise its synthetic leather may fade or harden.
- Place a mat below the product to avoid floor damage. The mat should cover the product's area in contact with the floor and the footrest's area in contact with the floor (minimum dimensions: $200 \text{cm} \times 90 \text{cm}$). See the figure.
- Install the product close to a power socket.



Chair Moving Instruction

Method one: Hold the two side cover and lift up to moving



Please lift up the side cover, as the moving process might lave scratches on the floor surface

※Caution

Do not put hands at the ridge of channel to avoid the side cover digging out.

The product is heavy and should be handled carefully by two persons at least to avoid back strain.

Product weight

Approx. 64 kg

Put the product on the floor.

- Put down the product slowly and carefully to avoid foot injury.
- Do not release the footrest until the product is placed horizontally. Otherwise the footrest will rebound to its original position.
- It is suggested to pave an article such as a mat on the floor to keep it from damage.

⚠ Caution

- Do not drag or pull the product after it is installed.
- When handling the product, do not hold its frame.
 - Otherwise product faults or personal injuries may happen.
- Do not move the product by pulleys directly on a floor.
 - Otherwise marks may be left on the floor.
- Do not move the product while there is a person on it.
 - Otherwise, accidents or injuries may happen due to falling down.
- Do not hold the foot massage section when moving the product.
- Otherwise injuries may happen due to sliding.

Method two: Moving by using slip bar underneath

⚠ Caution

Moving the massage chair with a slight pull or push as right figure, this way do not fit for the wood floor. Otherwise marks may be left on the floor.

Press the ON/OFF button to return the back rest and footrest to its original position.

Slide the power switch to the "O" position and unplug the unit.

Place the controller and the power cord on the seat.



After finishing installation, moving the massage chair around the house with a slight pull or push.

Before use

Check the space around the product.

Make sure there is no person, pet or other object close to the product.



2

Make sure there is no foreign matter in the seams of the product.

When checking the Lower Leg/Foot massage section, press the footrest forward by your hands and make sure there is no foreign matter in the seam.



- Do not put hands, fingers, feet or head into the seam(s) between the footrest and the seat surface or the armrests.
- Before sitting on the product, make sure there is no foreign matter between any two parts of it.
- Do not put hands, arms or head between the backrest and the back cover.
- Do not put pets on the product (such as its back cover, backrest and armrests).



3

Inspect the power line and power plug

 Remove such dirt as dust on the power plug at regular intervals.

Otherwise fires caused by poor insulation due to factors such as moisture may happen. (Wipe the power plug with dry cloth.)

• Do not damage the power line or the power plug. Do not damage, machine, forcedly bend, twist or lengthen the power line or the power plug, or place the power line or the power plug close to a heater, or tie or bind any heavy objects on the power line or the power plug.

 
A damaged power line or power plug may result in electric shocks, short circuits, or fires.

Please consult the shop you bought the product or an authorized service center about maintenance method of the power line or the power plug.



Do not be entangled by the power line.


Push the interface into the power input jack till the end.



Before use (Continued)



Make sure the massage wheels are retracted

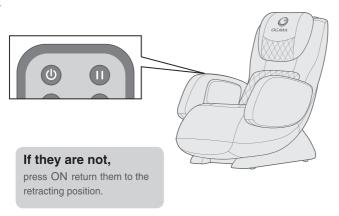



Make sure the fabric is not damaged nor cracked

Inspected area:


The fabric of traveling sections of the massage wheels on the backrest

Marning

 Before use, raise the back cushion and check whether fabrics of the area pointed out in the figure are damaged.

(Even if the fabric is slightly damaged, stop the product immediately, pull out the power plug and send the product to repair.)


If the product is used when there is fabric damage, you may get injured or get an electric shock.

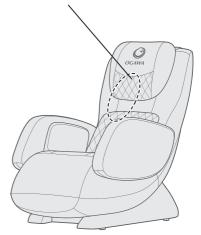


Product Parts



Product Parts

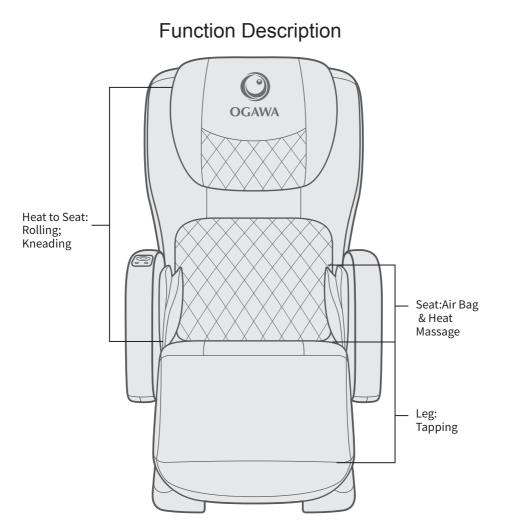

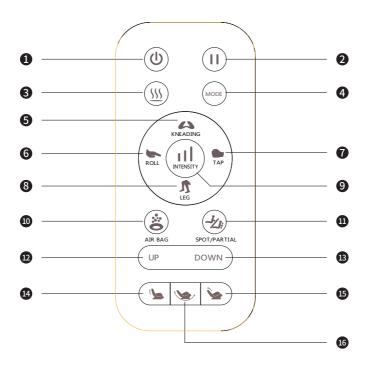

- 1. Power Button On/Off Massage Chair
- 2. Pause Button Pause The Massage Chair
- 3. Heat Button Activate/Deactivate Heat Function
- 4. Mode Button Auto Program Selection
- 5. Kneading Button Activate/Deactivate Kneading Function
- 6. Rolling Button Activate/Deactivate Rolling Function
- 7. Tapping Button Activate/Deactivate Tapping Function
- 8. Legrest Button Activate/Deactivate Leg Swing Function Massage Function

- 9. Intensity Button Massage Intensity Selection
- 10. Air Bag Seat Air Bag Massage Mode Selection
- Spot/Partial Spot/Partial Massage
 Up/Down Button Gearbox Up
 Down Movement
- 14. Incline Button Backrest Incline Selection
- 15. Recline Button Backrest Recline Selection
- 16. Swing Mode Activate/Deactivate Swing Function

1. Power Button - On/Off Massage Chair

When product in standby mode, press this button to turn on. The product will "beep" and indicator light on. Press again to turn off the unit, the product will "beep" and indicator light off. When operating, press this button. The unit will slowly return to it orginal position and indicator light will off.

2. Pause Button - Pause The Massage Chair

When the unit is On, press this button to stop/pause all the massage function. "beep" sound and indicator light will on.

press again, the massage resume its operation and "beep" sound and indicator light off.

3. Heat Button - Activate/Deactivate Heat Function

When the unit is On, press this button to activate heat function. "beep" sound and indicator light will on press again, to deactivate the heat function and "beep" sound and indicator light off.

4. Mode Button - Auto Program Selection

When the unit is On, press this button to start auto program. The air bag default is low and leg massage is activate.

1st time press this button will enter Mode 1 (Full Body), indicator "beep" sound and light(green)

2nd time press this button will enter Mode 2 (Upper), indicator "beep" sound and light(blue)

3rd time press this button will enter Mode 3 (Lower), indicator "beep" sound and light(red) 4th time press this button will exit auto program, indicator "beep" sound and light off. In a cycle.

5. Kneading Button - Activate/Deactivate Kneading Function

On standby mode, press this button to activate kneading function, "beep" sound will hear and indicator light will on; press again to turn off kneading function, a beep sound and indicator light will off.

Remark: When Auto program is operating, press this button will exit the auto program and activate the function pressed.

6. Rolling Button - Activate/Deactivate Rolling Function

On standby mode, press this button to activate rolling function, "beep" sound will hear and indicator light will on; press again to turn off rolling function, a beep sound and indicator light will off.

Remark: When Auto program is operating, press this button will exit the auto program and activate the function pressed.

7. Tapping Button - Activate/Deactivate Tapping Function

On standby mode, press this button to activate tapping function, "beep" sound will hear and indicator light will on; press again to turn off tapping function, a beep sound and indicator light will off.

Remark: When Auto program is operating, press this button will exit the auto program and activate the function pressed.

8. Legrest Button - Activate/Deactivate Leg Massage Function

On standby mode, press this button to activate leg massage, "beep" sound will hear and indicator light will on; press again to turn off leg massage, a beep sound and indicator light will off.

Remark: When Auto program is operating, press this button will exit the auto program and activate the function pressed.

9. Intensity Button - Massage Intensity Selection

Under Auto Program/Kneading/Tapping/Legrest Status:

Press this button at Low(Green) --> Mid(Blue) --> High(Red) three level in one cycle. Each time press,

"beep" sound will heard and indicator light will show.

10. Air Bag - Seat Air Bag Massage Mode Selection

On standby mode, press this button to adjust air bag massage intensity.

Under Auto Mode:

Press this button will Mid(Blue) --> High(Red) --> Off Air Bag --> Low(Green) in this 4 level in one cycle.

"beep" sound will heard and indicator will show. Default is Low(Green) for Auto mode. Under Manual Mode:

Press this button will Low(Green) --> Mid(Blue) --> High(Red) --> Off Air Bag in this 4 level in one cycle.

"beep" sound will heard and indicator will show. Default is Low(Green) for Auto mode.

11. Spot/Partial - Spot/Partial Massage

Under Kneading or Tapping Function:

1st time press this button, will exit the full body massage and activate the spot kneading or tapping massage,indicator "beep" sound and light(green)

2nd time press this button, will exit the spot massage, and activate the partial massage f or kneading or tapping, indicator "beep" sound and light(blue)

3rd time press this button, will exit the partial massage, and activate the full body massage for kneading or tapping, indicator "beep" sound and light off

Under Rolling Function:

1st time press this button, indicator "beep" sound and light(green), no spot for rolling; 2nd time press this button

indicator "beep" sound and light(blue), activate the partial rolling massage. 3rd time press this, indicator "beep" sound and light(off), will activate the full body rolling massage.

12/13. Up/Down Button - Gearbox Up Down Movement

At neck area, after the body scanning, repeated "beep" sound or under spot/partial: Press "Up" or "Down" to adjust the gearbox movement, the indicator ligth will flashing. Remark: adjusting location neck area, light will not flashing; at spot, light flash green; at partial, light flash blue.

14. Incline Button - Backrest Incline Selection

When on, press this button to incline the massage chair. Indicator "beep" sound and light on;

press again to stop the incline adjusting, Indicator "beep" sound and light off

15. Recline Button - Backrest Recline Selection

When on, press this button to recline the massage chair. Indicator "beep" sound and light on;

press again to stop the recline adjusting, Indicator "beep" sound and light off

16. Swing Mode - Activate/Deactivate Swing Function

When on, press this button to activate the swing function. Indicator "beep" sound and light on;

press again to stop the swing function, Indicator "beep" sound and light off

After use, please press power button, the roller will back to original position. Once done, please After use, please press power button, the roller will back to original position. Once done, please

Cleaning and maintenance

Cleaning of the synthetic leather

Wipe the synthetic leather with a soft dry cloth.

- Do not clean the product with chemicals such as thinners, gasoline and alcohol.
- When using a leather maintenance product (cleaning cloth) sold on the market, follow its directions for use.
- If the synthetic leather is very dirty, wipe it with the method below.
 - ①Put a piece of soft cloth into water or 3% to 5% neutral detergent contained hot water and wring it out.
 - ②Wipe surface of the synthetic leather with the soft cloth.
 - ③Wipe the detergent with a piece of cloth once soaked in clean water and wrung out.
 - (4) Wipe with a piece of wrung soft cloth.
 - 5 Have the synthetic leather take natural air drying.
- If it is difficult to remove the stains on the synthetic leather, soak a piece of melamine foam bought from the market into a neutral detergent and use it wipe the product.
- Do not dry the surface by a hair drier.
- Surface of the synthetic leather may be dyed by fabric colors; therefore, be careful when wiping the product with denim or colored cloth.
- Keep these positions from long-time contact with plastics to avoid fading.
- Synthetic leather may discolor, so the position in contact with the hair dye used should be covered by a towel.










Cleaning of the plastic parts

- Put a piece of soft cloth into water or neutral detergent contained hot water, wring it out and wipe the plastic parts.
 - Do not clean the product with chemicals such as thinners, gasoline and alcohol.
- Wipe with a piece of cloth once soaked in clean water and wrung out.
 - Wring the cloth out before using it to wipe the remote controller.
- Have the plastic parts take natural air drying.

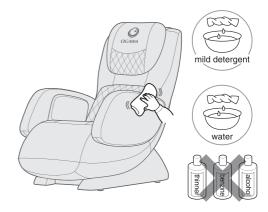

Specifications

Product Name	LUXE AMOUR MASSAGE SOFA
Model	OS3160
Power Supply	220V~
Power Frequency	50Hz
Power Consumption	120W
Timer	15 min
Dimension	When it is not tilting: $1150 \times 650 \times 1000$ mm(L \times W \times H)
Differision	When it is tilting :1380 $ imes$ 650 $ imes$ 800mm(L $ imes$ W $ imes$ H)
Weight	G.W: 64 KG
weight	N.W: 51.5KG
Power Line	Power Line 180CM
Environment Usage	Environment Temperature: 0°C~ 35°C
Liiviioiiiiiciit osage	Humidity: 20% ~ 80%
Ctorogo	Environment Temperature: -5°C~ 35°C
Storage	Humidity: 20% ~ 80%
Safety	Overload Protection
Maximum body weight of user	100KG

Contact Us



MALAYSIA Healthy World Lifestyle Sdn Bhd No. 22 Jalan Anggerik Mokara 31/47 Kota Kemuning, 40460 Shah Alam Selangor Darul Ehsan, Malaysia

Tel: +603-5121 4286 Fax: +603-5121 4386



SINGAPORE OGAWA Health-Care Pte Ltd 27 Tampins Industrial Avenue 5, T5 @ Tampines Singapore 528623

Tel:+065-6846 8588 Fax:+065-6846 7677



INDONESIA PT Healthy World Lodan Center Block O No 20 Jalan Lodan Raya No 2 Jakarta Utara 14430 Tel: +62 21-6983 1123

Fax: +62 21-6983 1124



HONG KONG, CHINA
OGAWA Health Care International (HK) Ltd
31/F,YHC Tower,1Sheung Yuet Road
Kowloon Bay
Kowloon
Hong Kong
Tel:+852 3465 6262
Fax:+852 2410 0119



VIETNAM
OGAWA Vietnam Co Ltd
2nd floor,Petroland Tower,
12 Tan Trao,Tan Phu ward
District 7
Ho Chi Minh
Tel:+84 8 3775 3093/3775 3094
Fax:+84 8 3775 3095



PHILIPPINES
O-Healthcare Solution Phil. Inc.
2303, 4th Floor, G&A Building,
Chino Roces Avenue Extension,
Makati City, Philippines

Tel: +632 889 0676 / +632 844 6851

Fax: +632 812 0421



35

36

使用前
 重要的安全事项 接地说明 设置按摩椅 使用前 产品结构 控制器说明 20 - 23 24 25 使用前 26 - 27 产品结构 30
使用方法
● 操作指南 31-33
维护
● 清洗及保养 34
重要重项

● 规格 --

● 联系我们

重要的安全事项(必须遵守)

下文列举的是使用中为防止人身、财产损害而必须严格遵守的安全事项。

■ 所有安全事项将根据因错误使用而导致危害或损害的程度,予以说明。

⚠ 警告

可能造成重伤或死亡后果的事项内容。

⚠ 注意

可能造成轻伤或财产损害的事项内容。

■ 请注意各安全事项前的符号。(下文为符号范例)



绝对禁止事项。



必须执行事项。

⚠ 警告

- 正在接受治疗或有下列症状的人,在使用本机前,应咨询医师。
 - (1) 佩戴起搏器或其他易受电子干扰的体内植入型电子医疗 器械的人
 - (2) 恶性肿瘤病人
 - (3) 心脏病人强烈时、身体虚弱时)
 - (4) 被查证丧失辨别温度能力的人
 - (5) 孕妇或刚完成分挽的人
 - (6) 因糖尿病等高度末梢循环障碍引起知觉障碍的人
 - (7) 骨质疏松症患者、脊椎骨折病人、患有扭伤或肌肉拉伤 等急性疼痛性疾病的人
- (8) 按摩部位受伤的人
- (9)体温38℃以上(有发热症状)的人 (例:急性炎症症状[如倦怠感、寒颤、血压变动等] 强烈时、身体虚弱时)
- (10) 必须静养或身体显著不适的人
- (11) 脊椎异常或脊椎弯曲的人
- (12) 患有椎间盘突出症的人
- (13) 除上述之外,身体感觉特别不适的人

否则恐发事故或造成身体不适。

- 使用中感到身体异常,请立即停止使用,并咨询医师。 否则恐发事故或造成身体不适。
- 按摩中或移动靠背、小腿・脚部按摩部时,请事先确认本机周围(本机后面、下面、前面和侧面)没有人或宠物。 使用前请务必确认靠背和后盖之间无异物或者宠物。
 否则恐发事故或造成身体不适。



- 在使用本机前,一定要掀开靠垫,以检查靠背覆盖在按摩轮活动范围上的面料是否破损或者其他部位的面料是否破损。 (无论发现多么细小的破损,都请立刻停止使用,拔掉电源插头,并将本机报修。) 在面料破损的情况下使用本机,可能引发受伤或触电的危险。
- 每次按摩请控制在30分钟内。
- 请将对身体同一部位的按摩控制在5分钟内。否则可能出现负面效果并造成伤害。
- 每次使用完毕,应将电源开关拨到"0"(关闭)位置,拔掉电源插头。
 否则可能因儿童顽皮引发事故或造成伤害。
- 请严格遵守插座和配线器具的使用规定。
- 请使用220V~,50Hz交流电。 (请勿在国外使用本品,或擅自连接变压器。) 否则可能引发触电,机体故障或因过热导致火灾。
- 请务必将电源插头插到底,使其确实地插入插座中。否则可能引发触电或因过热导致火灾。

警告

● 请定期清理电源插头上的灰尘等脏污。

否则可能因湿气等原因引发绝缘不良,从而导致火灾。

(请用干燥的抹布擦拭电源插头。)



- ●发生异常、故障时,立即停止使用,拔掉电源插头。(否则可能冒烟、起火、触电) 〈异常、故障事例〉
 - •接通电源开关后可能不动作
 - •移动电源线,有时通电有时不通电
 - •运行中发出焦臭味、异常声响
 - •按摩椅变形或者异常发热
 - → 请立即委托授权服务中心检查和修理。
- 请勿将靠垫伸入靠背和后盖之间。

否则可能会导致机体故障。

● 请握住边框进行本机搬运。

否则可能会导致机体故障或人身伤害。

● 下列人员请勿使用本机。

被医生禁止按摩的人(例:患有血栓症、重度动脉瘤、急性静脉瘤、各种皮肤炎或皮肤感染症[包括患皮下 组织炎症]的人等)

否则可能会导致病情恶化。

- ●下列人员请勿使用腰部按摩。
 - •患有急性腰痛、椎间盘突出症、腰椎移位症的人
 - •罹患变形性髋关节症等髋关节不适的人

否则可能会导致病情恶化。

- 在使用中请勿将手、手臂、脚塞入靠背覆盖在按摩轮活动范围上的面料。
- 儿童禁止使用本机。此外,请勿让儿童在本机上玩耍,或者爬到座面、靠背或扶手上。
- 请勿攀爬靠背或者扶手。
- 请勿倚靠或坐在靠背上。
- 请勿将头伸入靠背和后盖之间的活动区域。
- ●请勿让不能表达自己意思的人或没有能力操作本机的人使用本机。
- 按摩颈部时,请注意按摩轮的动向,请勿按摩前颈,请避免过重地按摩颈部。

否则可能会引起事故或造成伤害。

请勿损坏电源线及电源插头。

(请避免此类行为: 损伤、加工、强行弯曲、扭转、拉长电源线及电源插头,或将电源线及电源插头靠近发热器, 或在电源线及电源插头上系重物、或任意捆绑。)

使用破损的电源线或电源插头,可能引起触电、短路或引发火灾。请到购买本品的商店或指定的维修中心咨询 修理电源线或电源插头的方法。

● 请勿长时间使用"座侧温热"按摩。

可能出现低温烫伤*。

*即使温度相对较低(40 \mathbb{C} \sim 60 \mathbb{C}),长时间接触皮肤的同一部位没有发热、疼痛等自觉症状,也可能导致低温烫伤。

- 请勿损座侧温热(加热器)。
 - •不要将别针、针扎进本机。
 - •不要用刀具损伤。

损伤内部加热器可能导致火灾或者触电事故。



禁止

● 请勿用沾湿的手插、拔电源插头。 否则可能导致触电事故。

湿手禁止

●请勿擅自改造本机。请勿自行分解或修理本机。 否则可能导致起火、异常动作、人身伤害。

分解禁止

21

∧ 注意

- 下列人员即使目前身体健康,也请咨询医师后再使用本机。
 - (1) 因年龄增长而导致肌肉萎缩的人或身体纤瘦的人 (2) 因骨头或内脏问题而感觉腰痛的人
 - (3) 容易扭伤或容易瘀伤的人 (4) 晕车、晕船或乘坐其它交通工具时,反应异常激烈的人
 - (5) 过去曾被施予心脏手术或其它内脏手术的人

否则可能有损自身健康。

- 就坐前,请先确认本机各个部件之间没有异物。
 - (确认后盖、靠背、座面、靠垫内侧没有夹杂异物。)

否则可能因手、脚或其它物件被本机夹住,而引发事故、造成伤害或机体故障。

- 头部佩戴任何硬质饰物(如发卡等)时请勿使用本机。
- 当裤子口袋内部有硬物时(如手机、钥匙等),将其取出,然后按摩。
- 手部如有配饰请取下手表、指甲套、戒指等。 否则可能导致伤害。
- 就座前,确认按摩轮处在收纳位置。
- 按摩途中若想离开座位,必须先停止按摩椅运作,再离开座位。 否则可能引发事故或造成伤害。



- 请勿扯电源线试图拔出电源插头,一定要握住插头本身将其拔出。否则可能引发触电或短路。
- 移动本机前,必须把产品复位调节回最初位置。 否则可能造成伤害。
- 如果使用滑轮移动本机,在地板上垫上垫子等。
 否则可能在地板上留下伤痕。
- 请勿让儿童使用本产品。

否则可能因儿童误食或顽皮引发事故或造成伤害。

- 使用滑轮移动本机前,须先清空周围障碍物。 不则可能用机 息题例引发更热或造成疾患
 - 否则可能因机身翻倒引发事故或造成伤害。
- 须将本机放置在水平面上使用。 否则可能因机身翻倒引发事故。
- 因使用本产品而产生出疹、红肿、发痒等症状时,请立即停止使用,并咨询医师。
 否则可能引发事故或导致身体不适。
- 闽 闲置一段时间后使用本品,请先重新阅读一遍产品使用说明书,并确认机体运作正常后,再开始使用。
 否则可能引发事故或造成伤害。



- **请勿和其它器械同时使用。**否则可能造成事故或引起身体不适。
- 请勿将头部、腹部或皮肤紧贴按摩轮。此外,请勿将手或脚伸入按摩轮之间。
- 饮酒后请勿使用本机。
- 当鼓起的座面气囊里的空气没有被排放完时,不要站在座面上,或者跳上去,或者在上面放东西。否则可能导致事故、伤害。

↑ 注意

- 请勿将手或脚伸入本机座架与腿部按摩部之间。
- ・ 请勿将手・手臂或头伸入腿部按摩部的缝隙间。
 安全起见,结束按摩后,请一定要收纳好腿部按摩部。
- ●请勿将手・手臂或头伸入靠背和后盖之间。
- 请勿将宠物放在按摩椅上(后盖、靠背、扶手等)。
- 按摩中,请勿突然拔出电源插头,或突然关闭电源开关。否则可能造成伤害。
- 请勿站立或坐在后盖上。

否则可能导致本机翻倒,造成人身伤害。

●请勿站立或坐在扶手上。 否则可能导致人身伤害。



- 请勿站立或坐在脚部按摩部及腿置台上。
 - 否则腿置台前部旋转或者本机倾倒可能导致事故、伤害。 脚部按摩部底部撞到地板时,可能损坏地板。
- 请勿在已安装好的状态下拖动或推动本机。 否则可能损坏地板。
- 请勿在有人入座时移动本机。
 否则可能因机身翻倒引发事故或造成伤害。
- **请勿在电热毯等加热设备上使用本机。** 否则可能引起火灾。



● 请勿在浴室或其它潮湿的地方使用本机。 否则可能引发触电或机体故障。



- 请勿将水滴等物质撒在本机或遥控器上。否则可能引发触电、短路或引起机体故障。
- 省则可能引发概电、超路以引起机体故障



● 清洗及保养本机,必须先从插座上拔出电源插头。 否则可能引发触电或造成伤害。

● 停电时立刻拔出电源插头。否则可能在恢复供电时导致事故、伤害。

● 不用时,一定要从插座上拔出电源插头。 否则灰尘、湿气可能导致绝缘老化,引发漏电火灾。

接地说明

- ●本机必须接地。如果本机发生功能故障,可以使用接地来减少触电危险。
- ●本机装备了具有设备接地导线和接地插头的电源线。必须将该插头插入已完全依照当地代码和法令进行正确安装和接地的、合适的插座。

⚠ 注意

- 若设备接地导线的连接不当,则会导致触电危险。如果您对本机的接地是否正确存有疑问,请委托专业电工进 行检查。即使本机附带的插头与插座不配,也不能对其进行改造。请委托专业电工安装合适的插座。
- 本机具有接地插头。请确认本机连接至具有与插头形状匹配的插座。
- 本机不能使用转接插座。
- 如果电源线损坏,必须使用专用的电源线或从其制造商或维修部买专用组件来更换。
- 本产品具有发热表面,对热不敏感的人使用时必须注意!

设置按摩椅

1 安装位置

确保足够空间以便按摩椅可以倾斜。



- 请勿将按摩椅暴露于阳光直射或高温环境下(如:加热设备前),因为这样可能导致按摩椅合成皮革褪色或硬化。
- 为避免地板损伤,请在本机下铺上垫子。平铺垫子时,垫子的大小应足以覆盖本机座架接触地板的范围(至少90cmx53cm),如图所示。
- 安装本机时应靠近电源插座。

7 产品移动说明

方法一: 拖住扶手两侧, 然后抬起并移动。



● 由于本机较重,因此搬运时请小心,以免造成 背部拉伤。(本方法必须由两人或多人搬运。)

本机重量

约 51.5kg

※ 注意

- 1、在木地板等易损的地面上请抬起按摩 椅进行移动。
- 2、请将手伸入扶手下面托住扶手再抬起。

将本机放置在地板上

- 缓慢放下本机,小心脚部被压伤。
- 直到本机完全放平前,请勿放开本机。如突然松手,可能导致本机损坏。
- 地板可能受损,因此,建议在地板上 铺上垫子等物品。

⚠ 注意

- 请勿在未安装好的状态下拖动或推动本机。
- 如需在使用后脚轮移动本机建议在移动位置下方铺上垫子,以免地板划伤。
- 请勿在有人入座时移动本机。否则可能因跌倒导致本机故障或人身伤害。
- 移动本机前请关机并确认靠背与脚部完全复位。否则可能导致本机故障或人身伤害。

方法二: 使用后脚轮移动按摩椅。

注意

如果使用后脚轮移动本机,请在地板上垫上垫子,否则可能在地板上留下划痕。

- ① 按下控制面板待机键"①",关闭所有功能。
- ② 将本机复位到原始位置。 将本机后下方电源开关按到"O"(关闭) 位置,拔下电源插头。

 按图示方式,将椅子向下后方倾倒约45度进行移动。
 注意:下压幅度请勿太大,避免椅子完全倾倒导致 头罩损坏。



使用前

1 检查周围

确保本机周围没有人、宠物及其他物体。



2 确保本机缝隙间没有异物 按摩前请确认按摩椅缝隙间没有夹住异物。

⚠ 注意

- 不要将手、手指、脚、头伸进腿部与座部、扶手的 间隙内。
- 入座前,请先确认本机各个部位之间没有异物。
- 请勿将手、手臂或头深入靠背与后盖之间。
- 请勿将宠物放在按摩椅上(座部、靠背、扶手、腿部等位置)。



2 打开电源

按摩前请确认腿部等位置没有夹住异物。

 
⚠ 警告

- 使用前请检查电源线及电源插头是否损坏。
- 入座前,请先确认本机各个部位之间没有异物。 请务必将电源插头插到底。
 否则可能引发触电或过热导致火灾。
- 请使用220V~,50Hz交流电。 请勿在国外使用本产品、或擅自连接变压器。 否则可能引发触电、机体故障或过热导致火灾。
- 请勿用沾湿的手插、拔电源插头。

1 将电源插头插入电源插座。



② 将本机后下方电源开关按到"I"(开启)位置。




使用前

4

确认按摩轮处于收纳位置

按摩轮未处于收纳位置时,按下控制面板待机键"也"返回收纳位置。

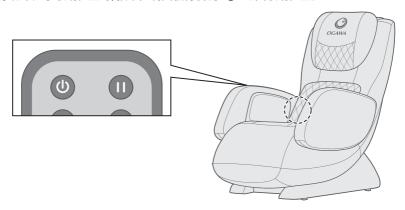

5

确认面料未破损存在裂缝


重点检查区域:靠背覆盖在按摩轮活动范围上的面料。

⚠ 注意

在使用本机前,一定要掀开靠垫,检查图示的重点区域面料是否破损。其他部位也要确认面料是否破损。(无论发现多么细小的破损,都请立刻停止使用,拔掉电源插头,并将本机送修。)在面料破损的情况下使用本机,可能引发伤害或触电的危险。




产品结构

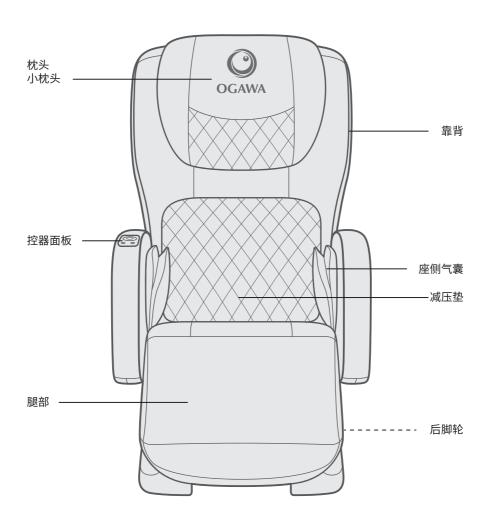

产品结构

功能分布示意 头颈至座部: -行走揉捏、捶打 推拿按摩 座侧: 气囊按摩 舒适温热 腿部: 行走变频 捶打按摩

控制器说明

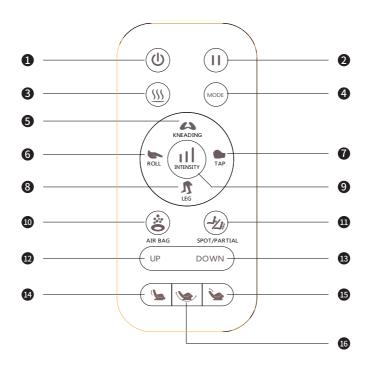

- 1. ① 待机键 —整机按摩功能启/停键 9. | 强度键 —按摩强度选择键

- 4. 模式 模式键 —自动模式选择键
- 5. 🚣 揉捏键 —揉捏按摩功能启/停键 14. 🖢 升背键 —按摩椅升背调节键
- 6. **★ 推拿键** —推拿按摩功能启/停键 15. **★ 倒背键** —按摩椅倒背调节键
- 7. 🏪 捶打键 —捶打按摩功能启/停键 16. 🐸 摇篮模式键 —摇篮模式启/停键
- 8. 小腿键 —小腿捶打按摩功能启/停键

- 2. 【】 暂停键 整机暂停功能控制键 10. 🔅 充气键 座侧气囊充气模式选择键
- 3. ∭ 加热键 —座侧气囊温热功能启/停键 11. 型; 定点/区间键 —定点/区间功能选择键
 - **12/13.** 上下 **上/下键** —按摩机芯上下调节键

操作指南

按键说明:

1. "(「)"待机键 — 整机按摩功能启/停键

产品处于待机状态时按一下此键开机,提示音"嘀"一声,对应指示灯亮,默认定时15分钟。 定时时间结束,按摩椅自动停止按摩功能。此时按一下此键关机,提示音"嘀"一声对应指示灯闪烁,按摩椅复位。复位完成,对应指示灯熄灭。

运行状态时按一下此键关机,提示音"嘀"一声,对应指示灯闪烁,按摩椅复位。复位完成,对应指示灯熄灭。

开机状态下按一次此键暂停所有功能,提示音"嘀"一声,对应指示灯亮。再按一次此键,提示音"嘀"一声,对应指示灯熄灭,按摩椅恢复工作状态。

注:在按摩椅关机和复位过程中,若有突发情况,可按此键急停。

3. "[∭]"加热键 — 座侧温热功能启/停键

开机状态下,按一次此键开启座侧温热功能,提示音"嘀"一声,对应指示灯点亮; 再按一次此键,关闭座侧温热功能,提示音"嘀"一声,对应指示灯熄灭。

4. "模式"模式键 — 自动模式选择键

开机状态下,按此键开启自动模式,默认开启座侧气囊充气功能弱档,小腿捶打功能开启。第一次按此键开启自动模式一(全身模式),提示音"嘀"一声,对应指示灯点亮(绿灯);第二次按此键开启自动模式二(肩颈模式),提示音"嘀"一声,对应指示灯点亮(蓝灯);第三次按此键开启自动模式三(腰臀模式),提示音"嘀"一声,对应指示灯点亮(红灯);第四次按此键退出自动模式,提示音"嘀"一声,对应指示灯熄灭。依次循环。

5. "操捏"揉捏键 — 揉捏按摩功能启/停键

开机状态下,按一次此键开启揉捏按摩功能,提示音"嘀"一声,对应指示灯点亮; 再次按此键关闭揉捏按摩功能,提示音"嘀"一声,对应指示灯熄灭。

注:自动模式下按此键,则退出自动模式,单独开启揉捏按摩功能。

操作指南

6. "►"推拿键 — 推拿按摩功能启/停键

开机状态下,按一次此键开启推拿按摩功能,提示音"嘀"一声,对应指示灯点亮; 再次按此键关闭推拿按摩功能,提示音"嘀"一声,对应指示灯熄灭。

注:自动模式下按此键、则退出自动模式、单独开启推拿按摩功能。

7. "●"捶打键 — 捶打按摩功能启/停键

开机状态下,按一次此键开启捶打按摩功能,提示音"嘀"一声,对应指示灯点亮; 再次按此键关闭捶打按摩功能,提示音"嘀"一声,对应指示灯熄灭。

注:自动模式下按此键、则退出自动模式、单独开启捶打按摩功能。

8. "小腿键 — 小腿捶打功能启/停键

开机状态下,按一次此键开启小腿捶打按摩功能,提示音"嘀"一声,对应指示灯点亮; 再次按此键关闭小腿捶打按摩功能,提示音"嘀"一声,对应指示灯熄灭。

注:自动模式下按此键,则小腿捶打功能停止,再次按此键开启小腿捶打功能。

9. "川"强度键 — 按摩强度选择键

在自动模式/揉捏模式/敲击模式/小腿模式开启状态下:

依次按此键在"弱档(绿) - 中档(蓝) - 强档(红)"三档中循环切换按摩强度,每按一次提示音"嘀"一声,对应指示灯点亮。

10. "※"充气键 — 座侧气囊充气强度选择键

开机状态下,按此键调整座侧气囊充气强度。

自动模式下:

按此键在"中档(蓝)-强档(红)-充气关(熄灭)-弱档(绿)"四个状态下循环切换,每按一次提示音"嘀"一声,对应指示灯点亮。自动模式下默认强度为"弱档(绿)"。

手动模式下:

按此键在"弱档(绿)-中档(蓝)-强档(红)-充气关(熄灭)"四个状态下循环切换,每按一次提示音"嘀"一声,对应指示灯点亮。手动模式下默认强度为"弱档(绿)"

操作指南

11. "少"定点/区间键 — 定点/区间功能选择键

揉捏或捶打按摩功能开启状态下:

第一次按此键,退出全程行走按摩,开启定点揉捏或捶打按摩功能,提示音"嘀"一声,对应指示灯点亮(绿);

第二次按此键,退出定点按摩,开启区间行走揉捏或捶打按摩功能,提示音"嘀"一声,对应指示灯点亮(蓝);

第三次按此键,退出区间行走揉捏或捶打按摩功能,开启全程行走按摩,对应指示灯熄灭; 依次循环。

推拿按摩功能开启状态下:

第一次按此键,对应指示灯点亮(绿),无功能反应;第二次按此键,对应指示灯点亮(蓝),开启区间行走推拿按摩功能;第三次按此键,对应指示灯熄灭,退出区间行走推拿按摩功能。

12/13. "上下"上/下键 — 按摩机芯上下调节键

在肩颈位置自动检测后发出嘀嘀声时或定点/区间功能开启状态下:

按"上"或"下"键调整机芯向上或向下行走,对应指示灯闪烁。

注: 肩颈位置调节时指示灯不亮, 定点功能下绿灯闪烁, 区间功能下蓝灯闪烁。

14. " " "升背键 — 按摩椅升背调节键

通电状态下,按此键调整按摩椅姿势到立式状态,提示音"嘀"一声,对应指示灯点亮; 再次按此键停止按摩椅姿势调节,提示音"嘀"一声,对应指示灯熄灭。依次循环。

15. "❤"倒背键 — 按摩椅倒背调节键

通电状态下,按此键调整按摩椅姿势到躺式状态,提示音"嘀"一声,对应指示灯点亮; 再次按此键停止按摩椅姿势调节,提示音"嘀"一声,对应指示灯熄灭。依次循环。

16. "举",摇篮模式键 — 摇篮模式启/停键

通电状态下,按此键开启摇篮模式,提示音"嘀"一声,对应指示灯点亮。 再次按此键退出摇篮模式,提示音"嘀"一声,对应指示灯点熄灭。

操作完成

使用完毕之后,请按下"^①"待机键.产品将自动复位,复位完成后,请按下按摩椅后下方的电源开关至"O"的位置。长时间不用,请拔出电源插头。

清洗及保养

清洁合成皮革部分

使用柔软的干布擦拭皮革。

- ■切勿使用诸如稀释剂、汽油、酒精等化学品清洁本机。
- ●使用市面销售的皮革保养品(抹布)时,请遵照其使用说明。
- ●如果合成皮革特别脏,则通过以下方式擦拭。
 - ①将软布浸入水中或含3%至5%中性洗涤剂的热水中,然后 彻底拧干。
 - ②使用上述软布擦拭皮革表面。
 - ③使用浸过清水且已彻底拧干的布料擦掉清洁液。
 - ④使用拧干的软布擦拭。
 - ⑤使其自然风干。
- ●难以去除污渍时,请将在市面上购买的三聚氰胺泡棉浸入中性洗涤剂中,然后用它擦拭本机。
- ●不要使用吹风机吹干表面。
- ●由于布料的颜色会染到合成皮革的表面上,<u>因此在使用牛</u>仔布和彩色布料擦拭本机时务必小心。
- ●不要使这些部位长时间与塑料接触,因为这会导致褪色。
- ●合成皮革有变色的可能,所以在使用染发剂时,请将接触的部分用毛巾覆盖。







清洁塑料部分

- 1 将软布浸入水中或含有中性洗涤剂的热水中,拧干后,擦拭本机塑料部。
 - ●切勿使用诸如稀释剂、汽油、酒精等化 学品清洁本机。
- **2**使用浸有清水且已彻底拧干的布料擦拭。
 - 擦拭控制面板前请务必拧干布料。
- 3 使其自然风干。



Contact Us



MALAYSIA Healthy World Lifestyle Sdn Bhd No. 22 Jalan Anggerik Mokara 31/47 Kota Kemuning, 40460 Shah Alam Selangor Darul Ehsan, Malaysia

Tel: +603-5121 4286 Fax: +603-5121 4386



SINGAPORE OGAWA Health-Care Pte Ltd 27 Tampins Industrial Avenue 5, T5 @ Tampines Singapore 528623

Tel:+065-6846 8588 Fax:+065-6846 7677



INDONESIA PT Healthy World Lodan Center Block O No 20 Jalan Lodan Raya No 2 Jakarta Utara 14430 Tel: +62 21-6983 1123

Fax: +62 21-6983 1124



HONG KONG, CHINA OGAWA Health Care International (HK) Ltd 31/F,YHC Tower,1Sheung Yuet Road Kowloon Bay Kowloon Hong Kong

Tel:+852 3465 6262 Fax:+852 2410 0119



VIETNAM
OGAWA Vietnam Co Ltd
2nd floor,Petroland Tower,
12 Tan Trao,Tan Phu ward
District 7
Ho Chi Minh

Tel:+84 8 3775 3093/3775 3094 Fax:+84 8 3775 3095



PHILIPPINES
O-Healthcare Solution Phil. Inc.
2303, 4th Floor, G&A Building,
Chino Roces Avenue Extension,
Makati City, Philippines

Tel: +632 889 0676 / +632 844 6851

Fax: +632 812 0421

产品规格

产品名称	LUXE AMOUR MASSAGE SOFA
型号	OS 3160
额定电压	220V~
额定频率	50Hz
额定功率	120W
额定时间	15 分钟
尺寸(长 * 宽 * 高)	直立状态: 1150×650×1000mm(L×W×H)
	倒背状态: 1380×650×800mm(L×W×H)
重量	毛重:约64公斤
里里	净重:约51.5公斤
线长	电源线长: 180厘米
使用环境	环境温度: 0℃~ 35℃
医角纤统	相对湿度: 20%~80%
储存环境	环境温度: -5℃~ 35℃
	湿度水平: 20% ~ 80%
安全功能	具备过热,过流保护
用户最大体重	100公斤