

- Reads all instruction before using this device
- Keep these manual for future use
- Product image or content may slightly differ due to product quality improvements

 
 
 
### Warranty Claims

1. Warranty is not transferable.
2. This warranty is effective only if the product is purchased from OGAWA or any authorized distributors.
3. Proof of purchase (original receipt) is required for all warranty repairs.
4. All implied warranties, including but not limited to these implied warranties of fitness and merchantability, are limited to the duration stated in the warranty policy.
5. Damage due to misuse, improper treatment and unauthorized modification and repair are not covered by this warranty.
6. Warranty does not cover accessories and attachments which do not belong to the product.
7. Warranty is not effective to rental, business, commercial, institutional or other nonresidential users.
8. All services covered by this warranty must be approved by OGAWA and repaired by authorized technicians only.
9. If replacement parts for defective materials are not available, OGAWA reserves the right to make substitution in lieu of repair or replacement.

### Performance Index

|                   |  |
|-------------------|--|
| Product Name      | SILVioMATE   |
| Rated Voltage     | 24V $\equiv$ 1.75A   |
| Product Usage     | Removes pollutants such as particulate matter, gas pollutants and microorganisms in the air. |
| Filter Type       | Silver HEPA-13 Filter  |
| Rated Power       | 33W  |
| Particulates CADR | 250m <sup>3</sup> /h   |
| UVC               | 10mW   |
| Ionizer           | $\geq 5 \times 10^6$ pcs/cm <sup>3</sup>   |
| Applicable area   | 17-30 m <sup>2</sup>   |
| Product size      | 221x221x390mm  |
| Weight            | 3.2kg  |


### Product Structure

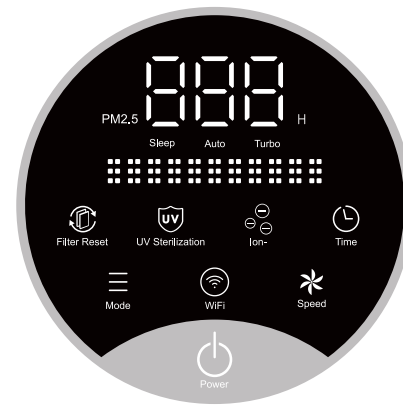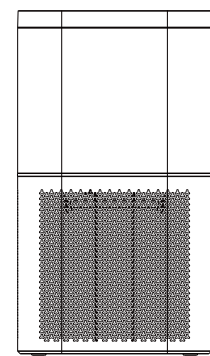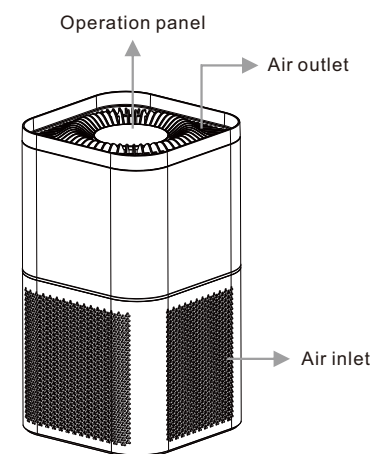

### Installation instructions


#### ◆ Filtration installation

 Insert filter mesh into the bottom of machine and twist clockwise, tighten filter mesh.

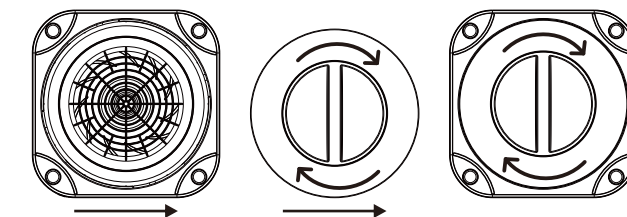

#### ◆ Removal filter mesh

 From the bottom of machine, twist counterclockwise, rotate and pull out the filter mesh.

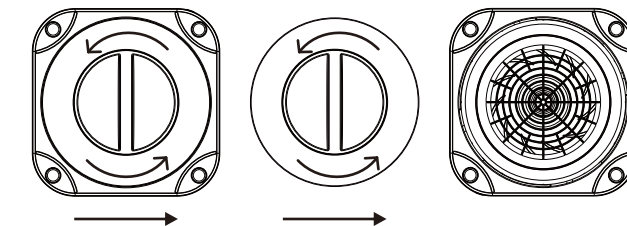

### How to use

**Power on:** The buzzer sounds once after the machine is powered on, and the power indicator lights red and enters into standby state.

**Power:** After the power button is turned on, the machine enters the operating mode, and automatically turns on the negative ion and UV lamp functions, and the machine works in the second gear.

**Speed:** After pressing the wind speed key, the display shows 1, 2, 3, 4, (cycle), the first time the key is pressed, the current gear will be displayed. After pressing the second time, the gear is adjusted.

**Wifi:** Press and hold the "WIFI" button for 5 seconds in the power-on state, the "WIFI" button flashes, the machine enters the network configuration mode, and the "WIFI" icon is on after the network is successfully configured.

**Time:** Touch the timing, the digital display panel displays 1-8 hours cycle, long press for two seconds to cancel the timing. After canceling the timing function, the timing icon will not light up, and the digital tube will display the current gear position.

**Ion-:** The negative ion button is to switch the negative ion function, and the icon will be highlighted when the negative ion function is turned on. The icon is half bright when the negative ion is off.

**UV light:** The UV button is to switch the UV function. When the function is turned on, the height of the button icon is turned off. When the button icon is half-lit.

**Filter reset:** When the filter replacement icon flashes white slowly, you need to replace the filter. Press and hold the filter reset button for 3 seconds and then restart the timer (1500 hours).

**Mode:** After pressing the mode button, switch to "Sleep mode, Auto mode, Turbo mode"

**Sleep:** In Sleep mode, the sleep icon is on and the rest of the icons are off. In any case, press any button to wake up the button lights and display, and then press the wind speed button/mode button/off button to exit the sleep mode.

**Auto:** In Auto mode, the extreme speed icon lights up to limit the working time for 2H, and then jump to the automatic mode.

**Turbo:** In Turbo mode, the automatic icon lights up, when the PM2.5 data is lower than 20 and continues. After 10 minutes, the machine automatically enters sleep mode, when the sensor data is higher than 50. The machine automatically exits sleep mode. (This function is invalid in non-automatic mode)

### Filter maintenance

#### 1. Pre-filter+hepa +carbon 3-in-1 Filter

When the machine is timed to 1,500 hours, the button icon slowly flashes white light, the icon prompts the user to replace the filter mesh. Press this button for 3 seconds to reset the replacement prompt. (The filter mesh replacement prompt function is reset, not the current accumulated time. After reset, the time will be increased upwards, and it will be prompted for replacement after the next 1,500 hours)

- Place the filter in a ventilated place so that the harmful gases and bacteria on the surface of the filter can be volatilized. Do not expose it to excessive sunlight.
- Do not wash the filter with water.

#### ※Tips

- Unplug the power plug before cleaning and maintenance;
  - Do not operate with the filter removed (no dust removal effect, and the dust that is inhaled may cause equipment failure);
  - Unplug the power cord when it is idle for a long time (it will also consume power in the standby state);
  - Depending on the place of use and the method of use (for example, households with a large number of smokers or areas with severe air pollution), the filter replacement cycle may be shortened. If the filtration effect is not obvious, replace the filter in time.
- When replacing the filter, please turn off the power first.

## Precautions

### ◆Installation instructions

1. Do not place in the following places:

sunlight

• Direct sunlight or facing the air outlet and heated places

(may cause deformation, Deterioration, discoloration, and failure).

• Equipment accessories such as TVs and radios (which may cause

image distortion and noise). Please place it at a distance of 1m or

more. At the same time, if the same socket is used with these

devices, image plugging and noise may occur when the power

plug is inserted.

When this happens, plug the power cord into a different outlet.

2. For indoor dust such as pollen, the product should be placed

on the ground. Since pollen, dust, etc. are likely to fall near the

floor, it is recommended to place the product on a flat floor in

the room.

3. In order to effectively circulate the air in the room.

In order not to block the air inlet and outlet, place the product

about 30cm or more from the left and right sides of the wall,

furniture, curtains, etc. In order to use this product more

effectively, please keep the back of the product at least 20cm

away from the wall.

 
 
 
 
4. Do not place objects on the main unit (otherwise it may

cause the machine to malfunction). Special Note: Do not place

magnets and metal objects.

5. Do not block the air inlet and outlet, for example, do not

place objects on the air outlet. Or in front of the air inlet.

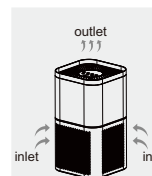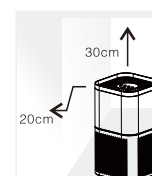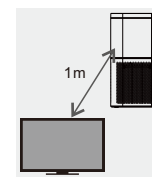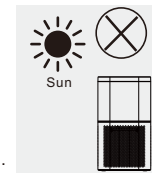

## Warning

### Prohibited

1. The machine is prohibited from moving or shaking while it is running. Do not pull on the power cord while moving or storing it. Pulling the power cord may cause a short circuit or damage to the inside of the power cord, resulting in fire or electric shock.

2. Do not damage the power cord or plug, and do not cut, excessively twist, pull, or twist the power cord. If the power cord is damaged, it must be replaced by the manufacturer, service department or professional to avoid danger. Non-professionals are prohibited from disassembling the machine to avoid the risk of electric shock.

3. The plug and hand should not be exposed to water before plugging in the power plug, otherwise there is a danger of electric shock.

4. Do not use power supplies, universal sockets or connected devices that exceed the rated value. 24V power adapter. Using a universal outlet that exceeds the rated value or connecting the power supply may cause the power cord to overheat and cause a fire.

5. Do not touch the power plug with wet hands, which may result in electric shock.

6. Do not put your fingers or metal objects into the gap of the air outlet, otherwise it may cause electric shock or injury. Do not allow water, flammable detergents or other liquids to enter the product to avoid electric shock or fire.

7. This product is not a substitute for normal ventilation equipment, daily vacuum cleaners and range hoods used in the kitchen.

8. Do not use this product in gas appliances, heating devices or stove accessories.

9. Do not use this product in a wet or hot environment such as a bathroom, toilet or kitchen.

10. Never place products in such locations

 
 
 
 
• Unstable locations (otherwise the product may fall or fall over, resulting in injury, electric leakage, electric shock or fire.)

• Locations that are hot, humid, or wet, such as bathrooms (air purifiers may cause electric shock or fire due to electric leakage.) a place where the kitchen emits soot

11. Do not use air purifiers in indoors with incense-based insecticides.

• Chemical residues may accumulate in the machine and then be released from the air outlet to endanger your health.

• After using the insecticide, allow the room to be thoroughly ventilated before using the air purifier.

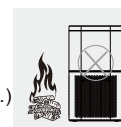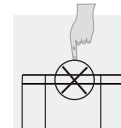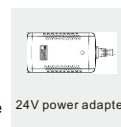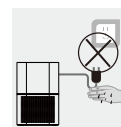

12. It is not recommended to use an air purifier when burning incense or mosquito coils, otherwise the filter of the air purifier will leave an odor.



### Mandatory matters

**Mandatory matters**  
**1. Turn off the power of the machine immediately when any of the following conditions occur (may cause electric shock, sparks or smoke)**

- There is abnormal sound or vibration during operation.
- The product is abnormally hot and has a burnt odor.

**2. Please clean the power plug regularly**

- If the power plug is dusty, moisture may damage the insulated part of the plug, resulting in a fire.
- If the appliance is not used for a long time, please unplug the power cord.

**3. Be sure to disconnect the power before performing maintenance on the appliance.**

- The product may suddenly start, causing electric shock and injury.

**4. Plug the plug securely into the power outlet (if the plug is not securely inserted, it may cause electric shock due to overheating or even cause a fire.)**

 
- Do not use a damaged plug or a loose power outlet.

**5. Please pull the power plug from the insulated part of the hand-held plug.**

- Pull the power cord to pull off the power plug, which may cause damage to the power cord, electric shock, short circuit, or fire.

**6. When any of the following conditions occur, please turn off the power of the machine immediately and look for the maintenance department.**

- The switch does not work.
- The power cord or plug is abnormally hot.
- I noticed an abnormal sound or vibration.
- There are any other abnormalities or malfunctions.



**7. Non-professionals are prohibited from disassembling the machine to avoid the risk of electric shock.**

For IEC: This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

For EN: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

The user manual can also be checked and downloaded from our website:

The symbol on the product or on its packaging indicates that this product may not be treated as household waste.

Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.



## Troubleshooting

### ◆Common fault phenomenon, fault code description and troubleshooting

| Fault phenomenon  | Inspection / solution   |
|---|---|
| Can't turn on or press button no response   | 1. Is the power cord plug plugged in?<br>→ Plug in the power cord.  |
| Button no response  | 1. Is the filter dirty?<br>→ Clean the filter.<br>2. Is the filter not replaced for a long time?<br>→ Replace the filter with a new one.  |
| The purifier runs for a long time but the air quality is not significantly improved | The filter alarm light is on: it indicates that the timing of the regular replacement of the filter has reached the set value. At this time, reset the filter after replacing the filter. |

## Contact Us



**MALAYSIA**  
 Healthy World Lifestyle Sdn Bhd  
 No.22 Jalan Anggerik Mokara 31/47  
 Kota Kemuning, 40460 Shah Alam  
 Selangor Darul Ehsan, Malaysia  
 Tel : 1800 88 4688

## WiFi Instructions

### 1. Scan and download

1) Download "Smart Life" app from Google Play Store or Apple Store.

2) Log in the APP after registration.  
 (suitable for Android or iOS system)

### 2. Add device

1) Click to add device and on add Manually section choose category "Small Home Appliance".

2) Under "Small Home Appliance", select Air Purifier (WIFI).

### 3. Configuration mode

1) Press and hold the "WIFI" button for 5 seconds in the power on state.

(On the product)

2) On the app, select "confirm the indicator is blinking rapidly".

3) you will see the device appear on the screen once detected.

4) select the device to connect it.