


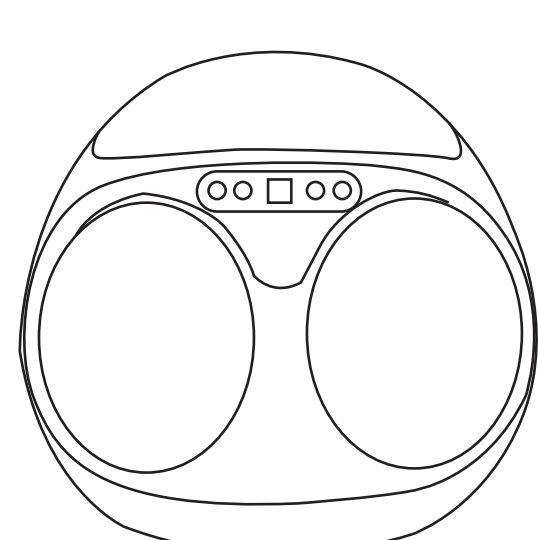

iReflex

Foot massager



User Manual
OF 1731 使用手册



iReflex

Foot massager

User Manual
All information is correct at the time of print

CONTENTS

| | |
|-------------------------|----|
| Safety Instructions | 03 |
| Warranty Claims | 05 |
| Main Unit & Accessories | 06 |
| Controller Diagram | 06 |
| Product Operation Guide | 07 |
| Product Maintenance | 08 |
| Troubleshooting | 09 |
| Product Specifications | 10 |
| Contact Us | 11 |

Safety Instructions

- Usage environment**
 - Do not use the appliance in a wet condition or dusty environment as this may result in malfunction or electric shock.
 - Do not use the appliance in the bathroom.
 - Do not use the appliance on the bed.
 - Do not place or store the appliance where it can fall or be pulled into a tub or sink. Place the appliance in a safe location.
 - Do not sit on the appliance.
 - Do not expose the appliance to a heater or direct sunlight.
- Health Precautions**

If you are experiencing health complications or conditions as stated below, please consult your doctor before use:

 - Suffering from heart disease
 - Pregnancy
 - Any health concerns
- When the product should not be used**
 - If the use exceeds 15 minutes at one time.
 - This unit should not be used by children or invalids without adult supervision.
 - Do not use this product before sleep.
 - If the fabric cover is torn.
 - If water is accidentally spilled onto the appliance.
 - If the user feels abnormal or severe pain during the massage.
 - If the user detects any malfunction or other abnormal conditions during operation.
 - If there is lightning.
- Caution and warning**
 - Unplug the appliance from the outlet when not in use
 - Do not use any attachments that are not recommended by OGAWA
 - Do not operate this appliance if it has a damaged cord or plug. Please return the unit to OGAWA Service Center for examination and repairs.


Safety Instructions

- Do not drop or insert any object into any opening.
 - Handle heated surfaces carefully. The unattended use of the heated surfaces by children or invalids may be dangerous.
 - Do not lift or carry this appliance by the power cord or any cord.
 - This appliance is designed only for personal use, and not for professional purposes.
 - Do not cover the appliance during operation.
 - Do not crush the appliance and avoid any sharp folds.
- v. Note**
- To ensure safe and proper use of the appliance, do not operate it before reading this user manual carefully first.
 - The appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge. They need to be supervised and instructed about its usage by a person responsible for their safety.
 - Extensive usage could lead to excessive heating and a shorter product lifespan. Should this occur, discontinue the use and allow the unit to cool before operating again.
 - For people under medication or with a medical condition, please consult your doctor before use. Please do not use the product if you are not feeling well.
 - If the appliance is used in a cold room, do not increase the room temperature abruptly. It is advised that the temperature is gradually increased to a normal level.
 - If the appliance is stored in a cold place and being taken into a warm environment, please wait one hour before use to get the optimum massaging level.
 - Do not remove the cover of the appliance. Mishandling the internal components may result in malfunction or electric shock.
 - Do not connect or disconnect the power plug from the electrical outlet with wet hands.
 - Do not use the appliance if the electrical outlet is loose.

Warranty Claims

- Warranty is not transferable.
- This warranty is effective only if the product is purchased from OGAWA.
- Proof of purchase (original receipt) is required for all warranty repairs.
- All implied warranties, including but not limited to these implied warranties of fitness and merchantability, are limited to the duration stated in the warranty policy.
- Damage due to misuse, improper treatment and unauthorized modification and repair are not covered by this warranty.
- Warranty does not cover accessories and attachments which do not belong to the massage unit.
- Warranty is not effective to rental, business, commercial, institutional or other non-residential users.
- All services covered by this warranty must be approved by OGAWA and repaired by authorized technicians only.
- If replacement parts for defective materials are not available, OGAWA reserves the right to make substitution in lieu of repair or replacement.

Main Unit & Accessories

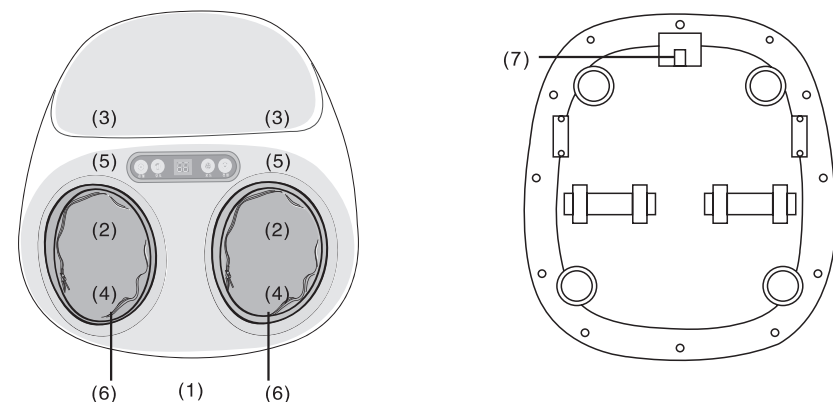

- Middle: control panel
- Middle-bottom: Scrapping massager and heating
- Front-bottom: Roller massager
- Rear-bottom: Kneading massager
- Surface: Air pressure for surface and heel
- Foot cover: washable foot cover
- Connection plug

Product Operation Guide

- Preparation before use**
 - Heating. When you turn on the heating -HI means heating is ON, HF means heating is OFF
 - Strength. L1 means strength low, L2 means strength middle, L3 means strength high
 - Mode. Including 4 different massage modes
 - Power. On/Off
- Prepare before use
 - Press the heating button to control heating ON/OFF
 - Press the strength button to control L1, L2 or L3
 - Press the mode button to control P1, P2, P3, P4
 - Model P1 and P2 including air pressure and roller massager both
- MESSAGE MODES:**
- P1 - roller massager works with air bag every 26S and stops for 1S.
 - P2 - roller massager working with air bag every 14S and stops for 1S
 - P3 - roller massager works only
 - P4 - roller massager does not work, only air bag works

Product Maintenance

- TO STORE**
- Place the massager in this box or in a safe, dry and cool place. Avoid any contact with sharp edges or pointed objects that might cut or puncture the surface.
 - Please wind up and store the power cord under the appliance bottom frame. Do not hang the unit by the power cord.
- TO CLEAN**
- Close the power button and unplug the unit before cleaning.
 - Clean only with a soft, slightly damp sponge.
 - The attachable cloth can be used to clean the appliance.
- CAUTION**
- Avoid using any corrosive detergent, such as Benzene or diluents to clean the appliance.
- MAINTENANCE**
- Keep the appliance clean and store it away from wet conditions.
 - If the appliance is not used for a long time, please use a dust cover (please buy it by yourself) to cover the appliance, to avoid any dust on the product.

Troubleshooting

This massager is controlled by an integrated chip and is susceptible to power surges from +10% to -15%. Due to this, the massager might display the following:

| Conditions | Solutions |
|--|---|
| Not operating | 1. Check if the plug is connected properly. 2. Press the "POWER" button. |
| During operation, the appliance is not operating | 1. Check the plug is connected properly. 2. Press the "POWER" button again. 3. After the appliance has cooled down, press the "POWER" button again. |

Product Specifications

| Product Name | iReflex |
|----------------------------------|-------------------------|
| Model number of the product | OF 1731 |
| Power source | 220-240V~ |
| Power frequency | 50~60Hz |
| Power consumption | 36W |
| Timer | 15 minutes |
| Dimensions (Length*width*height) | L410 x W370 x H230 (mm) |
| Weight | 4.7kg |

Contact Us


 MALAYSIA
 Healthy World Lifestyle Sdn Bhd
 No. 22 Jalan Anggerik Mokara 31/47
 Kota Kemuning, 40460 Shah Alam
 Selangor Darul Ehsan, Malaysia
 Tel : +603-5121 4286
 Fax : +603-5121 4386