

User Manual OF2005 使用手册







All information is correct at the time of print



Safety Instructions	03
Warranty Claims	06
Product Parts	07
Product Features And Operation Illustrations	80
Product Operation Guide	09
Product Maintenance	13
Troubleshooting	14
Product Specifications	15
Contact Us	16





Thank you for purchasing OGAWA OmKnee 3.0 leg massager. Please read the Safety Precautions carefully before using the leg massager. The Safety Precautions are divided into 'warnings' and 'attention' in terms of the degree of danger. This book should be kept available for future reference after reading. In case of user manual get lost, user manual can also be downloaded from our website.

Safety Instructions

a) Important safety instructions

- To ensure a safe and proper operation, please read the instruction manual carefully before using this product.
- Use this product only as described in this manual.
- Always unplug this product from the electrical outlet immediately before cleaning.
- Do not use this product if you have sensitive skin, neuropathy
 Don't let children or people with mental disabilities use the heating function without proper supervision. Improper use may be dangerous.
- Do not operate this product under a blanket or when covered. Over-heating can occur and cause fire, electric shock or injury.
- Do not cover this product in order to avoid electrical faults or damages due to excessively high motor temperature.
- Stop the massage immediately if you feel any discomfort.
- Never operate this product if it has been dropped, has a damaged cord or plug;
 experiences a malfunction, or if it has been dropped in water. Please contact an authorized service centre to do the necessary check and repair.
- Do not use the components that are not recommended by OGAWA.
- Do not insert any objects into any openings in the product.
- If you want to cut off the power supply, please make sure you have turned off all the
 operating controls, as well as remove the power plug from the socket.
- Please do not use this product as a medical device. If you need a professional diagnosis or treatment, please consult a professional medical person.

b) Operating Environment Precautions

- Do not use this massager in humid or extremely dusty environments to avoid malfunction.
- Do not use this massager at a temperature above 40 degree centigrade.
- Do not use this massager outdoors.
- Avoid placing or operating this massager in direct sunlight or near a heating appliance, stove.







c) User precautions

- Make sure that this product is far away from any hot surfaces.
- Please consult your doctor before use for those who have the following diseases:
 - Those who have heart disease, malignant tumor, spinal scoliosis, osteoporosis, etc.
 - Those who are pregnant or having a menstrual period.
 - Those who have a physical discomfort, fever, a swelling or inflammation, bruises, allergies, etc.
 - Those who are warned by the doctor not to do any massage to avoid injury or physical discomforts such as blood clots (thrombosis), severe aneurysm, acute venous tumor, all kinds of skin inflammation, infectious skin disease (including subcutaneous tissue inflammation), etc.
 - Warnings: Do not use the massager together with the following medical instruments.
 - 1) Those who are using a pacemaker or other implantable medical equipment.
 - 2) Those who are using an artificial heart.
 - 3) Those who are wearing an electrocardiograph for similar medical equipment.

Otherwise it will cause malfunction for those medical equipment, putting the user's life in danger.

d) Precautions for power supply

- Do not turn on the switch when your hands are wet.
- Do not immerse in or spray water or liquid on the control power switch.

e) Cord/Plug Precautions

- Do not connect or remove the plug with wet hands. Otherwise you will suffer an
 electric shock or a product malfunction.
- Do not pull the wires when you pull out the power plug. Please hold the plug itself.
- As the default operating time is 15 minutes, all the functions will stop working after 15 minutes. Turn off the main ON/OFF switch when not in use
- Keep the cord away from hot surfaces.
- Do not place the power plug under the product or any heavy items.





Safety Instructions

- Do not wind the power plug around the product lest it should be damaged and cause an electric shock or fire.
- Do not operate this product if it has a damaged cord or plug.
- Do not use this product if the power socket is loose.
- Do not carry this product by its supply cord or use the cord as a handle.
- When the power plug is damaged, please call the service centre or an authorized technical person for the necessary check and maintenance.

Attention

- Do not fall asleep during massage.
- Do not use this product while you are drunk or physically uncomfortable.
- Don't stand on the product or put a heavy weight on it.
- Do not use this product for more than 30 minutes.
- Do not use this product if the cloth cover is worn out.
- Do not use this product within an hour before or after a meal.
- When you are using the rollover function, when the flip angle has reached its maximum, please do not continue to flip hard, or it may damage the product.
- When you are using the product at a low room temperature, do not suddenly use
 the heat function. You can adjust the room temperature to normal room temperature,
 before starting the heat function.
- When moving this product from a low temperature storage place to a warmer setting, it may cause malfunction due to water vapor gathered in the components. Set the product in a normal room temperature for one hour before using it.
- Do not use this product if you find any components damaged or the product in an abnormal condition.
- When current interruption occurs during your massage, try to avoid further damage due to sudden power restoration.
- Stop using the product if there is thunder and lightning.





Warranty Claims

- 1. Warranty does not cover accessories and upholstery.
- 2. Warranty is not transferable.
- 3. This warranty is effective only if the product is purchased from OGAWA.
- 4. Proof of purchase (original receipt) is required for all warranty repairs.
- 5. All implied warranties, including but not limited to these implied warranties of fitness and merchantability, are limited to the duration stated in the warranty policy.
- 6. Damage due to misuse, improper treatment and unauthorized modification and repair are not covered by this warranty.
- Warranty does not cover accessories and attachments which do not belong to the massage unit.
- 8. Warranty is not effective to rental, business, commercial, institutional or other non-residential users.
- 9. All services covered by this warranty must be approved by OGAWA and repaired by authorized technicians only.
- If replacement parts for defective materials are not available, OGAWA reserves the right to make substitution in lieu of repair or replacement.


The instructions state that

- the appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction
- 2. children being supervised not to play with the appliance
- For a part of class III construction supplied from a detachable power supply unit, the instructions state that the appliance is only to be used with the unit provided







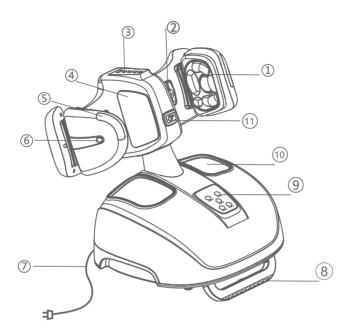

- ① Massage swing arm
- ② Leg massage head
- 3 Legs operation button
- 4 Leg air bag
- ⑤ Ambiance light
- 6 Battery active key

- 7 Plug
- (8) Stand
- 9 Foot operation button
- 10 Foot fabric cover
- 11 Detach key

Detach key


Hold this button inward with one hand, and lift the upper section up with the other hand at the same time, so that the upper and lower sections can be separated.

Battery activate key

A. When using the leg section alone, you need to press this key to activate the battery, before press the power button to start the massage function.

B, This key is invalid when the leg massager is connected to foot massager.

Product operation illustrations

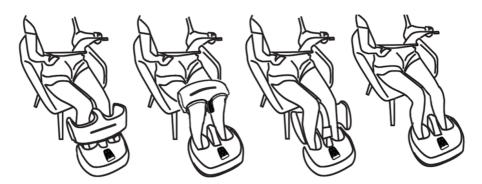

Remarks: If you would like to adjust a different angle in the process of massage, please make sure you have first turned off all the functions, before moving out your legs and then doing the necessary adjustment.



Product show are for illustration purpose only



Product Operation Guide



- O Power / Mode
- In combination successful mode After the power is turned on, the "Power" light on the lower section will flashes and then turn off, and all the buttons on the lower section are invalid
- Or when the upper battery is used (separated), press this button to turn on the machine, the 15 minute countdown will begin

P1 (defaullt) blue LED
P2 green LED
P3 red LED

press again to turn off the machine in the cycle. Note: In any operating mode, long press this button to turn off all functions.



In the startup state, press this key to adjust the temperature: Low > Medium > High; Press again to turn off heat function, the indicator is off.



In the startup state, press this key to adjust the pressure intensity: Low > Medium > High; The indicator is off.

િએ Knead

Under the startup state, press this key to adjust the kneading intensity: Low > Medium > High; Press again to turn off air function, the indicator is off.

When upper and lower part is connected, only upper button is valid. When both part is separated, both button can be use

Display window

(battery level, mode program, countdown)

A. In standby mode, the battery level is displayed. When upper part power is low, it only can be charge when the combination is sucessful.

- B. In activating, when switching mode, the mode program P1, P2, P3 is displayed
- C. During massage in progress, it display 15 minute countdown









Separate condition, the indicator light flashes after the power is turned on, press this button to turn on the machine and start the M1 mode program (default); Press it again to turn off the machine. Note: In any operating mode, press this button to turn off all functions.



When the machine is on, press this key to adjust the temperature: Low > Medium > High; press again to turn off.



When the machine is on, press this key to adjust the pressure intensity: Low > Medium > High; Press again to turn off.

🚱 Knead

When the machine is on, press this key to adjust the speed: Low > Medium > High; The indicator is off.

(B) Mode

When Product is activated, press this button to change massage mode

M1 (default) blue LED
M2 green LED
M3 red LED

press again to turn off the machine in the cycle



Product Operation Guide

a) Fasten instructions:

When both part conjointed, please do the follow steps to check if they are well connected:

1:when connected, the upper sense light turns to green, and you will hear a prompt tone.

2:When the upper and lower buckle position is fastened, you will hear a click tone, indicating that the upper part has cooperated with the buckle position.

3:Lift the upper section gently to check whether it is loose from the buckle. If it is loose, please operate again.

b) Instructions before use


Please store this product in a dry place, do not expose the product to direct sunlight. Put the carpet under the product to minimize the working noise.

c) How to use it

This product uses only the 220-240V $^{\sim}$, 50-60Hz power supply.

Make sure your indoor voltage fits this specification parameter.

• Connect the AC power cord to the socket.

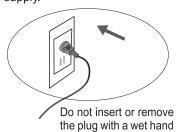





- Place your legs in the product, before pressing the switch key on screen. When
 the blue light is on, the other functions will follow. According to the indicators on the
 control panel, you can choose different massage modes.
- When you start the massage, the product will be countdown in 15minutes. After
 15 minutes, the massage function is turned off, and it will recover to standby mode.





Product Maintenance

a) Storage

- Please store it in the packing carton, and put in a safe, dry, well-ventilated, and shaded place.
- Do not twist the power plug.
- Do not hang the power wire and pull the product.
- Avoid sharp items from destroying the surface of the product.
- Please don't store the machine under direct sunlight or in places of high temperature.

b) Clean

- Before cleaning, make sure that the power cord is unplugged from the electrical outlet and that the machine is completely cool.
- Use a damp cloth to clean the product.
 Ensure the product is completely dry before reuse.
- The detachable fabric cloth can be washed in a normal washing way.



*Attention

 Make sure not to use benzene or thinner and other corrosive detergents to clean the product.

c) Maintenance

- Keep the product clean and store in a dry environment.
- When the product is not in use for a long time, please put a dustproof cover on the product.

Troubleshooting

If you meet the following problems, please referring to the following solutions. If the product is still malfunctioning or doesn't work, please send the product to our service centre or an authorized technician for the necessary checks and repair.

Conditions	Possible reason	Solutions
It doesn't work	 Plug isn't connected correctly to the socket. There was no power in the upper section The panel key is not open 	 Push the plug firmly into the socket. The upper part can only be used after charging Open the panel
Stop working suddenly	 The power switch is off. Massage time is over 15 minutes. If it is working for a	 Check that the power plug is connected well. Restart the power supply switch. After the product is cooled down, please restart the ON/ OFF power. Switch off the power supply, and turn it on again.





Product Specifications

Product name	Omknee3.0
Model number of the product	OF2005
Voltage	220-240V~,50-60Hz
Power consumption	60W
Timer	15 minutes







•

Contact Us

MALAYSIA

Healthy World Lifestyle Sdn Bhd No. 22 Jalan Anggerik Mokara 31/47 Kota Kemuning, 40460 Shah Alam Selangor Darul Ehsan, Malaysia

Tel: +1800-88-4688 Fax: +603-5121 4386

SINGAPORE

OGAWA Health-Care Pte Ltd 163, Kallang Way #07-11 SINGAPORE 349256

Tel: +065-6846 8588 Fax: +065-6846 7677

INDONESIA PT Healthy World Lodan Center Block O No 20 Jalan Lodan Raya No 2 Jakarta Utara 14430

Tel: +62 21-6983 1123 Fax: +62 21-6983 1124

HONG KONG, CHINA

OGAWA Health Care International(HK) Ltd 31/F,YHC tower,1Sheung Yuet Road

Kowloon Bay Kowloon

Hong Kong

Tel:+852 3465 6262 Fax:+852 2410 0119

VIETNAM

OGAWA Vietnam Co Ltd 2nd floor,Petroland Tower, 12 Tan Trao, Tan Phu ward District 7

Ho Chi Minh

Tel: +848 54133 222/54133 223

Fax: +848 5416 1736

PHILIPPINES

O-Healthcare Solution Phil. Inc. 2303, 4th Floor, G&A Building, Chino Roces Avenue Extension, Makati City, Philippines

Tel: +632 889 0676 / +632 844 6851

Fax: +632 812 0421







安全说明	18
保修权限	21
产品部件	22
产品特性及使用示意	23
产品操作说明	24
产品保养	28
疑难解答	29
产品规格	30
联络我们	31





感谢您购买 OGAWA Omknee 3.0 分离式多功能护膝腿机,使用前请仔细阅读操作手册,并特别注意安全事项,以便正确操作和使用本产品。本手册提供使用者安全及有效的操作方式,请在阅毕后妥为收藏,以便日后参考查询。如果本手册遗失,也可以从OGAWA官网下载。



(

安全说明

a) 重要安全事项说明

- 为确保安全及正确使用产品,使用前请务必详细参阅操作手册。
- 请务必依照本操作手册内的产品用途使用本产品。
- 清洁产品前,请将电源插头从插座中拨除。
- 请务必谨慎使用温热功能,以避免可能会导致严重灼伤。请勿用于感觉迟钝和过于敏感的皮肤。切勿让儿童或者身心功能障碍者自行使用温热功能,操作不当可能存在危险。
- 为避免因过热而导致走火、触电、或造成伤害,请勿将产品置于枕头或毯子下操作。
- 请勿覆盖使用,以免造成马达温度过高而导致故障或损坏。
- 如在按摩进行中感到不适,请立即停止按摩。
- 下列状况发生时,切勿使用本产品: 电源线或电源插头损坏; 操作不正常; 曾倾倒或者损伤; 曾浸入水中或其他液体。请联系维修服务中心进行检查和维修。
- 请勿使用非OGAWA所推荐的零配件。
- 请勿将物品插入或者掉落产品的任何开口中。
- 若想切断电源,请将所有的操作控制关闭后,将电源插头从插座中拔除。
- 本产品不能作为自我诊断或治疗之用,如需要诊断或治疗,应由专业医疗人员处理。

b) 使用环境

- 请勿在潮湿或过多灰尘的环境下使用产品,以免产品发生故障。
- 请勿在室温高于40℃的环境下使用本产品。
- 请勿将产品放置户外。
- 请勿将产品置放于电热器、炉具附近或者阳光直射处。





•

安全说明

c) 操作安全

- 确保本产品远离发热表面及区域。
- 此产品不适宜以下人士使用:
 - ■心脏病患者、恶性肿瘤患者、脊椎侧弯或异常、骨质疏松症等。
 - 孕妇或经期女性。
 - 身体不适者,发烧、身体有红肿或发炎、瘀青、过敏等。
 - 医生叮嘱禁止按摩的人请勿使用,以免导致事故或身体不适如血栓(栓塞)病症; 重度动脉瘤;急性静脉瘤;各种皮肤炎;皮肤感染病症(含皮下组织炎症)等。
 - 绝对不能与以下医疗电子仪器一起使用
 - 1) 心脏起搏器等植入式医疗电子仪器。
 - 2) 人工心脏等用来维持生命的医疗电子仪器。
 - 3) 心电图机等佩戴式医疗电子仪器。

否则可能会导致上述医疗电子仪器产生误动作,可能会危及生命。

d) 开关注意事项

- 请勿用湿手操作控制开关。
- 请勿让控制开关接触水等液体。

e) 使用电源插头及电源线须知

- 请勿用潮湿的双手安插或者拔除电源插头,以免触电或者导致机件故障。
- 拨出电源插头时,请握住插头本身,切勿拉扯电线。
- 虽然15分钟自动定时功能会自动停止产品运作,仍请每次使用完毕后,务必将主电源 切断。
- 电源线务必与加热表面保持安全距离。
- 请勿将电源线置于产品或任何重物之下。
- 请勿将电源线缠绕于产品上,以免电源线受损而导致触电或者电线走火。
- 当电源线或者电源插头损坏时, 切勿继续使用产品。
- 电源插座有松动的状况时,请勿使用产品。
- 请勿以拉扯电源线方式移动产品,或将电源线当握把使用。
- 当电源线损坏时,必须由服务中心或经授权技术人员进行检查及维修。



(

安全说明

注意

- 请勿在产品操作时入睡。
- 请勿在酒醉或身体不适时使用本产品。
- 请勿站在产品上或重物施压。
- 连续使用本产品时间请勿超过三十分钟。
- 若产品的布套已经破损,请勿使用。
- 请勿在进食前后一小时使用, 以免造成反效果。
- 在偏低室温中使用产品时,切勿骤然使用温热功能,建议将温度逐渐调至正常范围后 再使用。
- 若是将产品由低温储存处移至温暖环境使用时,可能会因为机件内水汽聚集而影响产品正常运作,甚至造成机件故障。建议移动后,先将产品在正常室温放置1小时后再开始使用。
- 使用中察觉任何机件故障或不正常状况,请立即停止使用。
- 若在使用中发生电流中断的状况,因注意避免因电力突然恢复而造成使用者受伤。
- 雷电情形发生时,不宜使用本产品。






保修权限

- 1. 本保修权限不可转让。
- 2. 本保修服务仅对在 OGAWA 购买的产品有效。
- 3. 当要求保修服务时,请出示购买证明(正本收据)。
- 4. 所有保修项目,包括但不限于这些健身及适销性的保修项目有效期限需视保修政策 而定。
- 5. 因错误使用、处理不当以及未经授权私自改装和维修产品而导致的损坏,不属于保 修范围。
- 6. 此保修范围不包括不属于产品本身的附件。
- 7. 此保修范围不适用于租凭、交易、商业、机构或其他非住宅用户。
- 8. 此保修范围内所涉及的维修服务需经过 OGAWA 授权,且必须由授权的技术人员维修。
- 9. 若需更换的维修附件缺货, OGAWA 有权采用替代配件进行维修。





产品部件

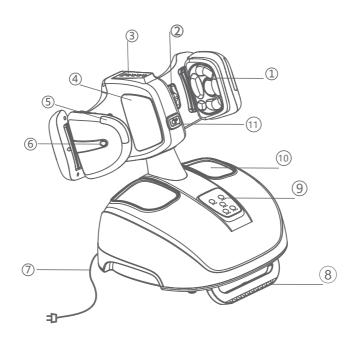

- ① 按摩摆臂
- ② 腿部按摩头
- ③ 上节控制面板
- ④ 气囊
- ⑤ 展示灯
- ⑥ 电池启动键

- ⑦ 电源线
- 8 支架
- ⑨ 下节控制面板
- ⑩ 下节脚套
- ⑪ 分离键

分离键

一手按此按键, 另外一手同时把上节提起。 上下节可以同时分开用

电池启动键

A、单独使用上节时,需先按一下此键,启动电池,再按键,开启按摩功能。

B、合体模式状态下, 此按键失效。

3.脚背气压的好处

- *脚背气压按摩,促进各反射区,增进血液循环,舒筋活血;使其双脚彻底放松;
- *向下顶压,让脚掌更贴合按摩头,在享受揉顶、刮痧时更舒适到位;


4.气压按摩

- *10组气袋,提供愉悦刺激感,缓和肌肉紧绷酸痛感,为您疲累双腿立即舒缓。
- *脚后跟部及腿后部增加凸点按摩;更精确刺激按摩点,让按摩更舒适;赶走疲劳;
- *气压按摩同时有效固定足部,让滚揉,刮痧和揉顶的效果更佳到位,深入。

5.脚底按摩

- *脚底三组揉捏按摩头,犹如专业脚底按摩技法,反射区滚轮按摩专门刺激足底重要穴位。
- *三组各不同按摩凸点,带来不同的按摩感受,享受搓揉、刮顶、滚揉的按摩效果;
- *定点按摩,准确按摩涌泉穴,按摩更深入。

产品使用示意

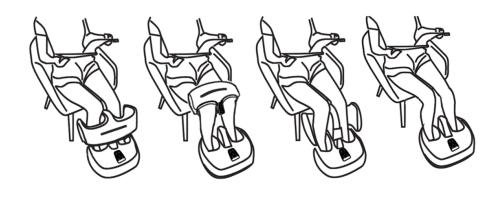





产品展示仅供参考

产品操作说明



◎ 待机/模式键

接通电源合体成功(下节"Power"灯闪烁后熄灭,且下节所有按键功能失效,即合体成功)或单上节电池启动状态下,按此键开机,并同时开启P1模式程序,亮蓝色灯,进入15分钟倒计时;再按一下,开启P2模式,亮绿色灯;再按一下,开启P3模式,亮红色灯;再按一下,关机,依次循环。

注: 在任何运行模式下, 长按此键可关闭所有功能。

⑩ 热敷键

开机状态下,按此键调节三档热敷温度:L灯亮,低档;M灯亮,中档;H灯亮,高档;灯灭关闭。

⑩ 气压键

开机状态下, 按此键调节三档气压强度: L灯亮, 低档; M灯亮, 中档; H灯亮, 高档; 灯灭关闭。

@ 揉捏键

开机状态下,按此键调节三档揉捏强度:L灯亮,低档;M灯亮,中档;H灯亮,高档;灯灭关闭。

■ 显示窗(电池电量、模式程序、倒计时间)

- A、待机状态时,显示电池电量,当电量低时,上节需合体成功时才能进行充电;
- B、操作切换模式时,显示模式程序(P1、P2、P3);
- C、按摩状态时,显示15分钟倒计时。









(1) 待机键

单下节,接通电源后指示灯闪烁,按此键开机,并同时开启M1模式程序; 再按一次,关机。

注: 在任何运行模式下, 按此键可关闭所有功能。

迎热敷键

开机状态时,按此键调节三档热敷温度:L灯亮,低档;M灯亮,中档;H灯亮,高档;灯灭关闭。

⑩气压键

开机状态时,按此键调节三档气压强度: L灯亮,低档; M灯亮,中档; H灯亮,高档; 灯灭关闭。

@ 揉捏键

开机状态时,按此键调节三档滚轮速度: L灯亮,低档; M灯亮,中档; H灯亮,高档; 灯灭关闭。

(器) 模式键

开机状态时,按此键切换按摩模式:按一下,开启模式M1,显示蓝色呼吸灯光; 再按一下,开启模式M2,显示绿色呼吸灯光; 再按一下,开启模式M3,显示红色呼吸灯光;

再按一下,关机。



(

产品操作说明

扣紧说明:

上下合体时,需要以下步骤确保上下节合体是否到位

- 1.上节部分扣到下节扣位时,上节感应灯亮绿灯,并发出提示声音
- 2.上下扣位在扣紧时会嗒一声,确保上节部分已经与扣位配合
- 3.用手轻提上节部分是否会从扣位松脱,如松脱,请重新操作。

a) 使用前准备

请将本产品置于干燥、阳光不能长期照射的地方。 为减少机器工作时的噪音,可在本产品下铺上地毯。 确保产品放置位置安稳舒适。

b) 使用方法

本产品仅使用于220-240V~,50-60Hz的电源。请事先检查您家中电压是否与本产品上所示规格相符。

● 将交流电源插头接至电源插座。







产品操作说明

- 将双脚放入产品,按下控制面板开关键,绿灯指示:其它按键功能响应。依控制面板指示,选择按摩模式。
- 使用产品倒计时15分钟结束后,按摩功能停止,恢复待机状态。
- 产品处于待机状态时, 电源切断。





产品保养

a) 贮藏

- 不使用时,请将产品放入包装盒中,并放置于安全、干燥、通风、阴凉处。
- 切勿拧曲电源线。
- 切勿使用电源线拖拽产品。
- 避免尖状物刮破产品表面。
- 请勿将产品放置在阳光直射或高温处。

b) 清洁

- 清洁之前,确认总电源开关己关闭,并拨出电源插头。
- 请使用干布清洁产品表面。
- 可拆洗布套可按正常布料洗涤方式清洗。

*注意

● 切勿使用具有腐蚀性的清洁剂,如苯或稀释 剂来清洁产品。

c) 保养

- 保持产品清洁并远离高湿度的场所。
- 如果长时间不使用本产品,请用防尘罩(请自行购买)套住产品,防止落入灰尘。













疑难解答

若在使用此产品时遇到问题,请参考下列几点提示及可能解决方式。若此产品仍处于故障状态请将产品送至服务中心或经授权技术人员进行检查及维修。

故障	原因	处理方法
无法开机。	无法开机。1. 未通电1. 接入电源或检查否连接良好2. 上节部分没电2. 上节部分需要充电后方可能3. 面板开关键未开启3. 开启面板开关键	
突然停止操作。	 断电。 按摩时间超过15分钟。 连续使用时间过长,产品过热保护。 施力过大,按摩球堵转。 	 检查电源接口是否接好。 重新开启开关键。 产品冷却后重新开启开关键。 重新启动开关键。





产品规格

产品名称	Omknee3.0	
产品型号	OF2005	
电压	220V-240V~, 50-60Hz	
功率	60W	
定时	15 分钟	







•

联络我们

马来西亚

Healthy World Lifestyle Sdn Bhd No. 22 Jalan Anggerik Mokara 31/47 Kota Kemuning, 40460 Shah Alam Selangor Darul Ehsan, Malaysia

Tel: +1800-88-4688 Fax: +603-5121 4386

新加坡

OGAWA Health-Care Pte Ltd 163, Kallang Way #07-11 SINGAPORE 349256

Tel: +065-6846 8588 Fax: +065-6846 7677

印尼

PT Healthy World Lodan Center Block O No 20 Jalan Lodan Raya No 2 Jakarta Utara 14430 Tel: +62 21-6983 1123

Fax: +62 21-6983 1123

中国香港

OGAWA Health Care International(HK) Ltd 31/F,YHC tower,1Sheung Yuet Road Kowloon Bay Kowloon Hong Kong Tel:+852 3465 6262 Fax:+852 2410 0119

越南

OGAWA Vietnam Co Ltd 2nd floor,Petroland Tower, 12 Tan Trao, Tan Phu ward District 7 Ho Chi Minh

Tel: +848 54133 222/54133 223

Fax: +848 5416 1736

菲律宾

O-Healthcare Solution Phil. Inc. 2303, 4th Floor, G&A Building, Chino Roces Avenue Extension, Makati City, Philippines

Tel: +632 889 0676 / +632 844 6851

Fax: +632 812 0421



