



# SMART GALAXY PLUS

INFINITE MASSAGE CHAIR



Rev.1.0

User Manual  
OG 5608 使用手册



OGAWA

**SMART GALAXY PLUS**  
INFINITE MESSAGE CHAIR

User Manual

All information is correct at the time of print

# CONTENTS

Safety Instructions	03
Warranty Claims	05
Product Parts	06
Moving the Chair	07
Controller Diagram	08
Product Operation Guide	09
Product Features	14
Cleaning And Maintenance	15
Questions And Answers(Q&A)	16
Troubleshooting	17
Product Specification	19
Contact Us	20

# Safety Instructions

## Warning!

The plug must be fully inserted into an appropriate outlet. Improper connection of the equipment-grounding conductor can result in the risk of electric shock.

Check with a qualified electrician and service personnel if you are in doubt as to whether the product is properly grounded. Do not modify the product's accompanying plug. If the outlet is not suitable, be sure to have a proper outlet installed by a qualified electrician.

When using the massage chair, basic precautions should always be followed to reduce the risk of electric shock, burns, fire, or injury.


Read the following details before use:

1. Be sure to insert the massage chair plug into the proper electrical outlet.
2. Make sure that the power plug is securely inserted into the proper electrical outlet to reduce the risk of short-circuit and fire.
3. Always unplug the massage chair from the electrical outlet immediately after use and before cleaning.
4. DO NOT use the massage chair in places where the humidity is high.
5. DO NOT use the massage chair outdoors and avoid places with direct sunlight.
6. If the power goes off during use, be sure to turn the power switch to the OFF position and pull the power plug out from the socket to prevent any damages when the power comes back.
7. Never operate the massage chair if the power cord is wet or damaged.
8. Never plug/unplug the power cord from the socket with wet hands.
9. Close and continuous supervision is necessary when this appliance is used by or near children, invalids or disabled persons.
10. Use this appliance only as described in this user manual.
11. Do not use any attachments other than those recommended by OGAWA.
12. Do not stand, sit or jump in the calves rest when the massage chair is in use. This may result in an accident or injury.
13. Do not attempt to stand on the backrest and armrest .This may result in an accident or injury.
14. Be careful not to fall asleep during the massage.



## Safety Instructions

15. Always keep the massage chair clean and never insert any object into the gaps on and around the massage chair.
16. Do not remove the massage chair by pulling the power supply cord.
17. Be sure to check that there is no one (children in particular), pets or obstacles under the massage chair prior to lowering the leg rest /backrest.
18. Always check whether the surface of the massage chair is torn or ripped before use. If you find any unfamiliar tears in any area of the cloth in the backrest, do not use the massage chair. Kindly contact OGAWA service center immediately for repairs.
19. This appliance is designed for household use only.
20. For those suffering from illnesses, please consult your doctor on whether you can use the massage chair if in doubt.
21. The following persons are requested to consult a doctor prior to use in order to reduce the risk of the user feeling sick or suffering from an injury:
  - Those who have a malignant tumor;
  - Those who suffer from heart disease;
  - Those who are experiencing pregnancy, menstruation and puerperal;
  - Those who require complete rest;
  - Those who are under medical treatment;
  - Those who suffer from back problems or whose backbone is abnormal or bent.
22. If you experience pain during use, stop the massage chair immediately. If any injuries happen, consult a doctor immediately. Never massage on swollen or inflamed parts of the body.
23. This product is a non-professional appliance designed to provide a comfortable massage. Do not use this product as a substitute for medical treatment.
24. Do not use this massage chair for more than 30 minutes at one time and kindly limit the massage to a concentrated area for not more than 15 minutes. Over-massaging can result in overheating, and thus reducing the product's lifespan.
25. Do not operate where aerosol (spray) products are used or where oxygen is being administered.
26. The massage chair is not suitable for children aged 12 years old and below.



- 
27. If the power plug is damaged, it must be replaced by a special plug available from OGAWA or authorized agents.
  28. As a safety precaution , Motor will stop working automatically (for protection) if apply too strong external force during use. Once appear above, switch OFF power ,and switch ON again after 10 seconds . Please pay attention to this ,especially for user whose weight over 100KG.
  29. The appliance has a heated surface. Persons insensitive to heat must be careful when using the appliance.
  30. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved



## Warranty Claims



1. Warranty is not transferable.
2. This warranty is effective only if the product is purchased from OGAWA.
3. Proof of purchase (original receipt) is required for all warranty repairs.
4. All implied warranties, including but not limited to these implied warranties of fitness and merchantability, are limited to the duration stated in the warranty policy.
5. Damage due to misuse, improper treatment and unauthorized modification and repair are not covered by this warranty.
6. Warranty does not cover accessories and attachments which do not belong to the massage unit.
7. Warranty is not effective to rental, business, commercial, institutional or other non-residential users.
8. All services covered by this warranty must be approved by OGAWA and repaired by authorized technicians only.
9. If replacement parts for defective materials are not available, OGAWA reserves the right to make substitution in lieu of repair or replacement.

# Product Parts

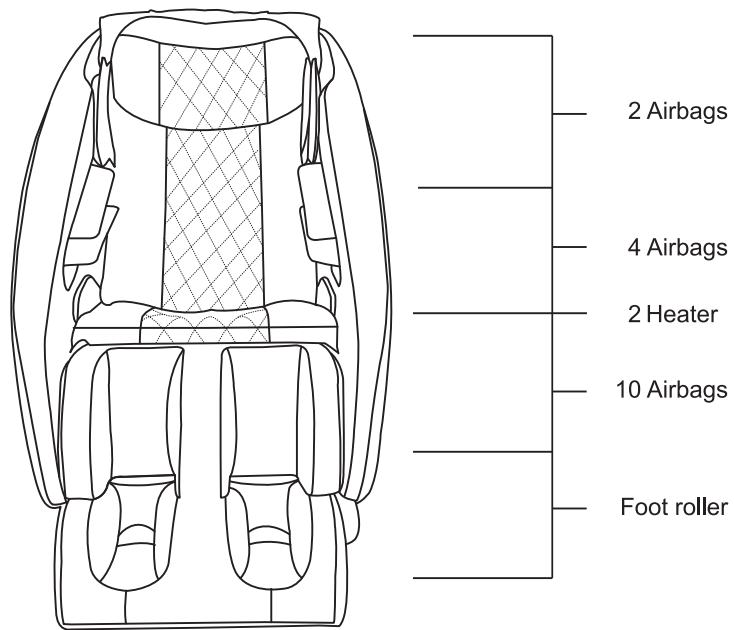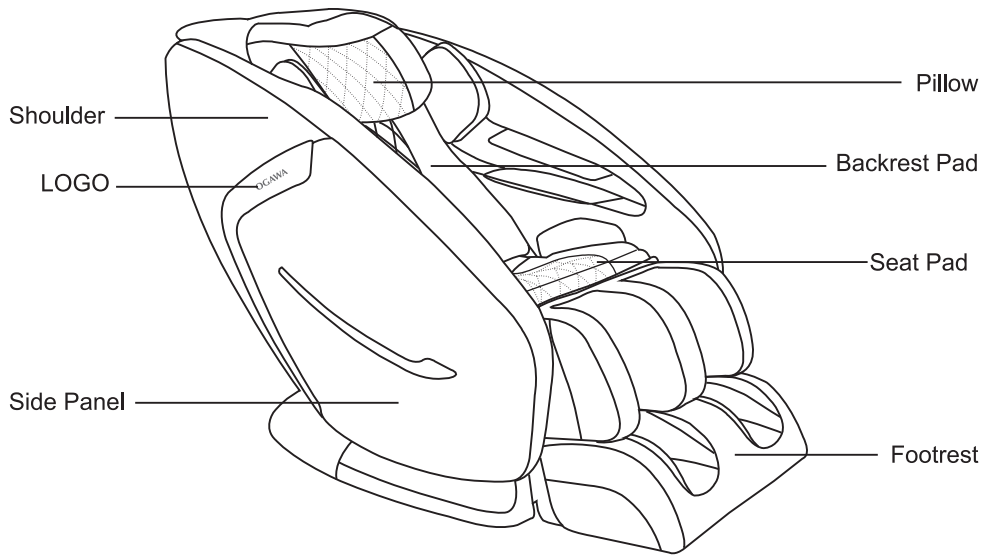

## Moving the Chair

Press down the backrest, before reclining the chair to approximate 45° to easily move the chair around the house with a slight pull or push.

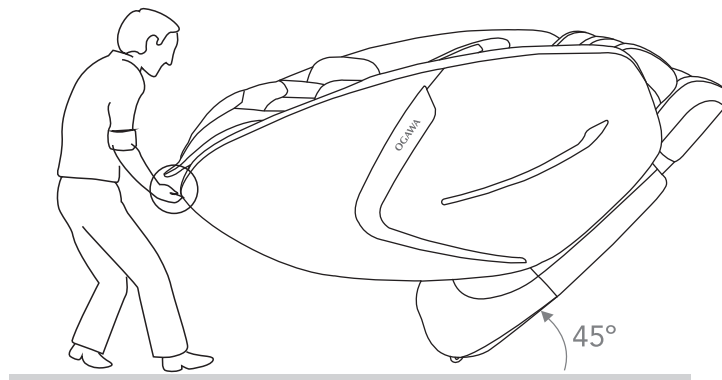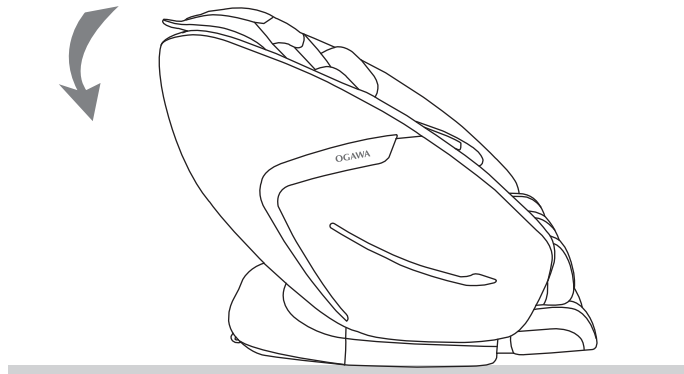

**Caution:**

- i. Before moving the chair, please put the footrest back in the original position. Otherwise, injuries might occur in the process of moving the chair.
- ii. Avoid moving the massage chair when there is someone seated on it.
- iii. Placing a mat underneath the massage chair is advisable, as the moving process might leave scratches on the floor surface.


# Controller Diagram



# Product Operation Guide

## 1. Put on the power and turn to “I” the position of switch.

Connect power line on the socket on the box at back of the chair, and then connect power plug on the electric supply. Put on the power then turn to “I” the position of switch on the box at back of the chair. Massage chair start to restore with OFF button glittering on controller. After it, massage chair get in standby mode with OFF button lighting.

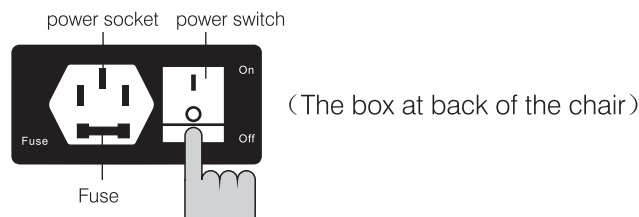

## 2. Seat on massage chair and press ON button to start

After seating on massage chair and pressing ON button, the massage chair get in Spa massage mode with suitable position.



On/Off



Time setting


Press “Time setting” button to adjust the time by your desire. Maximum time is 30 minutes.

Unit is minute from 30 minutes to 1 minute; unit is second for countdown in last minute.

## 3. Adjust backrest cushion and leg rest cushion to favorable angle

When press the control keys of “back-leg ascends”, “back-leg descends”, the chair start to adjust the angle of back and calf. When you adjust the angle to the appropriate position, loosen the control key, to position.

Press the “Z·G” button to start zero gravity massage, press again to stop.

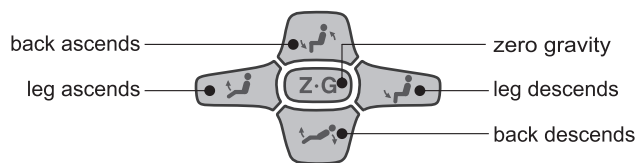

## 4. Stop or finish massage

Normal stop : the timing function automatically fix time is 15 minutes,time out,all the program will stop and keep the setting posture.

Force stop: when press the restore during massage. it will stop massage immediately, press again to continue.



Pause






# Product Operation Guide

## 5. Start to massage

### Automatic course

OPPA, ONNI, Neck and Shoulder, Waist and Buttocks, Stretch massage.

Automatic course combines with shiatsu, kneading, tapping and air massage.

Button	Description	Main function
	Men's maintenance	Massage with neck, shoulder fixed-point kneading + massage program. Between the adjustable seat and foot position.
	Women maintenance	A massage program with slow kneading + pat + air pressure. Between the adjustable seat and foot position.
	Relieve neck and shoulder Massage program	Massage program mainly with neck, shoulder, back kneading and waists and tail vertebrae. Between the adjustable seat and foot position.
	Focus of waist and buttocks Massage program	A massage with a key kneading + pat + air pressure in the waist. Between the adjustable seat and foot position.
	Stretch massage Massage program	To stretch the legs and back massage programs

※ For above programs, the fix time is 15 minutes and the default of airbag intensity is low.

Press “” button to adjust the intensity of air pressure.

※ The above automatic full-body massage courses can not be combined with other courses.








**!** **Warning:** Only rated supply 220V~ must be used to avoid damage to electronic elements.

# Product Operation Guide

## Manual setting course

### Introduction of manual setting course






Partial air massage is the course which targets different needs and areas of body.

Button	Description	Main function and adjustment guide
	 Kneading	Press one time the button to start kneading massage. The speed is adjustable.
	 Knocking	Press two times the button to start knead-knocking massage. The speed is adjustable.
	 Knead-knocking	Press three time the button to start knocking massage. The speed and width is adjustable.
	 Tapping	Press four times the button to start tapping massage. The speed and width is adjustable.
	 Shiatsu	Shiatsu massage.

※ The above manual setting course could not be combined with other courses.

※ For the above manual setting course, the default setting is spot-specific massage with medium width. Speed and width is adjustable by pressing relative button.

### Function introduction for manual setting course






Button	Description	Main function
	Speed adjustment	There are three levels to choose from slow, medium and fast.
	Width adjustment	There are three levels to choose from narrow, medium and wide.
	Full course/Partial massage	Press one time the button to start full course massage . Press two times the button to start partial massage. Close by three times.
 	Massage roller move up Massage roller move down	Press the button to move massage roller, loose the button to stop.



# Product Operation Guide

## Functions on buttons

### Introductions on buttons used for manual setting course

Button	Description	Main function
	Air pressure intensity adjustment	Air pressure intensity is adjustable It could be adjusted only in air pressure massage. The circle of intensity is soft, medium and strong.
	air massage 1	Press one time to start air massage for upper body. Press two times to start air massage for lower body. Press three times to start air massage for full body. Close by four times.
	air massage 2	Press one time to start air massage for shoulders. Press two times to start air massage for arms. Press three times to start air massage for leg. Press four times to start air massage for foot. Close by five times.
	Rolling massage	Foot rolling control key. Press the button to start foot rolling massage, press again to stop.
	Heating function	Waist heating function. Press the button to start waist heating massage, press again to stop

### Music Function

**Play Mobile Music:** Turn on bluetooth of mobile, then select bluetooth device of massage chair (code BK8000L), after it automatically matches with massage chair speakers, it can be realized through the massage chair play mobile music function.

# Product Operation Guide

## End Operation

Please press the “ON/OFF” button after use, and the chair will stop its operation, while the massage rollers will return to their original position; then switch the power supply button under the chair to “O” and unplug the machine from the electrical outlet.

**⚠ Warning:** Supervision and guidance are necessary when disable, people who have obstacles in sense or spiritual, who are inexperienced in using it and who are lacking of the knowledge of it use the massage chair (including children). Unless there is someone who in charge of their safety, the massage chair is unavailable for them. Please take care of your children and make sure the chair not is played by them. There is heat function for the chair and should be cautions by those who insensitivity of heat.

## Product Features

OGAWA massage Chair is controlled by a microcomputer that performs various intelligent massage methods and combinations, like Kneading, Swedish, Tapping, Shiatsu, Clapping, Rolling, Footroller and Air Massage. All these massage methods accurately capture the acupressure points that could alleviate fatigue, promote metabolism and improve blood circulation effectively. Equipped with eight of full body automatic program, this product thoroughly fulfills your various needs.

Various types of manual / auto massage to suit your needs.

Spring-styled massage that is specially structured for the back is designed according to the curve of the human body to provide a more effective and thorough massage.


1. Designed according to body curve, to provide better massage sensations.
2. The Timer Function can be adjusted according to your desired duration of the massage programmer.
3. Liquid Crystal Display controller for a user friendly operation.
4. Built in with power surge and automatic temperature sensor for safety.
5. The operation is controlled by an intelligent microprocessor for excellent performance and consistent quality.
6. The machine radiates heat on the surface, Do Not use it over sensitive skin areas or in poorly-ventilated areas.

# Cleaning And Maintenance

## Cleaning of the synthetic leather

Wipe the synthetic leather with a soft dry cloth.

- **Do not clean the product with chemicals such as thinners, gasoline and alcohol.**
- **When using a leather maintenance product (cleaning cloth) sold on the market, follow its directions for use.**
- **If the synthetic leather is very dirty, wipe it with the method below.**
  1. Put a piece of soft cloth into water or 3% to 5% neutral detergent contained hot water and wring it out.
  2. Wipe surface of the synthetic leather with the soft cloth.
  3. Wipe the detergent with a piece of cloth once soaked in clean water and wrung out.
  4. Wipe with a piece of wrung soft cloth.
  5. Have the synthetic leather take natural air drying.
- **If it is difficult to remove the stains on the synthetic leather, soak a piece of melamine foam bought from the market into a neutral detergent and use it wipe the product.**
- **Do not dry the surface by a hair drite.**
- **Surface of the synthetic leather may be dyed by fabric colors; therefore, be careful when wiping the product with denim or colored cloth.**
- **Keep these positions from long-time contact with plastics to avoid fading.**
- **Synthetic leather may discolor, so the position in contact with the hair dye used should be covered by a towel.**

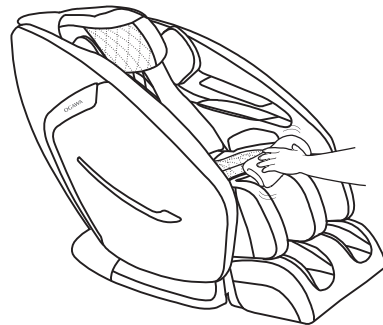

## Cleaning of the plastic parts


**1** Put a piece of soft cloth into water or neutral detergent contained hot water, wring it out and wipe the plastic parts.

- Do not clean the product with chemicals such as thinners, gasoline and alcohol.

**2** Wipe with a piece of cloth once soaked in clean water and wrung out.

- Wring the cloth out before using it to wipe the remote controller.

**3** Have the plastic parts take natural air drying.

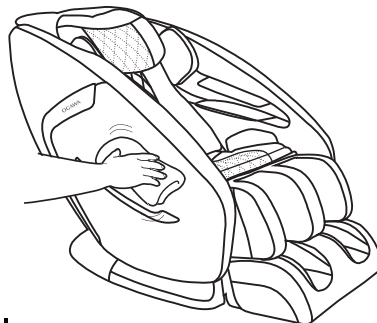

## Questions and answers(Q&A)

**Q** Can persons paying frequent visits to hospitals because of diseases use the product?

**A** **These persons should consult physicians before using the product.**  
 Massage is the so-called "touch-pressure stimulation": Muscles are compressed to relieve their tension and promote hemokinesis. Some diseases may get worsened because of massage. Thus, consult the attending doctors before using the product.

**Q** How about the body height requirement for use of the product?

**A** **The body height requirement differs with the specific body type. See the rough reference below when using the product.**  
 If a person shorter than 145 centimeters or taller than 185 centimeters uses the upper body massage function and the Lower Leg/Foot massage function of the product at the same time, it will be possible that his soles will have poor contact with the foot massage section or that his knees will need to be bent.

For a taller person with knee bending when using the product:

Select method **A**

**A** Tilt the backrest and lower the Lower Leg/Foot massage section.

For a short person difficult to touch the foot massage section:

Select method **A**

**A** Raise the backrest and lift the Lower Leg/Foot massage section.


**Q** Are there any things needing special attention during moving?


**A** **Pay attention to the following things during moving.**

For convenience during moving, tilt backrest of the product till the lowest position.

During handling, do not sit on the product.

① Press ON button power on the product.

② Press  to make the backrest completely tilt.

Press and hold on these two buttons until backrest and footrest stop 


③ Turn off the power switch and pull out the power plug.

● If the original packing box is unavailable, make sure the power line is not wound on the product, wind it and place it on the seat surface. When handling the product, keep the power line from falling off and rubbing with ground.

● If the original packing box is unavailable, properly keep other packing auxiliary materials and wrap the product with them to avoid scratch and vibration during handling.

**Q** Where is serial number of the product?

**A** It is on back of the main body.

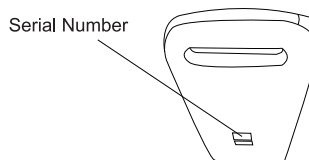

**Q** What should I do if I do not feel warm in the knee ?

**A** Make the knee in close contact with the warm transfer part. The warm transfer part is in close contact with the knee to make you feel warm. You may cover your knee with a blanket to get warmer.

**Q** I care about the sounds the product makes when being used.

**A** It is caused by the core structure.

**Q** Does it matter if the massage wheels have different massage intensities?

**A** **This phenomenon possibly exists during massage because of the core structure.**  
 To simulate the most natural massage effect, the product is designed with a core structure allowing alternate back massage by a left massage wheel and a right massage wheel. During massage, the massage wheels possibly have slightly different positions on the back. That's why you have that feeling. It is not a fault.




**Q** The acupressure force is too large.

**A** **Set the air bag intensity to be "1" through the Air Bag button. You can also lower the Lower Leg/Foot massage section to reduce the acupressure force on the feet.**

# Troubleshooting

**After a fault happens, inspect and try the corresponding method below.**

If the fault still exists after that, contact the shop from which you bought the product.


Fault	Cause and elimination method
<p><b>The massage wheels stop during use</b> (The product beeps and all icons and buttons on the remote controller flicker and then go out.)</p>	<p><b>For safety, the massage wheels will possibly stop upon a too large external force during use.</b> If all marks and buttons on the remote controller begin to flicker, it suggests an extreme abnormality. In this case, turn off the power switch and turn it on about 10 seconds later. If the massage wheels stop again, adjust your sitting posture and do not lean on the backrest completely. (Users, particularly those heavier than 100 kilograms, should follow relevant precautions.)</p>
<p><b>The product cannot tilt, or the footrest cannot be raised or lowered</b> (The product beeps, the running light on the remote controller goes out and the product stops)</p>	<p><b>For safety, the product will stop upon an obstruction or a too large force.</b> If all contents and buttons are flickering and the backrest or the footrest has stopped, turn off the power supply and turn it on about 10 seconds later and then operate the product.</p>
<p><b>The massage wheels cannot reach the shoulders or the neck</b></p>	<p>If the head is not in contact with the headrest, or the back is not in contact with the backrest, the shoulder position in body type detection will possibly be lower than the actual position. Sit in the deepest position of the product, lean your head on the headrest and operate from the beginning again.</p>
<p><b>The left and right massage wheels have different heights (intensities)</b></p>	<p>It is not a fault but a normal phenomenon because the product is provided with a massage core allowing alternate beats of the massage wheels.</p>
<p><b>The product cannot run at all.</b> ● Upper body (the neck to the waist) massage ● Lower leg/foot massage</p>	<ul style="list-style-type: none"> <li>● The power line is disconnected.</li> <li>● The power switch is not turned on.</li> <li>● No program is selected after  on the remote controller is pressed.</li> </ul>
<p><b>No warm feeling in knee.</b></p>	<ul style="list-style-type: none"> <li>● The heating button is set to be OFF.</li> <li>● The warm feeling depends on factors such as body type, massage method, clothes and room temperature. Make the knee in close contact, the warm transfer part is in close contact with the knee to make you feel warm. You may cover your knees with a blanket to get warmer.</li> </ul>
<p><b>The product cannot cool down even if the heating function is disabled.</b></p>	<ul style="list-style-type: none"> <li>● Due to the heater structure, the product will still feel warm shortly after heating because of the residual heat.</li> <li>● If a single part is continually massaged even after the heating function is disabled, you will feel increasingly warmer.</li> </ul>
<p><b>The power supply cannot be connected even if  is pressed again after the massage</b></p>	<ul style="list-style-type: none"> <li>● The program will terminate about 5 seconds after the massage has ended. Press  at least 5 seconds after all the movements have stopped.</li> </ul>
<p><b>The product is damaged</b></p>	
<p><b>The power line or the power plug has abnormal heating</b></p>	<p>To avoid accidents, contact an authorized service center.</p>

## Troubleshooting

### The sounds and feelings you care about in use of the product

**You will hear or have the following sounds or feelings when using the product. It is not abnormal phenomena but results of the product structure.**

- Sound when the stretching massages are retracted
- Sound and feeling when the massage wheels rub patterns on the fabric
- Sound of movements such as kneading and beat
- Friction sound of the running massage wheels
- Sound of up-down movement
- Sound of the conveyor belt
- Motor sound
- Sound of the squeezing massage wheels when they begin to stretch
- Sound when a person is sitting on the seat
- Friction sound between the armrests and the back cushion when the backrest is tilting
- Friction sound between the massage wheels and the fabric
- Sound of the inflator pump during Air Bag massage
- Sound of air exhaust during Air Bag massage
- Running sound of the solenoid valve at bottom of the product during Air Bag massage.
- Swing of the footrest
- Sound when the shoulders are stretched or moved
- Running sound of the air bags
- Sliding sound of the foot massage section
- Friction sound between the back cushion and the back cover leather when the backrest is tilting

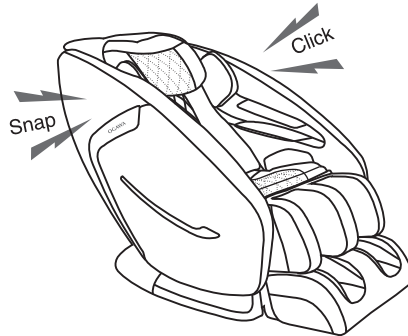

**If the sound is loud, it is also possible that the product has failed.**

- In this case, have the product inspected and repaired by an authorized service center.

#### **Warning**

- **Do not refit, disassemble or repair the product without permission.** Otherwise fires, abnormal movements or personal injuries may happen.

#### **Warning**

- **In the case of any abnormality or fault, stop the product immediately and pull out the power plug to avoid fuming, fires and electric shocks.**  
< Abnormality and fault examples >
  - The product fails to work after the power switch is turned to the ON position;
  - After the power line is moved, the product is discontinuously powered on;
  - In use, the product gives off a burning smell or an abnormal sound;
  - The product is deformed or abnormally heating→ In any of these abnormalities and faults, have the product inspected and repaired by an authorized service center immediately.

## Product Specifications

Power supply		AC220-240V~,50/60Hz
Power consumption		150W
Upper body massage	Range of massage (up-down direction)	Approx. 97cm
	Massage speed	Kneading:Approx.21 times/min-Approx.37 times/min
		Beat:Approx.422 times/min-Approx. 703 times/min
		Moving speed:Approx.43mm/s
Power consumption		Backrest: Approx. 124°~157° Footrest: Approx. 92.5°~ 115°
Automatic power-off		Approx. 15 minutes(automatic power-off)
Dimension	When it is not tilting (H x W x L)	Approx. 1520mm x 785mm x 1175mm
	When it is tilting (H x W x L)	Approx. 1935mm x 785mm x 1025 mm
Weight		Approx. 98Kg
Dimensions of packing box (H x W x L)		Seat rest: 1400x820x1235mm Footrest: 530x440x510mm
Weight(including the packing box)		Approx. 110Kg
Operating Conditions		Ambient temperature:Approx.0°C~35°C Relative humidity:Approx.20%~80%
Storage Conditions		Ambient temperature:Approx.-5°C~35°C Relative humidity:Approx.20%~80%
Maximum body weight of user		Approx. 120Kg

For a user heavier than 100 kilograms, the product may have bigger noise and its fabric housing may be worn quicker.



## Contact Us



**MALAYSIA**  
Healthy World Lifestyle Sdn Bhd  
No. 22 Jalan Anggerik Mokara 31/47  
Kota Kemuning, 40460 Shah Alam  
Selangor Darul Ehsan, Malaysia  
Tel : +603-5121 4286  
Fax: +603-5121 4386



**HONG KONG, CHINA**  
OGAWA Health Care International (HK) Ltd  
31/F,YHC Tower,1Sheung Yuet Road  
Kowloon Bay  
Kowloon  
Hong Kong  
Tel:+852 3465 6262  
Fax:+852 2410 0119



**SINGAPORE**  
OGAWA Health-Care Pte Ltd  
27 Tampines Industrial Avenue 5,  
T5 @ Tampines  
Singapore 528623  
  
Tel:+065-6846 8588  
Fax:+065-6846 7677



**VIETNAM**  
OGAWA Vietnam Co Ltd  
2nd floor,Petroland Tower,  
12 Tan Trao,Tan Phu ward  
District 7, Ho Chi Minh  
Tel:+84 8 54133 222/54133 223  
Fax:+84 8 5416 1736



**INDONESIA**  
PT Healthy World  
Lodan Center Block O No 20  
Jalan Lodan Raya No 2  
Jakarta Utara 14430  
Tel : +62 21-6983 1123  
Fax: +62 21-6983 1124



**PHILIPPINES**  
O-Healthcare Solution Phil. Inc.  
2303, 4th Floor, G&A Building,  
Chino Roces Avenue Extension,  
Makati City, Philippines  
Tel : +632 889 0676 / + 632 844 6851  
Fax: +632 812 0421



**SMART GALAXY PLUS**  
INFINITE MESSAGE CHAIR

User Manual  
All information is correct at the time of print

# 目錄

安全說明	22
保修權限	24
功能特點	24
產品部件	25
產品移動說明	26
控制器	27
操作說明	28
清洗及保養	32
疑問解答 (Q&A)	33
故障維修	34
產品規格	36
聯絡我們	37

# 安全說明

## 警告!

此按摩椅必須使用與插頭相配的插座。不正確的接地將會導致觸電危險的發生。

請不要擅自改裝插頭或插座，務必委託專業的技術人員進行檢查。

使用電器產品時，為減少觸電、灼傷、火災、或人員傷害的危險，應遵守基本安全預防措施，包括以下內容：

在使用前請閱讀所有的使用說明。

1. 務必使用與插頭相配的插座。
2. 一定要確保插頭完全插入插座內，以減少短路或火災危險。
3. 在使用後或清潔前，請務必及時拔掉插頭。
4. 請勿在高濕度的環境下使用本產品。
5. 請勿在室外或陽光直射的地方存放或使用本產品。
6. 如果在使用過程中突然停電，請立即將開關撥至「O」的位置，且拔掉插頭，以免來電時損壞本產品。
7. 當電源線潮濕或損壞時請勿使用按摩椅。
8. 請勿用濕手插入和拔掉插座，以免發生意外。
9. 當小孩、傷殘人士、行動不便者在按摩椅附近或使用按摩椅時，一定要有人在場看護。
10. 只能將本產品用於本說明書中闡述的用途。
11. 不要使用非 OGAWA 推薦的附件。
12. 在使用過程中請勿坐在按摩椅小腿上，以免導致意外。
13. 請勿試圖站在扶手或靠背上，以免按摩椅發生傾倒從而導致意外。
14. 按摩過程中請勿進入睡眠狀態。
15. 請經常保持按摩椅清潔，避免將其他物體插入按摩椅的縫隙中。
16. 請勿直接透過拉扯電源線來移動按摩椅。
17. 請確保當降低小腿或靠背時，其下方無其他物體，特別是小孩。
18. 請在每次使用前，檢查按摩椅靠背絨布等處是否有異常裂縫。如有異常，請勿使用並即時聯繫 OGAWA 售後服務中心。
19. 本產品僅為居家使用而設計。
20. 當您無法確定自己是否能使用按摩椅時，請先諮詢醫師。

## 安全說明

21. 為避免因使用此按摩椅而導致不適或傷害，以下人士在使用本產品前應諮詢醫師：
  - 患有惡性腫瘤者
  - 患有心臟病者
  - 孕婦、產婦或月經期者
  - 需要安靜休息者
  - 正在接受治療者
  - 有背部疾病者，脊椎異常或扭曲者
22. 如在使用過程中覺得疼痛，請立即停止使用；如果在使用過程中受到損傷，請立即就醫。
23. 本產品僅為家庭提供舒適的按摩享受，並非專業的按摩醫療機械，因此不能代替專業的治療。
24. 建議每天使用按摩椅的時間為 30 分鐘，按摩同一部位時間不宜超過15分鐘，否則過度按摩會導致適得其反的效果，而且長時間使用會導致按摩椅過熱並縮短產品使用壽命。
25. 請勿在噴氣體溶膠或輸氧的環境中使用本產品。
26. 12歲或以下兒童不適宜使用本產品。
27. 如果電源線損壞，必須使用 OGAWA 或合法代理商所提供的專用電源線。
28. 使用過程中若施加過大的外力，為安全起見，機芯會自動停止以保護。當出現該情況時，先切斷整機電源，10秒后再接通電源進行操作。特別是體重超過100KG的用戶，使用時要特別注意。
29. 該設備具有加熱表面，對熱不敏感的人一定要小心使用設備
30. 此設備可以讓年齡從8歲以上兒童，肢體，感官或心智能力有缺陷，或者缺乏經驗知識的人使用，如果他們被監督，或者有經過有關使用本產品安全的方式和理解其危害性的指導。

## 保修權限

1. 本保修權限不可轉讓。
2. 本保修服務僅對在 OGAWA 購買的產品有效。
3. 當要求保修服務時，請出示購買證明（正本收據）。
4. 所有保修項目，包括但不限於這些健身及適銷性的保修項目有效期限需視保修政策而定。
5. 因錯誤使用、處理不當以及未經授權私自改裝和維修產品而導致的損壞，不屬於保修範圍。
6. 此保修範圍不包括不屬於產品本身的附件。
7. 此保修範圍不適用於租憑、交易、商業、機構或其他非住宅用戶。
8. 此保修範圍內所涉及的維修服務需經過 OGAWA 授權，且必須由授權的技術人員維修。
9. 若需更換的維修附件缺貨，OGAWA 有權採用替代配件進行維修。

## 功能特點



OGAWA按摩椅通過電腦智能化控制，配合揉捏、瑞典式、捶打、指壓、拍打、推拿，腳滾和氣壓功能等多種按摩手法及組合，針對各個穴位進行按摩，有效舒緩疲勞，促進新成代謝及加強血液循環。

具備各種全身自動/手動按摩功能以符合您的各種要求。

除了精確的穴位按摩外，可同步進行各種按摩功能以形成特制按摩程序。



1. 根據人體工學設計，以提供更有效的按摩效果。
2. 定時功能將按照你的需求對按摩時間進行調整。
3. 液晶顯示使手控器更易于操作。
4. 具備過熱過流保護，更加安全。
5. 操作是由微型智能處理器控制，使性能始終如一，卓越有效。
6. 本產品配有加熱功能，對熱不敏感者慎用。

## 產品部件

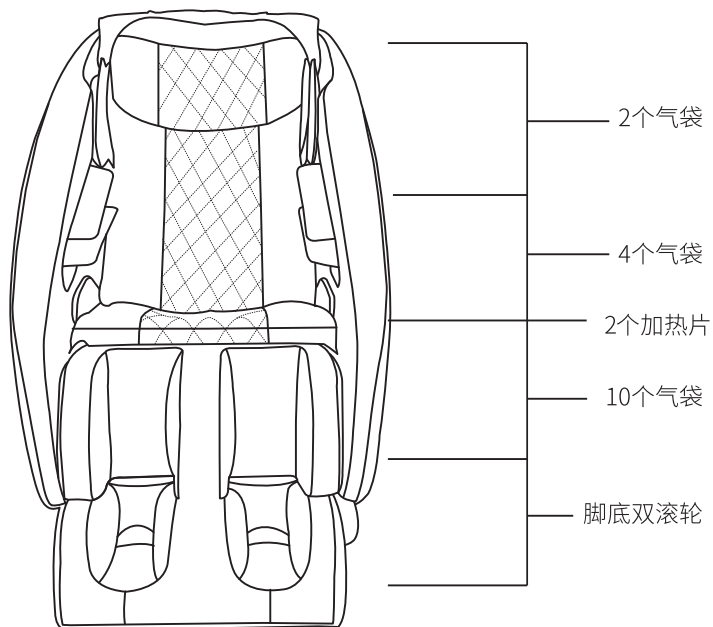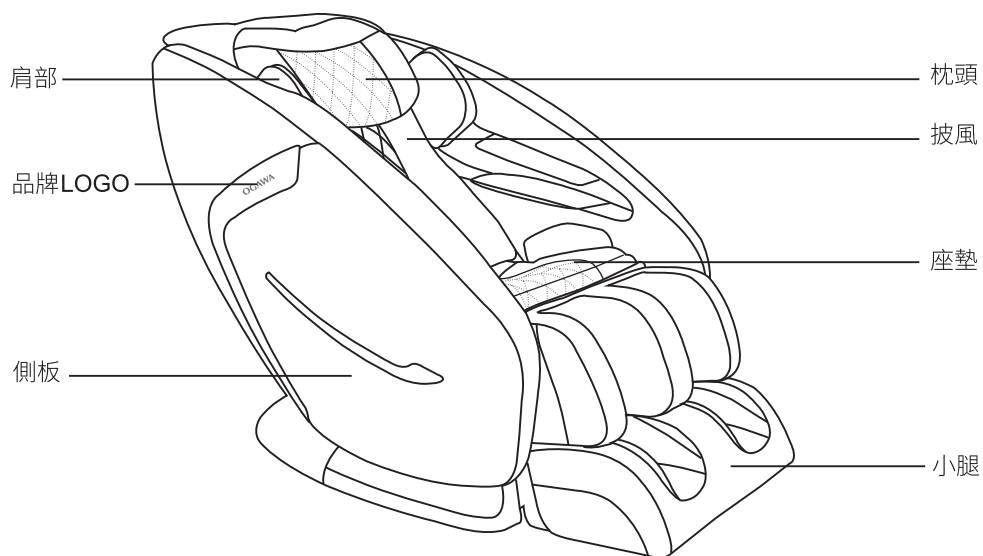

## 產品移動說明

向下壓靠背，將靠背傾斜約45度以方便在室內自由移動按摩椅。

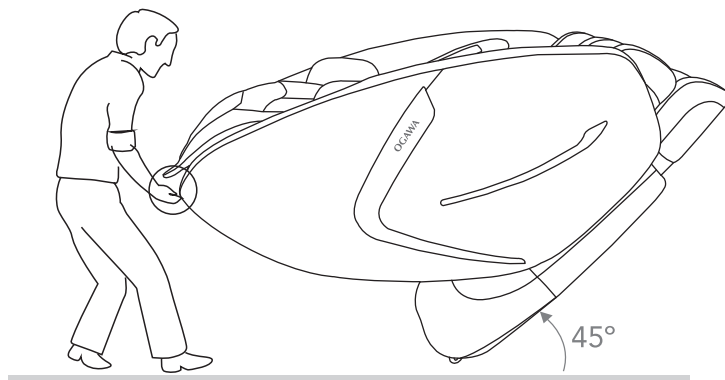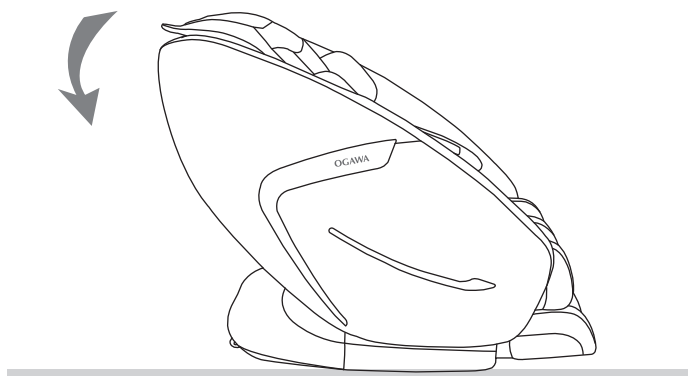

### 注意：

- i. 在移動按摩椅時一定要把腿墊完全收回，若不遵守，在移動過程中腿墊收到原始位置時，有可能導致受傷的情況。
- ii. 當有人坐在按摩椅上時，請不要移動椅子。
- iii. 移動按摩椅時可能會損傷地板，建議在本產品下鋪上墊子等。




# 控制器



# 操作說明

## 1. 插上電源綫，開啟總開關


- 先將電源綫插入按摩椅后側尾箱插座，然後將插頭插入電源插座，再將電源總開關切至「I」的位置，手控器上的開關鍵持續閃爍，屏幕閃爍顯示OF，機器正在復位，復位結束後屏幕顯示OF，本機進入待機狀態。

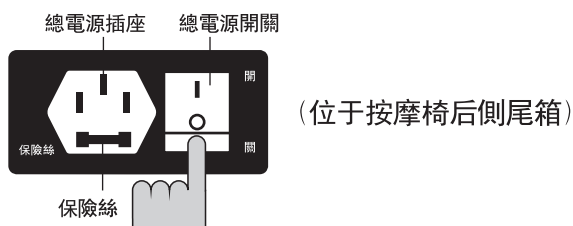

## 2. 坐上按摩椅，按下開關按鍵，啟動按摩椅


- 坐上按摩椅后，按下開關按鍵，按鍵指示燈點亮，屏幕亮起，即啟動按摩椅，進入待機狀態。



- ※ 待機狀態時間為倒數5分鐘，時間到即關閉電源。
- ※ 可選擇「」時間鍵來設定需要按摩的時間，最長可選擇30分鐘。
- ※ 自30分至1分時間顯示單位為「分」最后1分鐘倒數顯示單位為「秒」。

## 3. 調整椅背與腳墊，給自己最舒適的角度

- 按下「椅背傾躺」與「腳部升降」等相關按鍵調整到身體感覺最舒適的角度。
- ※ 當按住椅背(腳部)升降鍵時，椅背(腳部)將會持續的升起或降下，當傾斜到適合的位置時，只要放開該按鍵即可停止。
- 按下「Z·G」鍵開啟零重力按摩功能，再按一次為關閉。

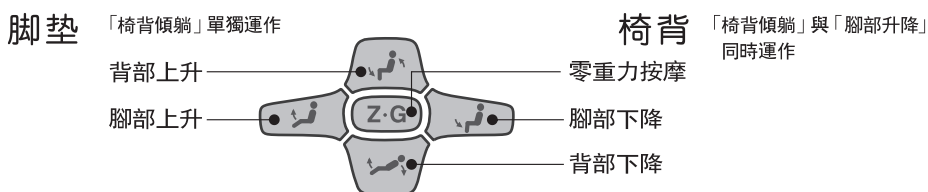

## 4. 停止或結束按摩

1. 自然停止：本機內設15分鐘定時功能，時間一到即自動停止所有動作（如手動延長時間除外），并保持設定的姿勢。
2. 暫停按摩：按摩中按下「暫停」鍵，將立即停止按摩，再按一次該鍵則繼續動作（如開啟暫停鍵忘記關機，則機器處於暫停狀態）。



# 操作說明

## 5. 開始按摩

### 全自動按摩程式

「男士」、「女士」、「頸肩」、「腰臀」与「拉伸」

全自動按摩程式包括以下按摩手法，各程式按摩手法搭配不同：  
「指壓」、「揉捏」、「拍打」與「氣囊」

按 鍵	名 稱	主 要 功 能
	男士保養按摩程式	以頸、肩定點揉捏+敲打+推拿為主的按摩程式 ※行進間可調整椅背與腳墊位置
	女士保養按摩程式	以慢速揉捏+拍打+氣壓的按摩程式 ※行進間可調整椅背與腳墊位置
	頸肩舒緩按摩程式	以頸、肩、背揉捏+腰部、尾椎拍打為主的按摩程式 ※行進間可調整椅背與腳墊位置
	腰臀重點按摩程式	以腰部重點揉捏+拍打+氣壓的按摩程式 ※行進間可調整椅背與腳墊位置
	松筋活絡按摩程式	以腿部與背部拉伸為主的按摩程式 ※按摩方式以下半身氣壓按摩與腿部、背部拉伸為主 ※本程式無法手動調整姿勢

※上述程式按摩時間皆為15分鐘，氣壓強度的設定值為中等，可另外按下「」鍵調整氣壓強度。

※上述皆為獨立程式，無法與其他程式混合使用。







**⚠ 注意：** 本產品不打算由肢體不全、感官或精神上有障礙或缺乏相關經驗和知識的人（包括兒童）使用，除非有負責他們安全的人對他們使用本產品進行監督和指導。應照看好兒童，確保他們不玩耍本產品。器具具有發熱表面，對熱不敏感的人使用時必須注意。

# 操作說明




## 手動按摩程式

### 手動按摩程式介紹








手動按摩程式為針對身體局部範圍按摩的程式

按 鍵	名 稱(液晶屏幕對應圖案)	主要功能與可調整範圍
 按摩手法鍵	 揉捏按摩	按一次「手法」鍵開啟揉捏按摩功能 可調整速度
	 捶打按摩	按二次「手法」鍵開啟捶打按摩功能 可調整速度與寬度
	 揉捶同步按摩	按三次「手法」鍵開啟揉捶同步按摩功能 可調整速度
	 拍打按摩	按四次「手法」鍵開啟拍打按摩功能 可調整速度與寬度
	指壓按摩	指壓按摩

※ 以上手動按摩程式皆為獨立程式，無法與其他程式混合使用。

※ 所有上述按摩程式初始設定為定點按摩，時間皆為15分鐘，可調速度初始設計值為中，可調寬度初始設定值為中，可分別按下「 」速度或「」寬度等按鍵調整。











### 手動按摩專屬功能性按鍵介紹

按 鍵	名 稱	主要 功能
 	按摩速度選擇	可選擇3段按摩速度
	按摩寬度選擇	可選擇3段按摩寬度 按鍵循環如右 
	按摩範圍選擇 (全程/局部)	按一次本鍵進入，「全程」按摩功能，按二次進入「局部」按摩功能，按三次為關閉
 	按摩球向上移動 按摩球向下移動	按下左列任一鍵放開后即為定點按摩

# 操作說明

## 功能性按鍵

各種功能性按鍵介紹，適用於自動或手動按摩程式

按 鍵	名 稱	主 要 功 能
	氣壓強度調整	可調整氣壓按摩強度 ※需配合氣壓按摩程式使用 ※按鍵循環如右 
	氣壓按摩1	氣壓按摩專屬程式 ※可單獨開啟，初始強度設定值為中 ※按鍵循環如下(氣壓部位選擇) 
	氣壓按摩2	氣壓按摩專屬程式 ※可單獨開啟，初始強度設定值為中 ※按鍵循環如下(氣壓部位選擇)  ※腳底按摩包括足部氣壓與腳底指壓
	腳底刮痧	腳底刮痧按摩專屬按鍵 ※于任何程式中皆可單獨開啟 ※按鍵循環如右 
	加熱功能鍵	腰部加熱功能按鍵 ※按鍵循環如右 

## 音樂功能

手機播放音樂：先打開手機的藍牙功能，然後選擇按摩椅音箱藍牙設備（代號BK8000L）待手機自動匹配好按摩椅音箱，即可實現通過按摩椅播放手機音樂功能。


**⚠ 警告：**除了修理技術人員之外，絕對不可自行拆解、修理和改動。  
有可能會導致火災、觸電。

# 清洗及保養

## 清潔合成皮革

### 使用柔軟的干布擦拭皮革。

- 切勿使用諸如稀釋劑、汽油、酒精等化學品清潔本機。
- 使用市面銷售的皮革保養品（抹布）時，請遵照其使用說明。
- 如果合成皮革特別髒，則通過以下方式擦拭。
  - 1、將軟布浸入水中或含3%至5%中性洗滌劑的熱水中，然後徹底擰干。
  - 2、使用上述軟布擦拭皮革表面。
  - 3、使用浸過清水且已徹底擰干的布料擦掉清潔液。
  - 4、使用擰干的軟布擦拭。
  - 5、使其自然風干。
- 難以去除污漬時，請將市面上購買的三聚氰胺泡棉進入中性洗滌劑中，然後用它擦拭本機。
- 不要使用吹風機吹干表面。
- 由於布料的顏色會染到合成皮革的表面上，因此在使用牛仔布和彩色布料擦拭本機時務必小心。
- 不要使這些部件長時間與塑料接觸，因為這會導致褪色。
- 合成皮革有變色的可能，所以在使用染發劑時，請將接觸的部分用毛巾覆蓋。

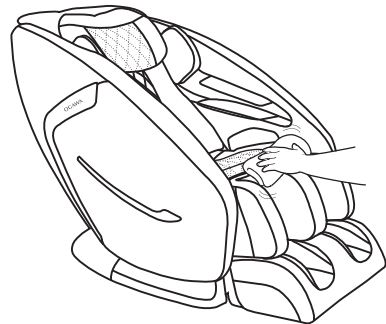


### 1 將軟布浸入水中或含有中性洗滌劑的熱水中，擰干后，擦拭本機塑料部。

- 切勿使用諸如稀釋劑、汽油、酒精等化學品清潔本機。

### 2 使用浸有清水且已徹底擰干的布料擦拭。

- 擦拭遙控器前請務必擰干布料。

### 3 使其自然風干。

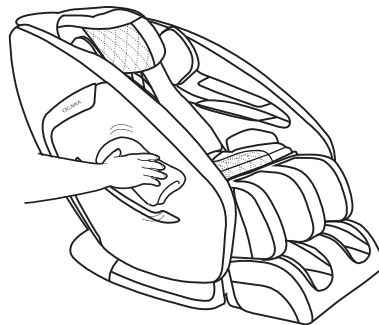

## 疑問解答 (Q&A)

**Q** 因為生病而經常出入醫生的人可以使用本產品嗎？

**A** 經常出入醫院的人，請在醫生商量的前提下使用本產品。

按摩即所謂「觸壓刺激」，即通過對肌肉進行壓迫，緩解肌肉緊張，促進血液流動。根據不同的病因，按摩有可能造成病情惡化，因此請務必在和主治醫生商量之後使用本產品。

**Q** 身高多少的人適合使用本產品？

**A** 根據體型的不同多少會有所差異。請大致參考下文使用產品。

- 身高小於145cm的用戶，及身高超過185cm的用戶同時使用上半身按摩和小腿、腳部按摩時，可能出現足底與腳部按摩部接觸不充分，或膝蓋彎曲的情況。

身高較高的用戶感覺膝蓋部位彎曲時

請選擇下述方法 **A**

- A** 放倒靠背，降低小腿、腳部按摩部位置。

身高較矮的用戶難以向下觸到足底按摩部時

請選擇下述方法 **A**


- A** 抬起靠背，升高小腿、腳部按摩部位置。

**Q** 搬家時，有什麼需要特別注意的地方？

**A** 請注意一下事項。

- 為了方便搬運，請先將按摩椅靠背傾斜到最低位置。
- 搬運時，人不要坐在座椅上。

① 按下開機鍵，接通電源。

② 按下  使靠背呈完全傾斜狀態。

請長按這個按鈕，直到靠背和小腿停止移動。




- 在有原裝紙箱的情況下，請先確認電源線未被纏繞在本機上，將電源線纏好放在座面上；搬運的時候，請注意電源線沒有掉落且未與地面發生摩擦。

- 在沒有原裝紙箱的情況下，為了防止機體劃傷和搬運中的震動，請妥善使用其他包裝輔材包裹本品。

**Q** 請問在哪里可以看到產品序列號？

**A** 在按摩椅主體背面的座面下。

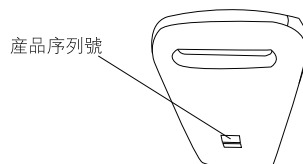

**Q** 未從膝蓋感受到溫熱怎麼辦？

**A** 請將膝蓋緊貼在溫感傳遞部。另外，用戶可以通過用毛毯蓋住膝蓋，增加溫暖感。

**Q** 有點在意按摩椅運作時發出的聲音……

**A** 按摩椅運作時產生的聲音，一般是由于機芯構造而發出來的。

**Q** 按摩中感覺左右兩邊按摩輪的按摩力度有差異，要緊嗎？

**A** 由于機芯構造，在按摩過程中，確有可能感覺左右按摩輪的力度有差異。

為了能夠模擬出最自然的按摩手法，本品機芯採用了允許左右按摩輪交替捶背的機芯構造。在按摩過程中，左右按摩輪接觸背部的具體位置可能稍有差異，從而導致了使用者產生左右兩側按摩力度有所不同的感覺。此時，本品本身並未發生故障。

**Q** 感到足底指壓過于用力……

**A** 使用氣囊按鈕將氣囊強度設置為「1」。另外，降低小腿、腳部按摩部，也可以減輕足底的指壓力度。

## 故障維修

發現故障后，首先檢查并嘗試一下方法。

如果在嘗試后，故障依然存在，請聯系銷售店。

問題	原因和處理方法
本使用本機過程中按摩輪停止 (按摩椅發出「嗶嗶」的聲音，遙控器上所有的顯示圖標和按鈕閃爍然后熄滅)	<p><b>在使用過程中，按摩輪遇到過大的外力時，處于安全考慮，按摩輪可能會停止移動。</b></p> <p>如果遙控器上的所有標記和按鈕開始閃爍，這種情況極為異常，請關閉電源開關，等待約10秒鐘，然後再次打開電源。 如果按摩輪再次停止，請調整自己的坐姿，不要使背部完全貼在靠背上。（應注意遵守相關注意事項，尤其在體重為100kg或以上的人使用時。）</p>
不能傾斜 腿置臺不能升高降低 (發出「嗶嗶」的聲音，遙控器的運行指示燈熄滅并停止運行)	<p><b>如果本機遇到了障礙物或者在使用本機時用力過大，處于安全考慮，本機將停止工作。</b></p> <p>當所有顯示的內容及按鈕在閃爍時，且靠背或腿置臺已停止工作，關閉本機電源一次，約10秒鐘后再次打「開啓」電源，然後操作本機。</p>
按摩輪沒有達到肩部或頸部的位置	<p>如果頭部沒有接觸到靠枕，或背部沒有接觸到靠背，在體型檢測過程中肩部位置可能低于實際位置。坐在座椅的最深位置，將頭部靠在靠枕上，然後從頭開始重新操作。</p>
左右按摩輪的蓋度（強度）不同	<p>因為搭載了可進行按摩輪交互捶拍動作的按摩機芯，出現這種情況純屬自然，并非機體故障。</p>
本機根本無法運行。 ● 上半身（頸部至腰部）按摩 ● 小腿和腳部按摩	<ul style="list-style-type: none"><li>● 電源線連接已斷開。</li><li>● 沒有打開本機電源開關。</li><li>● 按下遙控器上的  按鈕后，沒有選擇任何程序。</li></ul>
膝蓋溫感都沒有溫熱感	<ul style="list-style-type: none"><li>● 溫熱按鈕被設定為關閉狀態。</li><li>● 溫感的感知程度根據用戶的提醒，按摩手法，衣服，室溫而有所不同。請將膝蓋緊貼在溫感傳遞部，使用戶感到溫暖。另外，用戶可以通過毛毯蓋住膝蓋，增加溫暖感。</li></ul>
即使關閉溫熱功能，溫度也降不下來	<ul style="list-style-type: none"><li>● 由于加熱器的結構，加熱后片刻依然會因為余熱而感到溫暖。</li><li>● 關閉溫感功能，持續按摩同一部位，也會使體感溫度上升。</li></ul>
按摩結束後，即使重新按下  按鈕，也無法接通電源	<ul style="list-style-type: none"><li>● 按摩結束後大約需要5秒鐘程序才終止。當所有運作均已停止后至少等待5秒鐘，然後再按  。</li></ul>
本機已受損	
電源線或電源插頭異常發熱	<p>為防止事故發生，請務必與授權服務中心聯系。</p>




## 故障維修

### 關於運行過程中本機發出的聲音和令人在意的感覺

在使用中會發生下述動作音、感覺，不過這是因按摩椅的結構而發生，并非異常。

- 按摩輪由「伸出」改為「收回」時的聲音
- 動作時按摩輪擦過面料上的皺紋時發出的聲音和感覺
- 揉按、捶拍動作等的動作音
- 按摩輪動作時的摩擦聲
- 上下運動時的動作音
- 傳送帶的轉動音
- 電機音
- 按摩輪從「擠壓」改為「拉伸」時的聲音
- 落座時的聲音
- 靠背傾斜時扶手與靠墊的摩擦聲
- 按摩輪與布料的摩擦聲
- 氣囊按摩運作時的充氣泵工作音
- 氣囊按摩運作時的排氣音
- 氣囊按摩運作時座椅下電磁閥發出的工作音
- 腿置臺的晃動
- 肩部伸展、動作時的聲音
- 氣囊的動作音
- 腳部按摩的滑動音
- 靠背傾斜時，靠墊與后蓋上皮革摩擦時發出的聲音

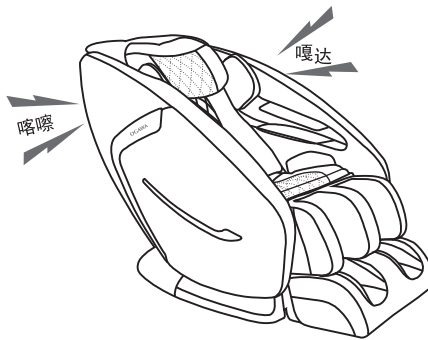

當聲音變大時，也有可能發生了故障。

- 此時，請委托授權服務中心進行檢查和修理。

### 警告

- 請勿擅自改造本機。請勿自行分解或修理本機。否則可能導致起火、異常動作、人身傷害。

### 警告

- 發生異常、故障時，立即停止使用，拔掉電源插頭。（否則可能冒煙、起火、觸電）  
<異常、故障事例>
  - 接通電源開關后可能不動作
  - 移動電源綫，有時通電有時不通電
  - 運行中發出焦臭味、異常聲響
  - 按摩椅變形或者異常發熱→請立即委托授權服務中心檢查和修理。

## 產品規格

電 源		AC220-240V~，50/60Hz
消 耗 電 力		150W
上半身 按摩	可按摩範圍(上下方向)	約97cm
	按摩速度	揉捏約21次/分鐘~37次/分鐘
		敲擊約422次/分鐘-703次/分鐘
	移動速度約43mm/秒	
傾 斜 角 度		靠背:約124°~157° 小腿:約92.5°~115°
自 動 關 閉		約15分鐘(自動斷電)
尺 寸	未傾斜時 (高 x 寬 x 長)	約 1520mm x 785mm x 1175mm
	傾斜時 (高 x 寬 x 長)	約 1935mm x 785mm x 1025 mm
重 量		約98Kg
包裝箱尺寸 (長 x 寬 x 高)		座架:1400x820x1235mm 小腿:530x440x510mm
重量(含包裝箱)		約110Kg
使用環境		環境溫度:0°C~35°C 相對濕度:20%~80%
儲存環境		環境溫度:-5°C~35°C 相對濕度:20%~80%
用戶最大體重		約120Kg

對於體重100kg或以上的人士，產品運作時可能產生更大的噪音而且面料外罩可能磨損得更快。

## 聯系我們



**MALAYSIA**  
Healthy World Lifestyle Sdn Bhd  
No. 22 Jalan Anggerik Mokara 31/47  
Kota Kemuning, 40460 Shah Alam  
Selangor Darul Ehsan, Malaysia  
Tel : +603-5121 4286  
Fax: +603-5121 4386



**HONG KONG, CHINA**  
OGAWA Health Care International (HK) Ltd  
31/F, YHC Tower, 1 Sheung Yuet Road  
Kowloon Bay  
Kowloon  
Hong Kong  
Tel: +852 3465 6262  
Fax: +852 2410 0119



**SINGAPORE**  
OGAWA Health-Care Pte Ltd  
27 Tampines Industrial Avenue 5,  
T5 @ Tampines  
Singapore 528623  
  
Tel: +065-6846 8588  
Fax: +065-6846 7677



**VIETNAM**  
OGAWA Vietnam Co Ltd  
2nd floor, Petroland Tower,  
12 Tan Trao, Tan Phu ward  
District 7, Ho Chi Minh  
Tel: +84 8 54133 222/54133 223  
Fax: +84 8 5416 1736



**INDONESIA**  
PT Healthy World  
Lodan Center Block O No 20  
Jalan Lodan Raya No 2  
Jakarta Utara 14430  
Tel : +62 21-6983 1123  
Fax: +62 21-6983 1124



**PHILIPPINES**  
O-Healthcare Solution Phil. Inc.  
2303, 4th Floor, G&A Building,  
Chino Roces Avenue Extension,  
Makati City, Philippines  
Tel : +632 889 0676 / +632 844 6851  
Fax: +632 812 0421

Ogawa is grateful  
to have received  
these awards:



PUTRA  
BRAND AWARDS 2010  
SILVER  
The most valuable  
Malaysia's Most Valuable Brands

Ogawa Wellness Hubs : Malaysia . Singapore . Vietnam . Philippines . Indonesia . Myanmar . India . China .  
Hong Kong . Taiwan . Turkey . Pakistan . Mauritius . Russia . France . Canada . Thailand .  
Korea . Australia . Dubai . K.S.A . Nigeria . Egypt . Lebanon . Denmark . Sweden . U.S.A