



# MASSGENIUS

MASSAGE CHAIR



**OG7508**

User Manual 使用手册

Rev.2.0





**MASSGENIUS**  
MESSAGE CHAIR

User Manual

All information is correct at the time of print

# Contents

Safety Instructions .....	1-2
Warranty Claims .....	3
Product Parts .....	4-5
Moving the Chair .....	6
Controller Diagram .....	7
Operation Guides .....	8-10
Product Features .....	11
Product Specifications .....	12
Troubleshooting .....	13
Product Maintenances .....	14
Contact us .....	15

# Safety Instructions

## Warning!

The plug must be fully inserted into an appropriate outlet. Improper connection of the equipment-grounding conductor can result in the risk of electric shock.

Check with a qualified electrician and servicemen if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided by the product .If the outlet is unsuitable, please ensure that a proper outlet is installed by qualified electrician

When using the massage chair, basic precautions should always be followed to reduce the risk of electric shock, burns, fire, or injury to the person.

Read the following details before usage:

1. Be sure to insert massage chair plug into the proper electrical outlet.
2. Make sure the power plug is securely inserted into the proper electrical outlet to reduce the risk of short-circuit and fire.
3. Always unplug the massage chair from the electrical outlet immediately after use and before cleaning.
4. DO NOT use the massage chair in places where the humidity is high.
5. DO NOT use the massage chair outdoors and avoid places with direct sunlight.
6. If the power goes off during use, be sure to turn the power switch to the “O” position and pull the power plug out from the socket to prevent any damages at the time when the power comes back.
7. Never operate the massage chair if the power cord is wet or damaged.
8. Never plug/unplug the power cord from the socket with wet hands.
9. Close and continuous supervision is necessary when this appliance is used by, on, or near children, invalids or disabled persons.
10. Use this appliance only for its intended use as described in this user manual.
11. Do not use any attachments other than those recommended by OGAWA.
12. Do not stand, sit or jump in the calves rest when massage chair is operating.This may result in an accident or injury.
13. Do not attempt to stand on the backrest and armrest .This may result in an accident or injury.
14. Be careful not to fall asleep during the massage.
15. Always keep the massage chair clean and never insert any object into the gaps in or around the massage chair.
16. Do not remove the massage chair by pulling the power supply cord.
17. Be sure to check that there is no one (children in particular), pet or obstacles under the massage chair prior to lowering the leg rest /backrest.

# Safety Instructions

18. Always check whether the surface of the massage chair is torn or ripped before usage. If you find any unfamiliar rips in any area of the cloth in the backrest, do not use the massage chair. Kindly contact OGAWA service center immediately for repairs.
19. This appliance is designed for household use only.
20. For those suffering from illnesses, please consult your doctor on whether you can use the massage chair if in doubt.
21. The following persons are requested to consult a doctor prior to use in order to reduce the risk of user feeling sick or suffering from injury:
  - Those who have malignant tumor
  - Those who suffer from heart disease
  - Those who pregnant , experiencing menstruation or puerperal fever
  - Those who require complete rest
  - Those who are under medical treatment
  - Those who suffer from back problems or whose backbone is abnormal or bent
22. If you experience pain during usage, stop using immediately. If any injuries occurs, stop using and consult a doctor immediately.
23. Never massage on swollen or inflamed parts of the body.
24. This product is non-professional appliance designed to provide a comfortable massage. Do not use this product as a substitute for medical treatment.
25. Do not use this massage chair for more than 30minutes at one time and kindly limit the massage to a concentrated area for not more than 15minutes. Over-massaging can cause overheating thus giving it a shorter lifespan.
26. Do not operate where aerosol (spray) products are used or where oxygen is being administered.
27. The massage chair is not suitable for children aged 12 years old or below.
28. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
29. As a safety precaution , motor will stop working automatically (for protection) if applying too strong external force during use. Once appear above, switch OFF power ,and switch ON again after 10 seconds . Please pay attention to this ,especially for user whose weight over 100KG.

# Warranty Claims

1. This warranty is not transferable.
2. This warranty is valid only if the product is purchased from OGAWA.
3. Proof of purchase (original receipt) is required for all warranty repairs.
4. All implied warranties, including but not limited to these implied warranties of fitness and merchantability, are limited in the total duration of 2 years from the original purchase date.
5. Damage due to misuse, improper treatment and unauthorized modifications. Repairs are not covered by this warranty.
6. Warranty does not cover accessories and attachments which do not belong to the massage chair.
7. Warranty is not effective to rental, business, commercial, institutional, or other non-residential users.
8. All services covered by this warranty must be approved by OGAWA and repaired by authorized technicians only.
9. If replacement parts for defective materials are not available, OGAWA reserves the right to make substitution in lieu of repair or replacement.

# Parts of the Chair





# Parts of the Chair





# Moving The Chair


1. Restore the footrest to its original position.
2. Recline the chair to tilt approximately 45 degrees. Move the chair using the wheels as the fulcrum.

**Note:**

- Always return the footrest to its original length and restore it to its original position before moving the chair, otherwise injury during movement may result.
- Do not move the chair while a person is seated on it.
- Place a mat on the floor and gently roll the chair over it to avoid damaging the floor.

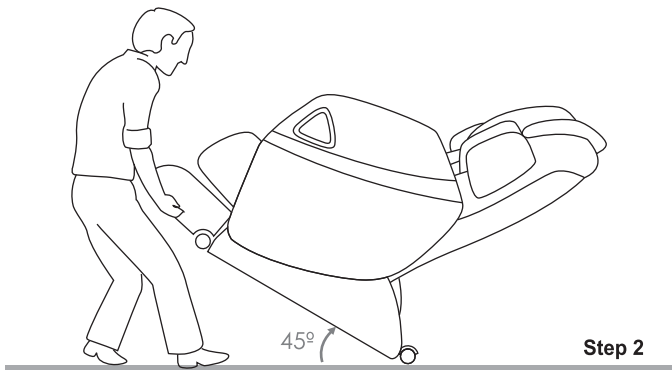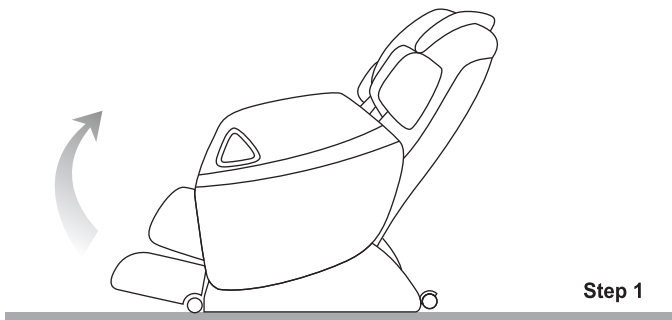

# Controller Diagram

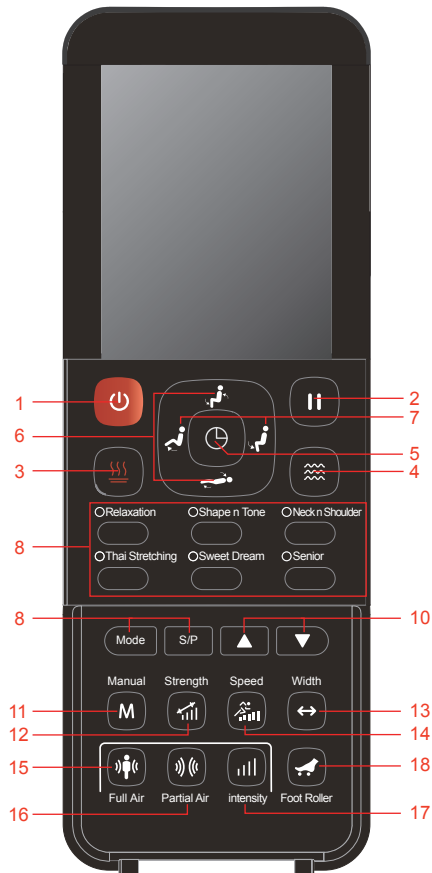

# Product Operation Guide

## •Please take note on below information when using this product:

- 1.Connect to the power supply, and press the power switch on the bottom of the massage chair frame to “I” position, and the massage chair is now in a reset state. At this point, the massage chair is in idle mode. During this idle mode, the red light of ON/OFF button will blink, which indicates the electric supply is connected.
- 2.During its idle mode, there are only five functions: ON/FF, Incline, Recline, Incline Leg and Recline Leg that can be operated.

## •Control Buttons for the Massage Chair

### 1.ON/OFF

#### The Start/Stop Control Button

Press once on this button, the LCD backlight and ON/OFF button will be lit. Press any massage function button to begin the chair’s massage functions. This will also start the timer.

Press this button again to stop all the massage functions and the massage rollers, backrest and footrest will return to their original position.

### 2.PAUSE

#### The Pause Button

When the chair is in massage mode and the user wants to temporarily pause it, press the Pause button and all massage functions will stop. The “Pause” button will be blinking and the set time countdown will be paused as well. Press the Pause button again to immediately cease the “Pause” function and resume the original massage function, the countdown will continue as well.

### 3.HEAT

#### The Waist Heating Button

Press this button to activate the heating function on waist. Press again to stop the function.

### 4.VIBRATIONThe Seat Vibration Button

Press this button to activate the vibration function on seat. Press again to stop the function.

### 5.TIMER

#### Time Interval Control Button

When a massage function is activated, the time is preset at 15 minutes. Every time this button is pressed, it will change the time interval sequence at “20>25>30>5>10>15>20” minutes.

### 6.INCLINE/ RECLINE

#### Angle Adjustment Control Button for Massage Chair

These two control buttons can adjust the Inclining/ Reclining angle respectively. Press once on the Inclining or Reclining control button to adjust the backrest and footrest to a desired comfortable position, press the button again to stop it.

### 7.INCLINE LEG/ RECLINE LEG

#### Angle Adjustment Control Button for Footrest

These two control buttons can adjust the massage angle on the footrest. Press once on the Incline Leg or Recline Leg control button to adjust the footrest to a desired comfortable position, press the button again to stop it.

## **8.Full Body Auto Programmer**

If either 1 of the 6 Auto Programs is activated, the chair will automatically perform a back scan. User can press on "UP" or "DOWN" control button to do adjustment.

**The following are the Auto program available:**

### **[Relaxation]**

Massage strength: Medium. Combination of 6 types of massage functions: kneading, swedish, tapping, shiatsu, clapping and rolling that precisely massage on full body.

### **[Shape n Tone]**

Massage strength: Medium. Focusing on kneading, tapping and clapping massage with seat vibration to your buttocks.

### **[Neck n Shoulder]**

Massage strength: Strong. Focusing on neck and shoulder massage.

### **[Thai Stretching]**

Massage strength: Strong. Focusing on tapping and kneading massage for body stretching.

Remark:

1. Incline/Recline and Incline Leg/Recline Leg functions cannot be operated during this program is activated.
2. This program is not suitable for elderly and physically weak people.

### **[Sweet Dream]**

Massage strength: Weak. Focusing on light massage that promotes sleep.

### **[Senior]**

Massage strength: Weak. Focusing on kneading and swedish massage with heat function which is suitable for elderly and physically weak people.

## **9.SPOT/ PARTIAL**

### **The Spot or Partial Back Massage**

This button allows the user to select spot massage for any part on the back. Press this button once to activate spot massage at the desired position. Press this button again to switch to Partial function.

### **The Partial Back Massage**

While running spot massage, when this button is pressed again, the massage will change from spot to partial. The massage will take the spot position as the central to perform partial massage at a distance of approximate 8 cm. Press again to stop the function.

## **10.UPWARD/DOWNWARD**

### **Massage Position Adjustment Button for Spot and Partial Massage**

In the spot or partial massage, user can use these two buttons to adjust the massage position by long pressing the UPWARD/DOWNWARD button and release the button when the massage roller reach the desired position.

Remark: When auto back scanning unable to satisfy your need, user can manually adjust the shoulder height position within 10 seconds after scanning.

## **11. Manual Massage Function**

### **KNEADING, SWEDISH, TAPPING, SHIATSU, CLAPPING, ROLLING**

Press this button to activate the rhythmic kneading manual massage function for a full back massage. Every time this button is pressed, the manual massage function will change in the sequence of “KNEADING> SWEDISH> TAPPING> SHIATSU> CLAPPING> ROLLING> stop”.

#### **MODE**

When the manual massage function is operating, press this button to change the rhythmic mode of manual massage between 1 and 2.

## **12. STRENGTH**

### **Strength Adjustment Button for Kneading – 5 levels of strength available**

After activating the Kneading function, user can press the button to adjust the massage strength to “Lv1> Lv2> Lv3> Lv4> Lv5” in one cycle.

## **13. WIDTH**

### **Back Massage Width Adjustment Button – 3 levels of width available**

After activating the tapping, shiatsu, clapping or rolling function, user can press the button to adjust the massage width to “narrow> medium> large” (6CM> 12CM> 18CM) in one cycle.

## **14. SPEED**

### **Speed Adjustment Button – 5 levels of speed available**

After activating the swedish, tapping, shiatsu or clapping function, user can press the button to adjust the massage speed in increasing mode, which is from slow to fast in one cycle.

## **15. Full Air**

### **Full Body Air Pressure Massage Button**

Press this button to activate the full body air pressure massage, press again the button to turn it off.

## **16. Partial Air**

### **Manual Air Pressure Massage Button**

Press this button to activate manual air pressure massage for footrest> hand> shoulder> Stop in a cycle.

## **17. INTENSITY**

### **Intensity Adjustment Button for Air Pressure – 5 levels of intensity available**

After activating the Air Pressure function (Auto and Manual), press this button to adjust the air pressure intensity in increasing mode, which is from weak to strong in one cycle.

## **18. FOOT ROLL**

### **Foot Roll Function Start/Stop Control Button**

Press once to activate the roller on foot, press again to stop the foot roll function.

# Product Feature

All these massage methods accurately capture the acupressure points that could alleviate fatigue, promote metabolism and improve blood circulation effectively.

Various types of manual/ auto massage to suit your needs.

Spring-styled massage that is specially structured for the back is designed according to the curve of the human body to provide a more effective and thorough massage.

- 1.The massage rollers use an interlocking gear to provide deeper massage to the acupressure points on the back.
- 2.Dual-automatic angle adjustment control. Backrest can be adjusted from 115°-160°, footrest can be adjusted 0°-90°.
- 3.The Timer function can be adjusted according to your desired duration of the massage program.
- 4.Touch controller is for an user- friendly operation.
- 5.Built in with power surge and automatic temperature sensor for safety.
- 6.The operation is controlled by an intelligent microprocessor for excellent performance and consistent quality.
- 7.Designed according to body curve, to provide better massage sensations.

# Chair Specifications

Product Name	Ogawa Mass Genius
Model no.	OG7508
Power source	220-240V~
Alternating current	50-60Hz
Power consumption	200W
Timer	15 minutes
Maximum operating period	15 minutes
Dimension (Length/width/height)	Upright position: 146 x74 x118cm
	Reclined position: 179 x74 x83cm
Weight	Product gross weight: 100KG
	Product net weight: 83KG
Length of the wire	Controller wire: Approx 1.5m
	Power supply wire: Approx 1.8m
Usage condition	Environment temperature: 0°C-35°C
	Contrasting humidity: 20-80RH
Storage condition	Storage temperature: -5°C-35°C
	Storage humidity level: 20-80RH
Safety feature	Equipped with overheated and power surge safety protection
Maximum body weight of user	120KG

For a user heavier than 100 kilograms, the product may have bigger noise and its fabric housing may be worn quicker.



# Troubleshooting

This massage chair is controlled by microcomputer and is susceptible to power surge even by +10% or -15%. The massage chair will show the following strange circumstances:

Situations	Solution
The Massage Chair cannot operate even though it has been connected to the power supply.	<ol style="list-style-type: none"><li>1) Check whether the plug is well connected and working well.</li><li>2) Check whether the switch of the Massage Chair is turned to position "I".</li></ol>
During operation, the controller is working but not the Massage Chair	The Massage Chair could be overheated after prolonged use. It will automatically cool down to resume its normal condition. Please turn OFF the power and allow the chair to cool down for 30 to 50 minutes.
During operation, both the controller and the Massage Chair are not working	<ol style="list-style-type: none"><li>1) If the set-time in the Timer is complete, please press the timer function again to resume operation.</li><li>2) Switch OFF power, and switch ON again to activate the Chair.</li></ol>

If above solutions are not workable, kindly refer to "product warranty card" and contact Ogawa Service Center.

# Product Maintenance

- Do not use cleaning detergent to clean the chair, use only water.
- Do not stack, pull harshly, stab or slit the surface of the massage chair.
- Press the controller's buttons gently during operation, avoids hitting with hard object.
- Please pull out the power supply wire plug after using.
- Recommended operation duration is 30 minutes. It is not advisable to exceed the suggested time frame.

# Contact Us



**MALAYSIA**  
Healthy World Lifestyle Sdn Bhd  
No. 22 Jalan Anggerik Mokara 31/47  
Kota Kemuning, 40460 Shah Alam  
Selangor Darul Ehsan, Malaysia  
Tel : +603-5121 4286  
Fax: +603-5121 4386



**HONG KONG, CHINA**  
OGAWA Health Care International (HK) Ltd  
31/F,YHC Tower,1 Sheung Yuet Road  
Kowloon Bay  
Kowloon  
Hong Kong  
Tel:+852 3465 6262  
Fax:+852 2410 0119



**SINGAPORE**  
OGAWA Health-Care Pte Ltd  
27 Tampines Industrial Avenue 5,  
T5 @ Tampines  
Singapore 528623  
  
Tel:+065-6846 8588  
Fax:+065-6846 7677



**VIETNAM**  
OGAWA Vietnam Co Ltd  
2nd floor,Petroland Tower,  
12 Tan Trao,Tan Phu ward  
District 7  
Ho Chi Minh  
Tel:+84 8 3775 3093/3775 3094  
Fax:+84 8 3775 3095



**INDONESIA**  
PT Healthy World  
Lodan Center Block O No 20  
Jalan Lodan Raya No 2  
Jakarta Utara 14430  
Tel : +62 21-6983 1123  
Fax: +62 21-6983 1124



**PHILIPPINES**  
O-Healthcare Solution Phil. Inc.  
2303, 4th Floor, G&A Building,  
Chino Roces Avenue Extension,  
Makati City, Philippines  
Tel : +632 889 0676 / + 632 844 6851  
Fax: +632 812 0421





**MASSGENIUS**  
MASSAGE CHAIR

User Manual  
All information is correct at the time of print

# 目錄

安全說明 .....	1-2
保修權限 .....	3
產品結構 .....	4-5
移動說明 .....	6
控制器說明 .....	7
操作指南 .....	8-11
功能特點 .....	12
產品規格 .....	13
異常處理 .....	14
產品保養 .....	15
聯絡我們 .....	16

# 安全說明

## 警告！

此按摩椅必須使用和插頭相匹配的插座。不正確的接地將會導致觸電危險的發生。

請不要擅自改裝插頭或插座，務必委託專業的技術人員進行檢查。

在使用電器產品時，為減少觸電、灼傷、火災、或人員傷害的危險，應遵守基本安全預防措施，包括以下內容：

在使用前請閱讀所有的使用說明：

1. 務必使用和插頭相配的插座。
2. 一定要確保插頭完全插入插座內，以避免短路或火災危險。
3. 在使用後或清潔前，請務必拔掉電源線插頭。
4. 請勿在高濕度的環境下使用本產品。
5. 請勿在室外或陽光直射的地方存放或使用本產品。
6. 如果在使用的過程中突然停電，請立即將開關撥至“0”的位置，且拔掉電源線插頭，以免來電時損壞本產品。
7. 當電源線潮濕或損壞時請勿使用按摩椅。
8. 請勿用濕手插入和拔掉插座，以免發生意外。
9. 當小孩、傷殘人士、行動不便者在按摩椅附近或使用按摩椅時，一定要有人在場看護。
10. 只能將本產品用於本說明書中闡述的用途。
11. 不要使用非OGAWA推薦的附件。
12. 在使用過程中請勿坐在按摩椅小腿上，以免導致意外。
13. 請勿試圖站在扶手或靠背上，以免按摩椅發生傾倒從而導致意外。
14. 按摩過程中請勿進入睡眠狀態。
15. 請經常保持按摩椅清潔，避免將其他物體插入按摩椅的縫隙中。
16. 請勿直接通過拉扯電源線來移動按摩椅。
17. 請確保當降低小腿或靠背時，其下方無其他障礙物體，尤其是小孩。
18. 請在每次使用前，檢查按摩椅靠背絨布等處是否有異常裂縫。如有異常，請勿使用並即時聯系OGAWA售後服務中心。
19. 本產品僅為居家使用而設計。
20. 當您無法確定自己是否能使用按摩椅時，請先諮詢醫師。

21. 為避免因使用此按摩椅而導致不適或傷害，以下人士在使用本產品前應諮詢醫師：

- 患有惡性腫瘤者
- 患有心臟病者
- 孕婦、產婦或月經期者
- 需要安靜休息者
- 正在接受治療者
- 有背部疾病者，脊椎異常或扭曲者

22. 如在使用過程中覺得疼痛，請立即停止使用；如果在使用過程中受到損傷，請立即就醫。

23. 請勿按摩紅腫或發炎的身體部位。

24. 本產品僅為家庭提供舒適的按摩享受，並非專業的按摩醫療機械，因此不能代替專業的治療。

25. 建議每天使用按摩椅的時間為30分鐘，按摩同一部位時間不宜超過15分鐘，否則過度按摩會導致適得其反的效果，而且長時間使用會導致按摩椅過熱並縮短產品使用壽命。

26. 請勿在噴氣體溶膠或輸氧的環境中使用本產品。

27. 12歲或以下兒童不適用本產品。

28. 如果電源線損壞，必須使用專用的電源線或從其製造商或維修部買專用組件來更換。

29. 使用過程中若施加過大的外力，為安全起見，機芯會自動停止以保護。當出現該情況時，先切斷整機電源，10秒後再接通電源進行操作。特別是體重超過100KG的用戶，使用時要特別注意。



# 保修權限

1. 本保修權限不可轉讓。
2. 本保修服務僅對在OGAWA購買的產品有效。
3. 當要求保修服務時請出示正本購買憑據。
4. 在保修範圍內的維修服務自購買之日起兩年內有效。
5. 由於錯誤使用、不合理保養以及未經授權私自改裝和維修此產品而導致的損壞，不屬於保修範圍。
6. 此保修範圍不包括不屬於產品本身的附件。
7. 此保修範圍不適用於租賃、交易、商業、機構或其他非個人使用者。
8. 此保修範圍所涉及的維修服務必須經過OGAWA授權，且必須由授權的技術人員維修。
9. 若需更換的維修附件缺貨，OGAWA有權採用替代配件進行維修。

# 產品結構







# 產品移動說明


托起小腿墊，將椅背傾斜45度以方便在室內自由移動按摩椅。

## ▲ 注意：

- 1、在移動按摩椅時一定要把腿墊完全收回，若不遵守，在移動過程中腿墊收回到原始位置，有可能導致受傷的情況。
- 2、當有人坐在按摩椅上時，請不要移動椅子。
- 3、移動按摩椅時可能會有損傷地板，建議在本產品下鋪上墊子等。

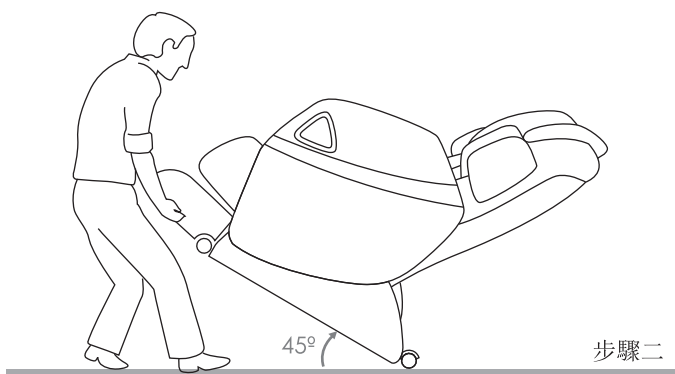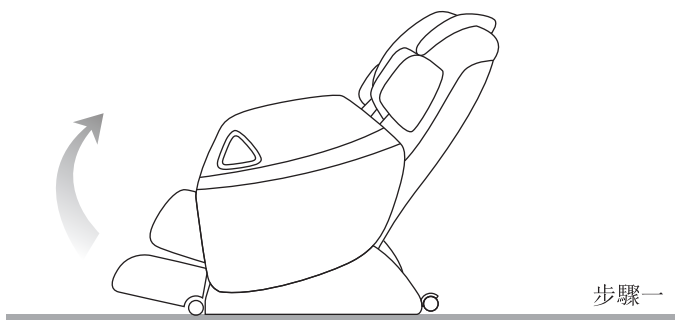

# 控制器說明

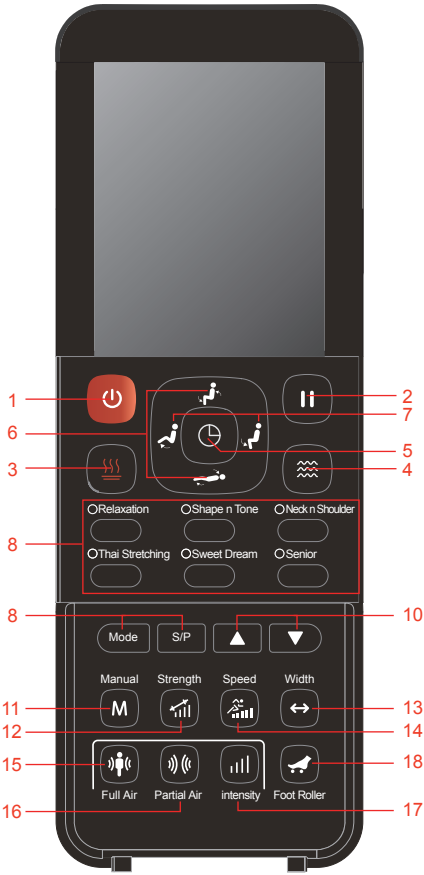

# 操作說明

## 一、使用本產品請注意如下事項：

- 1、接通電源，將按摩椅座架下方的電源開關按至“I”的位置，按摩椅處於複位狀態。此時按摩椅進入待機狀態，在待機狀態下，開/關控制鍵的紅燈會不停的閃爍，表示已接通電源。
- 2、在待機狀態的情況下，只有開關、升背、倒背、升腿、降腿五項功能可以操作。

## 二、按摩椅控制鍵

### 1、開/關

#### 整機按摩功能啟/停控制鍵

按一下此控制鍵開機，手控器的紅色燈和手控器螢幕將被點亮，此時按下任何鍵開始享受按摩，同時將啟動15分鐘定時功能。

產品處於運行狀態時按一下此鍵關機，按摩輪、靠背和小腿將恢復到初始位置。

### 2、暫停

#### 暫停控制鍵

如需暫停按摩功能，請按暫停鍵，此時所有按摩功能都將停止。暫停控制鍵的橙色燈將會閃爍，定時功能也一併暫停。

再按此控制鍵以繼續被暫停的按摩功能，定時功能也將恢復計時。

### 3、腰部溫熱

#### 腰部溫熱功能啟動/停止鍵

按一次此鍵開啟腰部溫熱功能，屏上顯示溫熱圖示；在開啟溫熱狀態下，再按此鍵則停止溫熱功能，螢幕上溫熱圖示熄滅。

### 4、座部振動

#### 座部振動功能啟停控制鍵

按一次此鍵開啟座部振動功能，屏上顯示振動圖示；在開啟振動狀態下，再按此鍵則停止振動功能，螢幕上振動圖示熄滅。

### 5、定時

#### 定時功能啟停控制鍵

當按摩程式啟動時，定時功能自動設置為15分鐘，每按一次定時控制鍵，定時時間將按“20 > 25 > 30 > 5 > 10 > 15 > 20”進行迴圈調整。

## 6、升背/倒背

### 按摩角度調節控制鍵

通過這兩個控制鍵可以調節椅背角度，按一次升背/倒背，按摩角度將進行調節，當調節到達適當的角度時，再按一次升背/倒背中的其中一個控制鍵即可定位。

## 7、升腿/降腿

### 腿部角度調節控制鍵

通過這兩個控制鍵可以調節小腿角度，按一次升腿/降腿，小腿角度將進行調節，當小腿到達適當的角度時，再按一次升腿/降腿中的其中一個控制鍵即可定位。

## 8、全身自動按摩功能

當6個自動按摩程式中任意一個啟動之後，產品對背部自動進行檢測以達到最佳的按摩位置。同時也可根據需要按上/下鍵對按摩位置進行手動調整。

### 6個部自動按摩程式：

【全身舒展】按摩力度：中。根據身體不同部位，將揉捏式、瑞典式、捶打式、指壓式、拍打式及推拿式六款按摩手法結合，採取最適合的按摩手法進行全身按摩。

【美臀塑形】按摩力度：中。以揉捏式、捶打式、拍打式按摩手法為主，搭配座部振動按摩功能，針對臀部進行重點按摩。

【頸肩重點】按摩力度：強。以慢揉重敲的原則對頸肩部進行按摩。

【泰式拉伸】按摩力度：強。以捶打式和揉捏式按摩手法，結合充氣配合機芯動作，對身體進行拉伸舒展按摩。

注：1、按此程式時，靠背和小腿調節鍵無效。

2、此程式按摩力度較強，不建議老年人或不受力人群選用。

【睡眠模式】按摩力度：弱。以輕揉輕拍的按摩手法為主，輕鬆助眠。

【老年模式】按摩力度：弱。以揉捏式、瑞典式按摩手法為主，配合溫熱功能，此程式適合老年人或較為不受力的人群選用。

## 9、定點/局部

### 背部定點功能控制鍵

此鍵用於啟停背部定點按摩功能，在背部所需按摩的位置按一下此鍵，將對該按摩位置提供集中的定點按摩；再按一下則解除“定點”按摩功能。

### 背部局部功能控制鍵

在所需按摩的位置按一下此鍵，開啟背部局部按摩功能，在原點上下8CM的區間內提供背部局部按摩，再按一下此鍵則解除背部“局部”按摩功能。

## 10、上/下調節

### 定點和局部功能位置調節控制鍵

在定點/局部按摩開啟時，長按上/下鍵可調節按摩輪位置，在到達需要按摩的位置時放開按鍵即可定位按摩。

注：開啟自動按摩程式，對肩部進行檢測後，如需要調整肩高度，可在檢測後10秒內按這兩個控制鍵進行微調。

## 11、手法切換

### 背部按摩手法選擇鍵

按一次此控制鍵啟動全背按摩手法選擇功能，每按一次此控制鍵將按順序：“揉捏式 > 瑞典式 > 捶打式 > 指壓式 > 拍打式 > 推拿式 > 停止”對背部按摩手法進行迴圈切換。

### 模式切換

選擇好按摩手法後，可進行模式切換，如選擇“揉捏式”時，將進行“揉捏1”模式按摩，此時按下此鍵則切換到“揉捏2”模式，依此類推。

## 12、力度調節

### 揉捏式力度調節控制鍵 - 5檔力度可調

在揉捏式按摩功能運行模式下，每按一次此鍵將對按摩力度如：

“Lv1 < Lv2 < Lv3 < Lv4 < Lv5”進行迴圈調整。

## 13、寬度調節

### 捶打式、指壓式、拍打式及推拿式寬度控制鍵 - 3檔寬度可調

在捶打式、指壓式、拍打式和推拿式按摩啟動時，每按一次此控制鍵將對按摩滾輪寬度進行“窄 < 中 < 寬”（6CM < 12CM < 18CM）迴圈調整。



#### 14、速度調節

瑞典式，捶打式，指壓式及拍打式按摩功能的速度調節控制鍵 - 5檔速度可調

在瑞典式，捶打式，指壓式及拍打式按摩功能運行模式下，每按一次此控制鍵將對按摩速度進行由慢到快的順序迴圈調節。

#### 15、全身氣壓

全身氣壓按摩功能啟停控制鍵

在開機狀態下按一下此鍵，進入全身氣壓按摩程式，再按一下，則停止全身氣壓按摩程式。

#### 16、局部氣壓

氣壓按摩部位選擇控制鍵

在開機狀態下按一次此鍵，可對氣壓按摩部位進行選擇，每按一次此控制鍵，選擇氣壓按摩部位順序為：腿部 > 手部 > 肩部 > 停止。

#### 17、氣壓強度

氣壓按摩強度控制鍵 - 5檔強度可調

在自動程式或手動氣壓按摩運行模式下，每按一次此控制鍵，將對氣壓按摩強度進行由弱到強的順序迴圈調節。

#### 18、腳底滾輪

腳底滾輪功能啟停控制鍵

按一次此鍵，開啟腳底滾輪按摩功能，屏上顯示腳底滾輪圖示；再按一次，則停止此功能，螢幕上腳底滾輪圖示熄滅。

## 功能特點

多種按摩手法針對各個穴位進行按摩，有效舒緩疲勞，促進新陳代謝及加強血液循環。

具備自動按摩程式及各種手動按摩功能以符合廣大顧客的要求。除了精準的穴位按摩外，精心設計符合人體背部人工學，以提供更有效的按摩享受。

1. 按摩齒輪採用連鎖齒輪為背部穴位提供更深入的按摩.
2. 按摩椅具備雙自動調整，椅背可以從115度調整至160度，小腿則可以從0度到90度間進行調整。
3. 定時功能將按照你的需求對按摩時間進行調整.
4. 液晶顯示使手控器更易於操作.
5. 具備過熱過流保護, 更加安全.
6. 操作是由微型智慧處理器控制, 使性能始終如壹, 卓越有效.
7. 根據人體工學設計，以提供更有效的按摩效果。

## 產品規格

產品名稱	Ogawa Mass Genius
型號	0G7508
額定電壓	220-240伏特
額定頻率	50-60Hz
額定功率	200W
定時	15分鐘
額定時間	15分鐘
尺寸（長 X 寬 X 高）	直立狀態：146 x74 x118厘米
	倒背狀態：179 x74 x83厘米
重量	整機毛重：100KG
	整機淨重：83KG
線長	手控器線長：約1.5米
	電源線長：約1.8米
使用環境	環境溫度：0°C-35°C
	相對濕度：20-80RH
儲存環境	環境溫度：-5°C-35°C
	濕度水準：20-80RH
安全功能	具備過熱，過流保護
用戶最大體重	120KG

對於體重100KG以上的人士，產品運作時可能產生更大的噪音而且面料外罩可能磨損的更快。

## 疑難解答

此按摩椅為微電腦控制，對電壓波較為敏感。如果電壓波動超過限定電壓+10%或-15%，按摩椅可能出現以下情況。

可能出現的異常情況	處理方法
插上電源，但按摩椅無法操作	1) 檢查電源插頭是否插好或是否通電。 2) 檢查按摩椅後下方的電源開關是否處於“I”的位置。
使用過程中，控制器可以操作，但按摩椅無法操作。	長時間操作後，按摩椅引擎的溫度過高，按摩椅將自動處於溫度保護狀態。請關閉電源並暫停使用30~50分鐘以上讓引擎內部散熱。
使用過程中，控制器無法操作，按摩椅也無法操作。	1) 在自動定時功能啓動後，若定時時間已到，請重新按鍵即可操作。 2) 關掉電源，重新通電啓動按摩椅。

注意：若以上處理方法無效，請參閱《產品保修卡》，聯繫OGAWA服務中心。

## 產品保養

- 除了用清水，避免使用其他化學劑清洗按摩椅。
- 避免重壓、硬物敲擊、強拉、刮花按摩椅表面。
- 操作時請輕觸按鍵，避免以指甲按壓。
- 使用後請立即拔出電源插頭。
- 建議使用時間不超過30分鐘，不宜過長，過度使用，否則將可能導致適得其反的效果。

# 聯絡我們



**MALAYSIA**  
Healthy World Lifestyle Sdn Bhd  
No. 22 Jalan Anggerik Mokara 31/47  
Kota Kemuning, 40460 Shah Alam  
Selangor Darul Ehsan, Malaysia  
Tel : +603-5121 4286  
Fax: +603-5121 4386



**HONG KONG, CHINA**  
OGAWA Health Care International (HK) Ltd  
31/F,YHC Tower,1 Sheung Yuet Road  
Kowloon Bay  
Kowloon  
Hong Kong  
Tel:+852 3465 6262  
Fax:+852 2410 0119



**SINGAPORE**  
OGAWA Health-Care Pte Ltd  
27 Tampines Industrial Avenue 5,  
T5 @ Tampines  
Singapore 528623

Tel:+065-6846 8588  
Fax:+065-6846 7677



**VIETNAM**  
OGAWA Vietnam Co Ltd  
2nd floor,Petroland Tower,  
12 Tan Trao,Tan Phu ward  
District 7  
Ho Chi Minh  
Tel:+84 8 3775 3093/3775 3094  
Fax:+84 8 3775 3095



**INDONESIA**  
PT Healthy World  
Lodan Center Block O No 20  
Jalan Lodan Raya No 2  
Jakarta Utara 14430  
Tel : +62 21-6983 1123  
Fax: +62 21-6983 1124



**PHILIPPINES**  
O-Healthcare Solution Phil. Inc.  
2303, 4th Floor, G&A Building,  
Chino Roces Avenue Extension,  
Makati City, Philippines  
Tel : +632 889 0676 / +632 844 6851  
Fax: +632 812 0421



Ogawa is grateful  
to have received  
these awards:



PUTRA  
BRAND AWARDS 2010  
SILVER  
TO ACCOMPLISH WITH  
MALAYSIA'S MOST VALUABLE BRANDS

Ogawa Wellness Hubs : Malaysia . Singapore . Vietnam . Philippines . Indonesia . Myanmar . India . China  
Hong Kong . Taiwan . Turkey . Pakistan . Mauritius . Russia . France . Canada  
Thailand . Korea . Au stralia . Dubai . K.S.A . Nigeria . Egypt . Lebanon . Denmark  
Sweden . U.S.A