








MASTER DRIVE AI 2.0


MORE THAN A.I

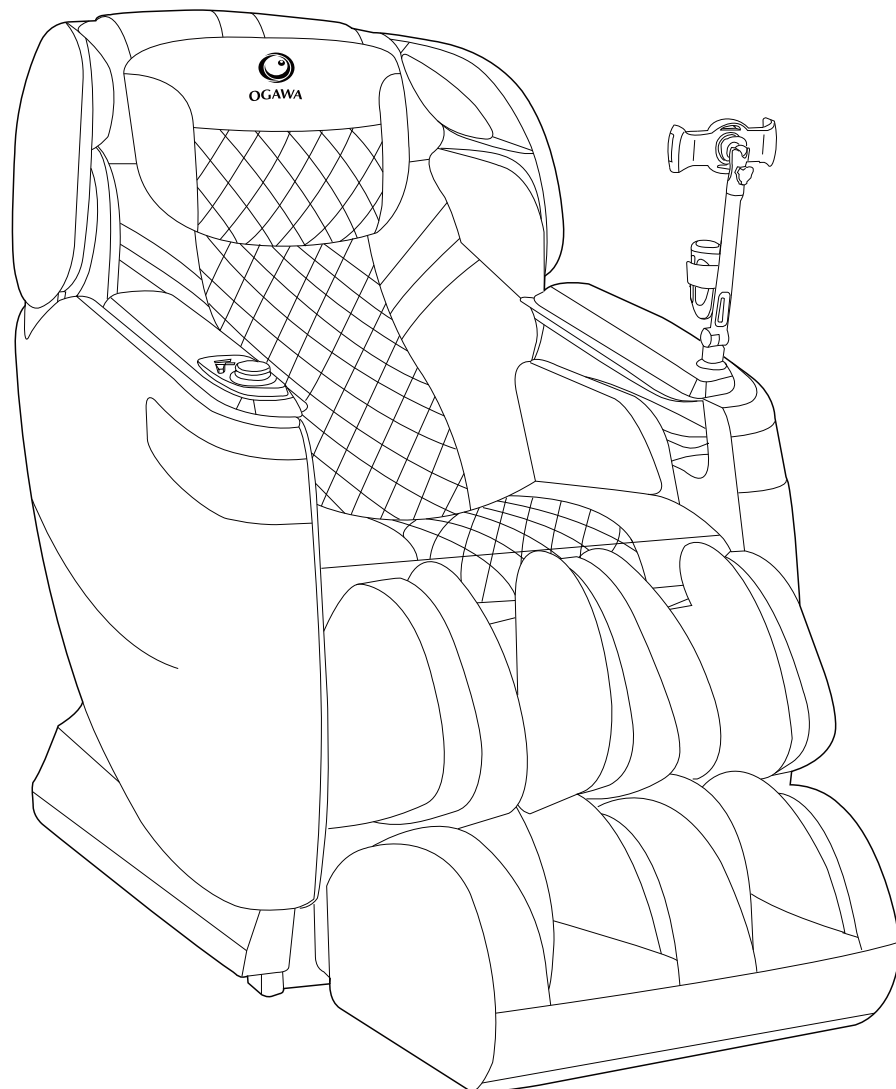

Rev.1.0

User Manual
OG7598X 使用手册



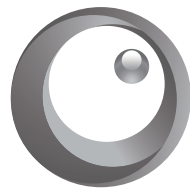

OGAWA

MASTERDRIVE AI 2.0
MORE THAN A.I

User Manual
All information is correct at the time of print

Contents

Before Use

- **Important safety instructions** EN1
- **Grounding instructions** EN5
- **Product parts** EN6
- **Setup of the massage lounger** EN8
- **Assembly** EN9
- **Before use** EN10

How to Use

- **Short Cut Button Operation** EN14
- **Operation Guide** EN15
- **After massage** EN20

Maintenance

- **Cleaning and maintenance** EN22

Q&A/Important notes



- **Q&A** EN23
- **Troubleshooting** EN24
- **Specification** EN27
- **Contact Us** EN28

Important safety instructions

Must be followed



These safety instructions must be strictly followed in use to avoid personal injuries and property damage are as follows:

■ All the safety instructions are described in compliance with degrees of the injuries or damage as a result of wrong use.





 Warning	Actions tending to cause serious injuries or death
 Caution	Actions tending to cause minor injuries or property damage

■ Pay attention to the symbols before safety instructions (an example is given below).



 Actions that must be absolutely forbidden	 Actions that must be done
--	---

 Warning															
 Must be followed	<ul style="list-style-type: none"> ● Before using the product, persons who are being treated or have any of the following symptoms should consult a physician. <table border="0"> <tr> <td>(1) Persons with a pacemaker or another in-vivo electronic medical device tending to suffer electronic jamming;</td> <td>(8) Persons with injuries in the massaged parts;</td> </tr> <tr> <td>(2) Patients with malignant tumors;</td> <td>(9) Persons with a body temperature above 38 °C (with a fever) (For example, persons with intense acute inflammation symptoms such as listlessness, cold shivers and blood pressure change or persons in poor health);</td> </tr> <tr> <td>(3) Patients with heart disease;</td> <td>(10) Persons who are unwell or must have a rest;</td> </tr> <tr> <td>(4) Persons proved to be unable to identify temperatures;</td> <td>(11) Persons with an abnormal or bent vertebra;</td> </tr> <tr> <td>(5) Pregnant persons or women who have just had childbirth;</td> <td>(12) Persons with protrusion of intervertebral disc;</td> </tr> <tr> <td>(6) Persons with perceptual disturbance because of diabetes or another serious peripheral circulation disturbance;</td> <td>(13) Persons who feel very uncomfortable (except for the circumstances above)</td> </tr> <tr> <td>(7) Osteoporosis patients, spinal fracture patients, or persons with acute painful diseases such as sprains or muscle strains;</td> <td></td> </tr> </table> <p>Otherwise accidents or physical discomfort may happen.</p> 	(1) Persons with a pacemaker or another in-vivo electronic medical device tending to suffer electronic jamming;	(8) Persons with injuries in the massaged parts;	(2) Patients with malignant tumors;	(9) Persons with a body temperature above 38 °C (with a fever) (For example, persons with intense acute inflammation symptoms such as listlessness, cold shivers and blood pressure change or persons in poor health);	(3) Patients with heart disease;	(10) Persons who are unwell or must have a rest;	(4) Persons proved to be unable to identify temperatures;	(11) Persons with an abnormal or bent vertebra;	(5) Pregnant persons or women who have just had childbirth;	(12) Persons with protrusion of intervertebral disc;	(6) Persons with perceptual disturbance because of diabetes or another serious peripheral circulation disturbance;	(13) Persons who feel very uncomfortable (except for the circumstances above)	(7) Osteoporosis patients, spinal fracture patients, or persons with acute painful diseases such as sprains or muscle strains;	
	(1) Persons with a pacemaker or another in-vivo electronic medical device tending to suffer electronic jamming;	(8) Persons with injuries in the massaged parts;													
	(2) Patients with malignant tumors;	(9) Persons with a body temperature above 38 °C (with a fever) (For example, persons with intense acute inflammation symptoms such as listlessness, cold shivers and blood pressure change or persons in poor health);													
	(3) Patients with heart disease;	(10) Persons who are unwell or must have a rest;													
	(4) Persons proved to be unable to identify temperatures;	(11) Persons with an abnormal or bent vertebra;													
	(5) Pregnant persons or women who have just had childbirth;	(12) Persons with protrusion of intervertebral disc;													
	(6) Persons with perceptual disturbance because of diabetes or another serious peripheral circulation disturbance;	(13) Persons who feel very uncomfortable (except for the circumstances above)													
	(7) Osteoporosis patients, spinal fracture patients, or persons with acute painful diseases such as sprains or muscle strains;														
	<ul style="list-style-type: none"> ● If you feel physically abnormal while using or no effect after use, stop the product immediately and consult a physician about it. Otherwise accidents or physical discomfort may happen. 														
	<ul style="list-style-type: none"> ● Before being massaged or moving the backrest or the Lower Leg/Foot massage section, make sure there is no person or pet close to the product (in front, behind, below or on the side). ● Before use, make sure there is no foreign matter between the backrest and the back cover. Otherwise accidents or physical discomfort may happen. 														
<ul style="list-style-type: none"> ● Before use, lift the back cushion and check whether fabric of traveling sections of the massage wheels or of other positions are damaged. (Even if the fabric is slightly damaged, stop the product immediately, pull out the power plug and send the product to repair.) If the product is used when the fabric is damaged, you may get injured or get an electric shock. 															
<ul style="list-style-type: none"> ● In the first time of use, select AM Routine mode. ● Do not massage for more than 30 minutes each time. ● Do not massage a single part for more than 5 minutes. If any of these safety instructions is not followed, you may suffer an adverse effect and be injured. 															
<ul style="list-style-type: none"> ● After use each time, turn the power switch to the “O” position ,and then pull out the power plug. Otherwise accidents or injuries may happen due to naughty behaviors of children. 															
<ul style="list-style-type: none"> ● Follow the regulations about use of the socket and the wiring devices. ● Use a 220-240V~,50/60Hz power supply. (Do not use the product in a foreign country or connect it with a transformer without permission.) Otherwise electric shocks, product faults or fires because of overheat may happen. 															
<ul style="list-style-type: none"> ● Insert the power plug thoroughly into the socket. Otherwise electric shocks or fires caused by overheat may happen. 															
<ul style="list-style-type: none"> ● Remove such dirt as dust on the power plug at regular intervals. Otherwise fires caused by poor insulation due to factors such as moisture may happen. (Wipe the power plug with dry cloth.) 															





Warning

 Must be followed	<ul style="list-style-type: none"> ● In the case of any abnormality or fault, stop the product immediately and pull out the power plug to avoid smoke, fires and electric shocks. Abnormality and fault examples <ul style="list-style-type: none"> • The product fails to work after the power switch is turned to the ON position; • After the power line is moved, the product is discontinuously powered on; • In use, the product gives off a burning smell or an abnormal sound; • The product is deformed or abnormally heating; → In any of these abnormalities and faults, have the product inspected and repaired by an authorized service center immediately.
 Forbidden	<ul style="list-style-type: none"> ● Do not put the back cushion between the backrest and the back cover. Otherwise product faults may happen. ● When handling the product, hold its frame. Otherwise product faults or personal injuries may happen. ● The following persons should not use the product. Persons for whom massage is forbidden by doctors, such as persons with thrombosis, serious aneurysm, acute venous aneurysm, various skin inflammations (such as subcutaneous tissue inflammation) or various skin infections. Otherwise diseases may get worse. ● The following persons should not massage their waists. <ul style="list-style-type: none"> • Persons with acute lumbago, protrusion of intervertebral disc, or displacement of a lumbar vertebra; • Persons with deformation or other discomfort of the hip joint; Otherwise diseases may get worse. ● Do not put hands, arms or feet into the backrest's fabrics of traveling sections of the massage wheels. ● Children should not use the product. Keep them from playing on the product or climbing onto the Lower Leg/Foot massage section, the seat, the backrest or the armrests. ● Do not climb onto the backrest or the armrests. ● Do not lean or sit on the backrest. ● Keep your head from reachable areas of the backrest and the back cover. ● Persons unable to express themselves clearly or unable to operate the product should not use the product. ● When massing the neck, pay attention to moving directions of the massage wheels and do not massage with a too large force or massage front part of the neck. Otherwise accidents or personal injuries may happen. ● Do not damage the power line or the power plug. (Do not damage, machine, forcibly bend, twist or prolong the power line or the power plug, or place the power line or the power plug close to a heater, or tie or bind any heavy objects on the power line or the power plug.) A damaged power line or power plug may result in electric shocks, short circuit faults or fires. Please consult the shop from which you bought the product or a designated authorized service center about maintenance method of the power line or the power plug. ● When using the Warm massage wheels, avoid longtime contact with the skin in one position. ● Do not use the Knee Warm massage for a long time. Otherwise you may get low-heat burns. *Even if the temperature is relatively lower (40 °C~ 60 °C), low-heat burns may happen after longtime contact with skin (in spite of no obvious hot or painful feeling). ● Do not damage the Knee Warm (heater) section. <ul style="list-style-type: none"> • Do not insert pins or needles into the product. • Do not cut the product with a cutter. If the internal heater is damaged, fires or electric shocks may happen.
 Wet-hand operation forbidden	<ul style="list-style-type: none"> ● Do not insert or pull out the power plug with wet hands. Otherwise electric shocks may happen.
 Disassembly forbidden	<ul style="list-style-type: none"> ● Do not refit, disassemble or repair the product without permission. Otherwise fires, abnormal movements or personal injuries may happen.

Caution

 Must be followed	<ul style="list-style-type: none"> ● The following persons (even if they are physically healthy at present) should consult a physician before using the product. <ol style="list-style-type: none"> (1) Persons with muscular atrophy due to aging or thin persons; (2) Persons feeling lumbago because of bone or viscus problems; (3) Persons tending to suffer sprains or bruising; (4) Persons with carsickness or seasickness or strong response when taking other transport means; (5) Persons who once received a heart operation or another visceral operation; Otherwise health may get worse.
	<ul style="list-style-type: none"> ● Before sitting on the product, make sure there is no foreign matter between any two parts of it. (Make sure there is no foreign matter on the back cover, the backrest, the seat surface, the Lower Leg/Foot massage section or inside surface of the back cushion.) Otherwise accidents, injuries, or product faults caused by clamping of hands, feet, or other articles by the product may happen.
	<ul style="list-style-type: none"> ● Do not use the product when wearing any hard decorative article on head (such as hair pin). ● If there is any hard article (such as mobile phone or key) in a pocket of the trousers, take it out before massage. ● Before hand or arm massage, remove watch, nail wrap, ring, etc. Otherwise injuries may happen.
	<ul style="list-style-type: none"> ● Before sitting on the seat, make sure the massage wheels are in the retracting positions. ● If you want to leave the seat during the massage, stop the product first. Otherwise accidents or injuries may happen.
	<ul style="list-style-type: none"> ● When pulling out the power plug, do not pull the power line but hold the power plug. Otherwise an electric shock or a short circuit fault may happen.
	<ul style="list-style-type: none"> ● Before moving the product, make the Lower Leg/Foot massage section back to the original position by adjusting its angle. Otherwise injuries may happen.
	<ul style="list-style-type: none"> ● When moving the product by pulleys, put articles such as mats on the floor. Otherwise marks may be left on the floor.
	<ul style="list-style-type: none"> ● Keep children from the retaining screws on the remote controller holder. Otherwise children may cause accidents or suffer injuries by eating it or playing with it.
	<ul style="list-style-type: none"> ● Before moving the product by pulleys, remove the obstructions close to it. Lift the seat surface of the Lower Leg/Foot massage section to a position a little lower than the waist and move the product slowly. Otherwise accidents or injuries may happen because of turnover of the product.
	<ul style="list-style-type: none"> ● In use, place the product horizontally. Otherwise accidents due to turnover of the product may happen.
	<ul style="list-style-type: none"> ● If any symptom such as skin inflammation, itching or swelling in use, stop the product immediately and consult a physician. Otherwise accidents or physical discomfort may happen.
 Forbidden	<ul style="list-style-type: none"> ● Do not use the product and other devices at the same time. Otherwise accidents or physical discomfort may happen.
	<ul style="list-style-type: none"> ● Keep head, abdomen or skin from the massage wheels and do not put hands or feet between the massage wheels. ● Do not put the knees between the Lower Leg/Foot massage section. ● Do not fall asleep while using the product. Do not use the product after drinking. ● If air in the filling the air bag on the seat is not completely discharged, do not stand or jump on the seat or put things on it. Otherwise accidents or injuries may happen.

Caution

 Forbidden	<ul style="list-style-type: none"> ● Do not put hands or feet between the product and the Lower Leg/Foot massage section. ● Do not put hands, arms, or head into the seam of the Lower Leg/Foot massage section (footrest). For safety, admit the Lower Leg/Foot massage section after massage. ● Do not put hands, feet or head between the backrest and the back cover. ● Do not put pets on the product (such as its back cover, backrest and armrest). ● Do not pull out the power plug or turn OFF the power switch suddenly during massage. Otherwise injuries may happen.
	<ul style="list-style-type: none"> ● Do not stand or sit on the back cover. Otherwise personal injuries due to the product toppling may occur.
	<ul style="list-style-type: none"> ● Do not stand or sit on the armrests. Otherwise personal injuries may happen.
	<ul style="list-style-type: none"> ● Do not stand or sit on the Lower Leg/Foot massage section or the footrest. Otherwise accidents or injuries due to rotation of front of the footrest or turnover of the product may happen. If bottom of the Lower Leg/Foot massage section runs into the floor, the floor may be damaged.
	<ul style="list-style-type: none"> ● Do not drag or push the product after it is installed. Otherwise the floor may be damaged.
	<ul style="list-style-type: none"> ● Do not move the product while there is a person on it. Otherwise, accidents, or injuries may happen due to a toppling of the product.
	<ul style="list-style-type: none"> ● Do not use the product on heating devices such as electric blankets. Otherwise fires may happen.
	<ul style="list-style-type: none"> ● Do not put the remote controller on the product. Otherwise the product may be damaged.
 Wet-hand contact forbidden	<ul style="list-style-type: none"> ● Do not use the product in a bathroom or another wet place. Otherwise electric shocks or product faults may happen.
 Product wetting forbidden	<ul style="list-style-type: none"> ● Do not sprinkle substances such as water on the product or its remote controller. Otherwise electric shocks, short circuit, or product faults may happen.
 Pull out the power plug	<ul style="list-style-type: none"> ● Before cleaning or maintaining the product, pull out the power plug first. Otherwise electric shocks or injuries may happen. ● In the case of a power failure, pull out the power plug at once. Otherwise accidents or injuries may happen when power is restored. ● When the product is not used, pull out the power plug. Otherwise electric leakage fires may happen because of insulation aging caused by dust and moisture.


Grounding instructions

- The product must be grounded to reduce the electric shock hazard because of functional faults of the product.
- The product has a power line with a grounding conductor and a grounding plug. The grounding plug must be inserted into an appropriate socket that has been correctly installed and grounded in full compliance with the local code and decree.

Caution

- If the grounding conductor is not correctly connected, electric shocks may happen. If you are not sure about correctness of the grounding, have it inspected by a professional electrician. Even if the grounding plug provided with the product does not match with the socket you have, do not refit it by yourself but ask a professional electrician to install an appropriate socket.
- The product has a grounding plug. Make sure the product is connected with a socket matching with shape of the grounding plug.
- Do not connect the product to a multi-plug.
- If the power plug is damage, it must be replaced by a special plug available from OGAWA or authorize agents.


Product Parts

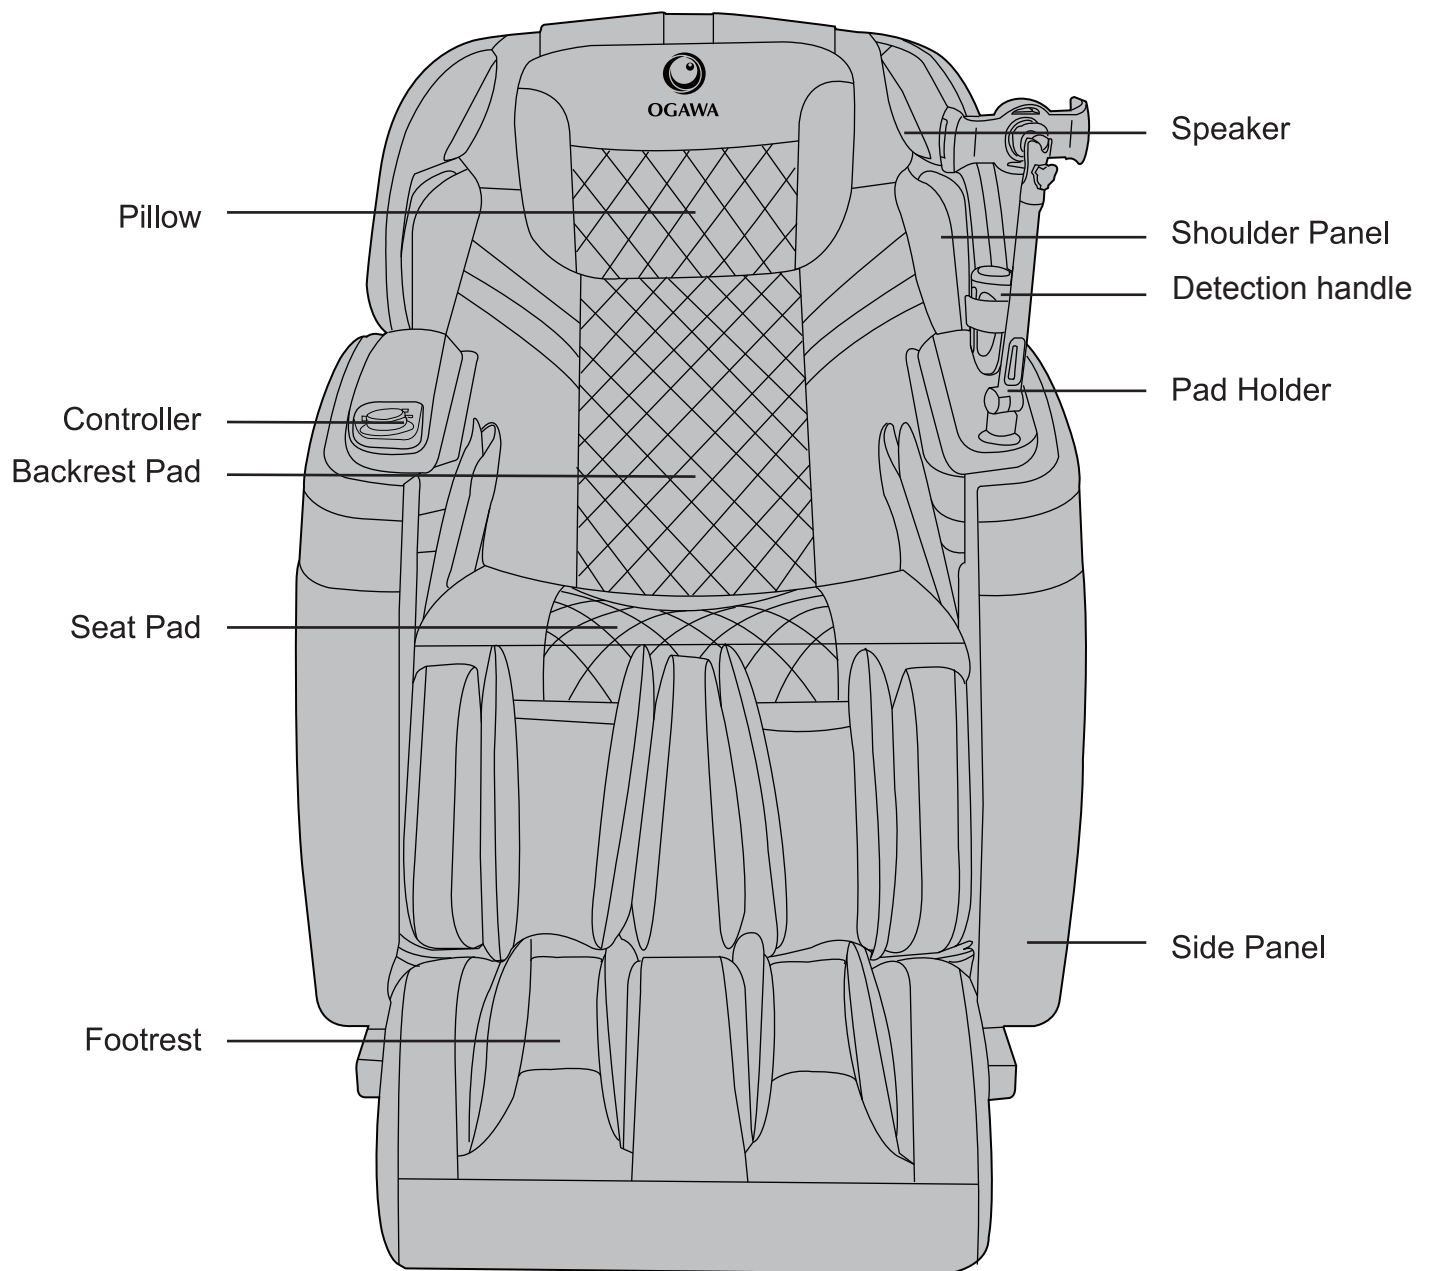

Important - product image or content descriptions may slightly differ due to product quality improvement.

Product Parts


Air Bags Massage Position

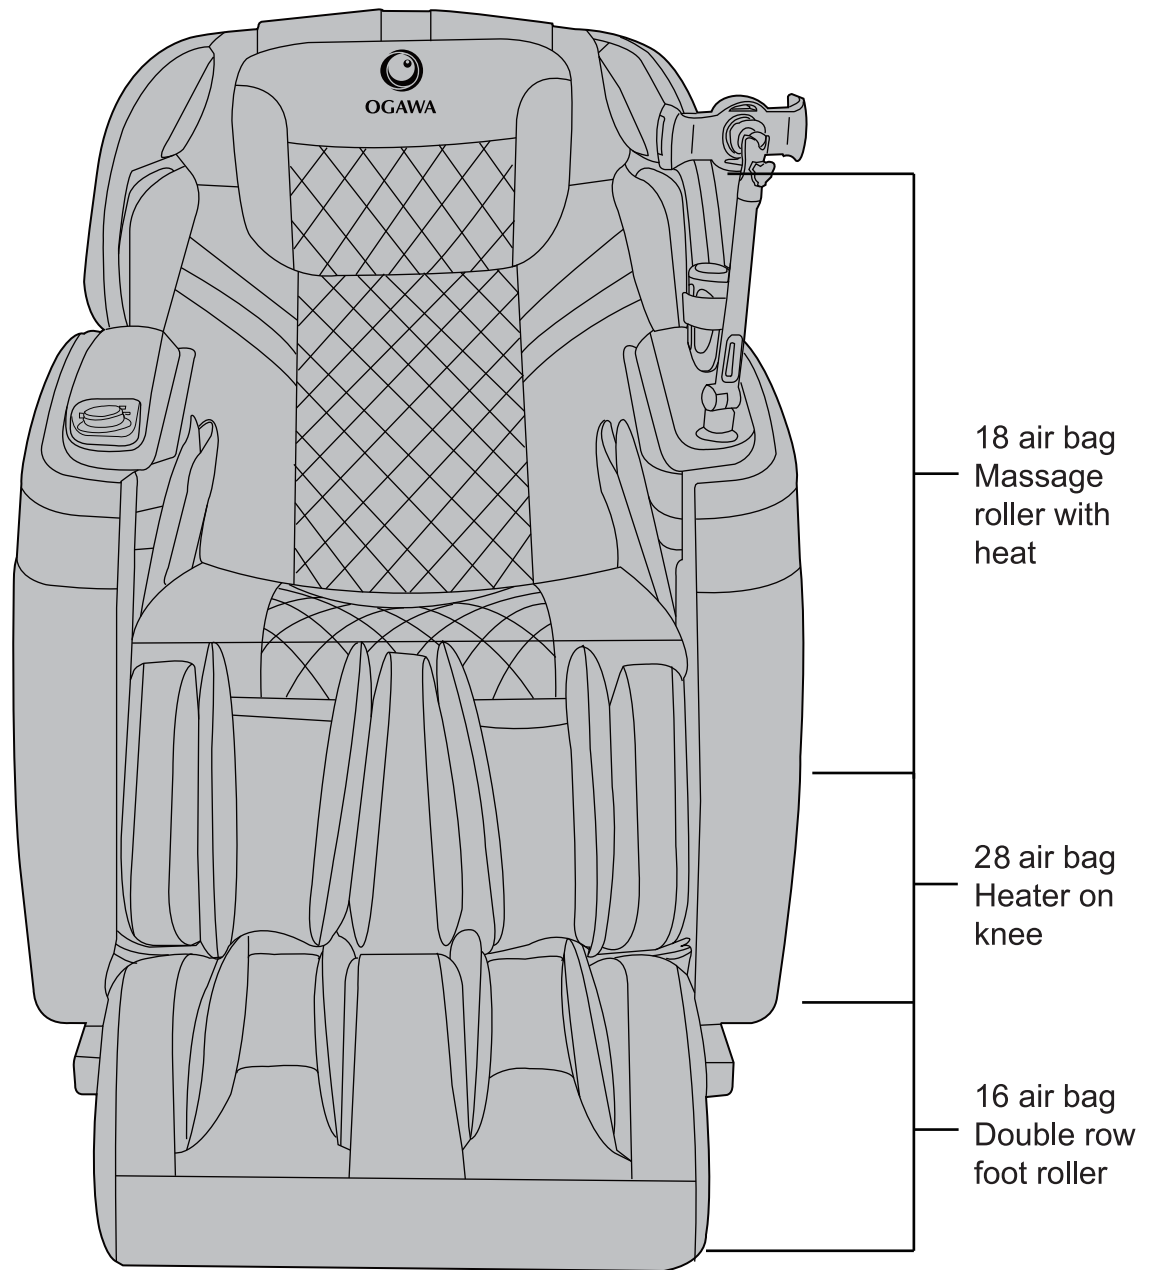

Setup of the massage lounger

1 Before use (installation position)


- Make sure there is enough space for the tilting of the product.

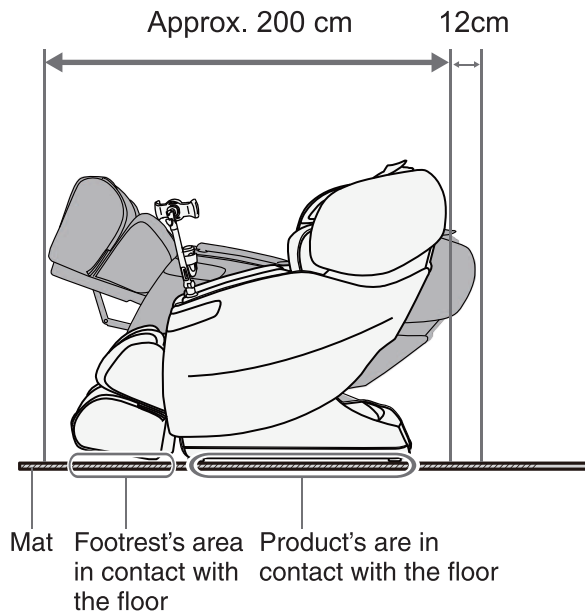

- Do not expose the product to direct sunlight or a high-temperature place (e.g., in front of heating equipment); otherwise its synthetic leather may fade or harden.
- Place a mat below the product to avoid floor damage. The mat should cover the product's area in contact with the floor and the footrest's area in contact with the floor (minimum dimensions: 200cm × 90cm). See the figure.
- Install the product close to a power socket.

2 Chair Moving Instruction

Method one: Hold the two side cover and lift up to moving

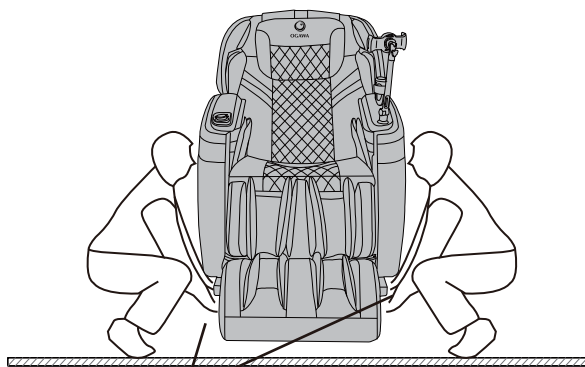

Please lift up the side cover, as the moving process might have scratches on the floor surface.

※**Caution**
Do not put hands at the ridge of channel to avoid the side cover digging out.

- The product is heavy and should be handled carefully by two persons at least to avoid back strain.

Product weight	Approx. 125 kg
----------------	----------------

Put the product on the floor.

- Put down the product slowly and carefully to avoid foot injury.
- Do not release the footrest until the product is placed horizontally. Otherwise the footrest will rebound to its original position.
- It is suggested to pave an article such as a mat on the floor to keep it from damage.

Caution

- | | |
|---|---|
| <ul style="list-style-type: none">● Do not drag or pull the product after it is installed.● When handling the product, do not hold its frame.
Otherwise product faults or personal injuries may happen.● Do not move the product by pulleys directly on a floor.
Otherwise marks may be left on the floor. | <ul style="list-style-type: none">● Do not move the product while there is a person on it.
Otherwise, accidents or injuries may happen due to falling down.● Do not hold the foot massage section when moving the product.
Otherwise injuries may happen due to sliding. |
|---|---|


Method two: Moving by using slip bar underneath

Caution


Moving the massage chair with a slight pull or push as right figure, this way do not fit for the wood floor. Otherwise marks may be left on the floor.

- 1** Press the ON/OFF button to return the back rest and footrest to its original position.
- 2** Slide the power switch to the “O” position and unplug the unit.

Place the detection handle and the power cord on the seat.

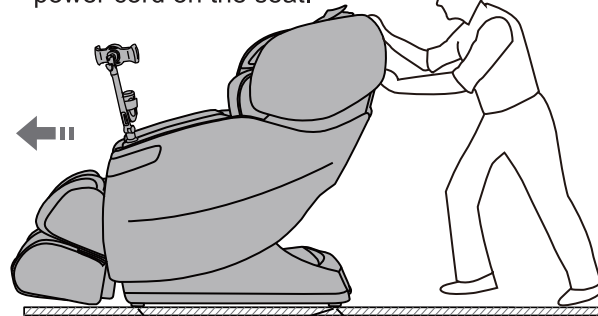

Slip Bar

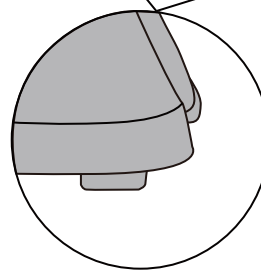

After finishing installation, moving the massage chair around the house with a slight pull or push.


Assembly

(Please refer to the chair installation manual)

Before use


1 Check the space around the product.

Make sure there is no person, pet or other object close to the product.

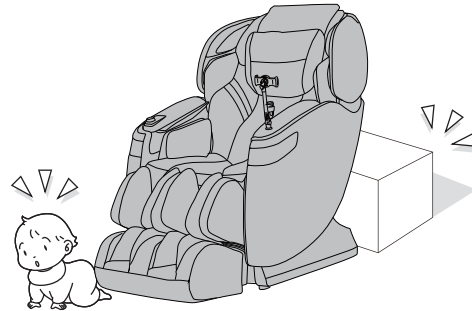

2 Roll up the back cushion and fix it by the zipper.

Roll up the back cushion and fix it on the main body by the zipper.

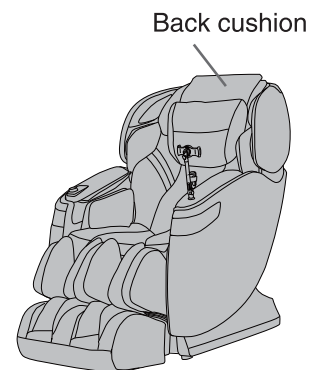


3 Make sure there is no foreign matter in the seams of the product.

When checking the Lower Leg/Foot massage section, press the footrest forward by your hands and make sure there is no foreign matter in the seam.

Caution

- Do not put hands, fingers, feet or head into the seam(s) between the footrest and the seat surface or the armrests.
- Before sitting on the product, make sure there is no foreign matter between any two parts of it.
- Do not put hands, arms or head between the backrest and the back cover.
- Do not put pets on the product (such as its back cover, backrest and armrests).

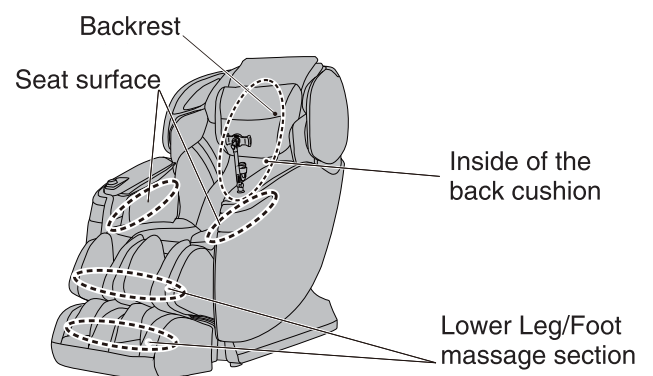

4 Inspect the power line and power plug

Warning


- **Remove such dirt as dust on the power plug at regular intervals.**

Otherwise fires caused by poor insulation due to factors such as moisture may happen. (Wipe the power plug with dry cloth.)

- **Do not damage the power line or the power plug. Do not damage, machine, forcibly bend, twist or lengthen the power line or the power plug, or place the power line or the power plug close to a heater, or tie or bind any heavy objects on the power line or the power plug.**


A damaged power line or power plug may result in electric shocks, short circuits, or fires.

Please consult the shop you bought the product or an authorized service center about maintenance method of the power line or the power plug.

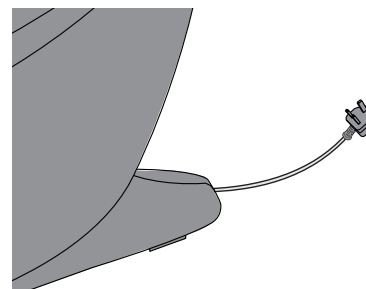

Do not be entangled by the power line.


Push the interface into the power input jack till the end.

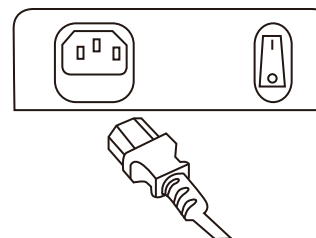

5 Power on the product

- 1 **Insert the power plug into the power socket.**

- 2 **Pull the power switch to the “I” position.**

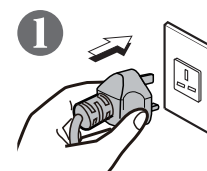

Warning

- **Insert the power plug into the power socket till the end.**

Otherwise electric shocks or fires because of overheat may happen.


- **Abide by the regulations on use of the socket and the wiring devices strictly.**

- **Use a 220-240V~,50/60Hz power supply. (Do not use the product in a foreign country or connect it with a transformer without permission.)**

Otherwise electric shocks, product faults or fires because of overeat may happen.


- **Do not insert or pull out the power plug with wet hands.**

Otherwise an electric shock may happen.

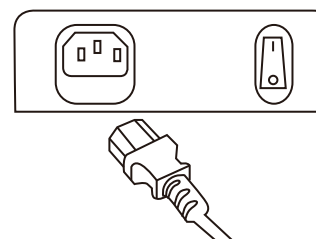

Before use (Continued)


6 Make sure the massage wheels are retracted

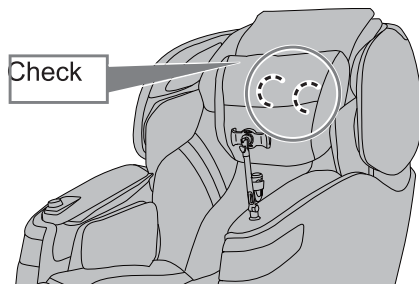

If they are not,

press ON return them to the retracting position.

7 Make sure the fabric is not damaged nor cracked

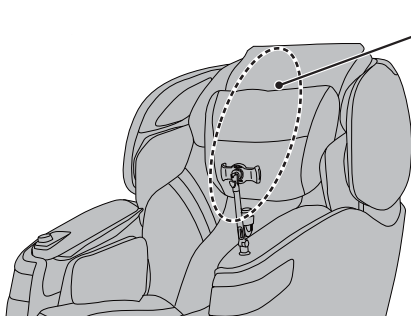

Inspected area:
The fabric of traveling sections of the massage wheels on the backrest


Warning

- Before use, raise the back cushion and check whether fabrics of the area pointed out in the figure are damaged.
(Even if the fabric is slightly damaged, stop the product immediately, pull out the power plug and send the product to repair.)
If the product is used when there is fabric damage, you may get injured or get an electric shock.

8 Adjust the lounger as needed

Adjustment of holder


Left-right adjustment.

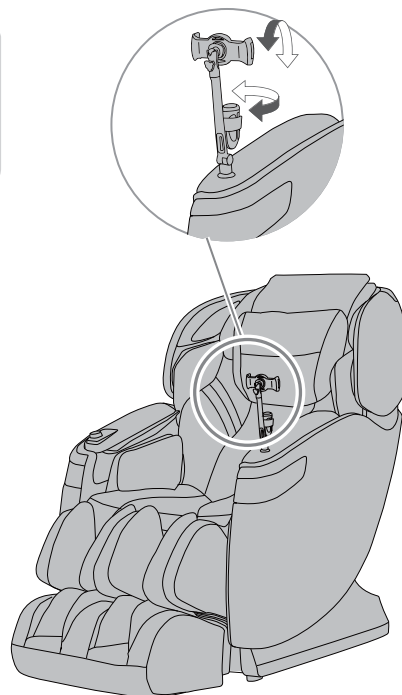

9 Adjust length of the foot massage section as needed

For a tall man


Auto adjust length of the foot massage section to prevent knees from hanging.

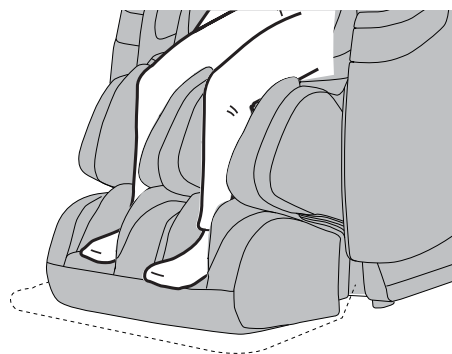

Step the sensor under heel when auto adjust reach comfortable length to stop the adjustment.

Short Cut Button Operation


Short cut button on RH side panel, the function available as below :

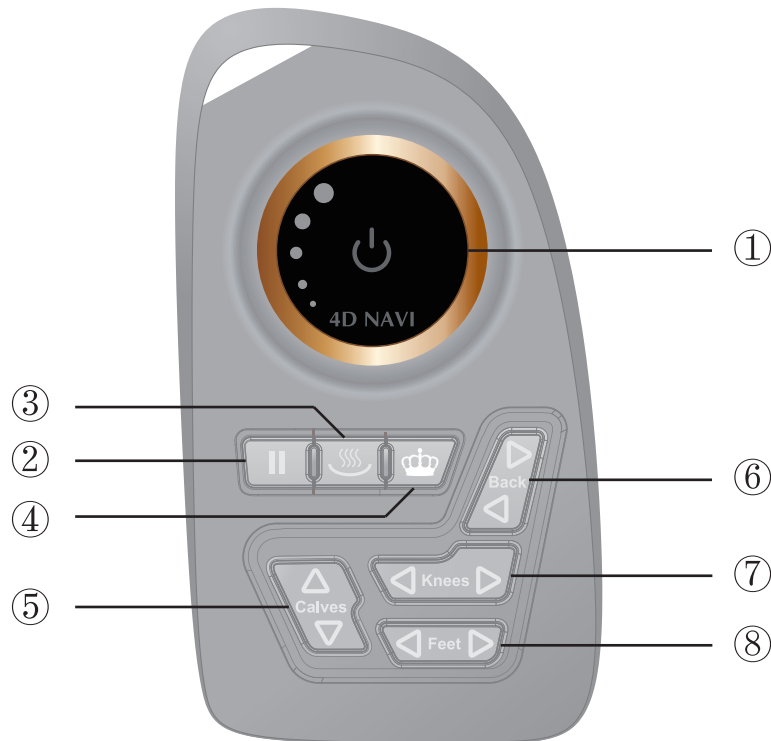

1. [Power] button, [4D] Controller:
Long press 1 second to activate the massage chair, Long press 1 second again to stop the massage chair function.
4D Strength, turn clockwise to increase the 4D strength, counter clockwise to reduce.
2. [Pause] button : Press the button, all the massage function will temporary stop, press again to resume the massage program.
3. [Warm]: Press the button, heating will be activate, press again to close it.
4. [Master's Choice] : The short cut button for Master's Choice massage program.
5. [Footrest Incline/Recline]: Press upward arrow, footrest Incline, press downward arrow, footrest recline.
6. [Backrest Incline/Recline] : Press upper arrow, backrest incline, press lower arrow, backrest recline.
7. [Upper Footrest Extend/Retract]: Press left arrow, footrest extend, press right arrow, footrest retract.
8. [Lower Footrest Extend/ Retract]: Press left arrow, footrest extend, press right arrow, footrest retract.

Intelligent massage quick start button

When the massage chair is turned on, press the quick start button of the detection handle to initiate the massage evaluation, and the massage evaluation will automatically push the exclusive custom procedure 15 seconds after the massage evaluation is completed.

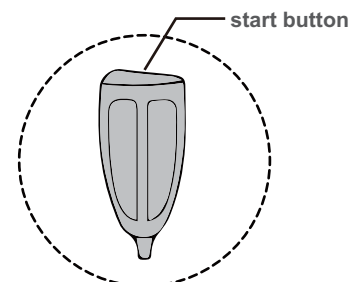


APP download

1. You can use iPad&Iphone in the App Store,Android phones in the google paly ,and use keyword search to download apps.
keywords: OGAWA Wellness、奧佳華健康管家、奧佳华健康管家


2.Or scan the QR code on the right and download the application directly into app store.Hardware and software configuration requirements for installation .

Hardware:iPad mini2 and above,Iphone,Android phones
IOS system requirements: IOS 10.0 and above
Android system requirements: Android 4.3 and above




Use APP for the first time

1. Enter the APP, to select the region and enter the login registration screen.
2. If you already have an account, you can log in and use APP directly (figure 1).

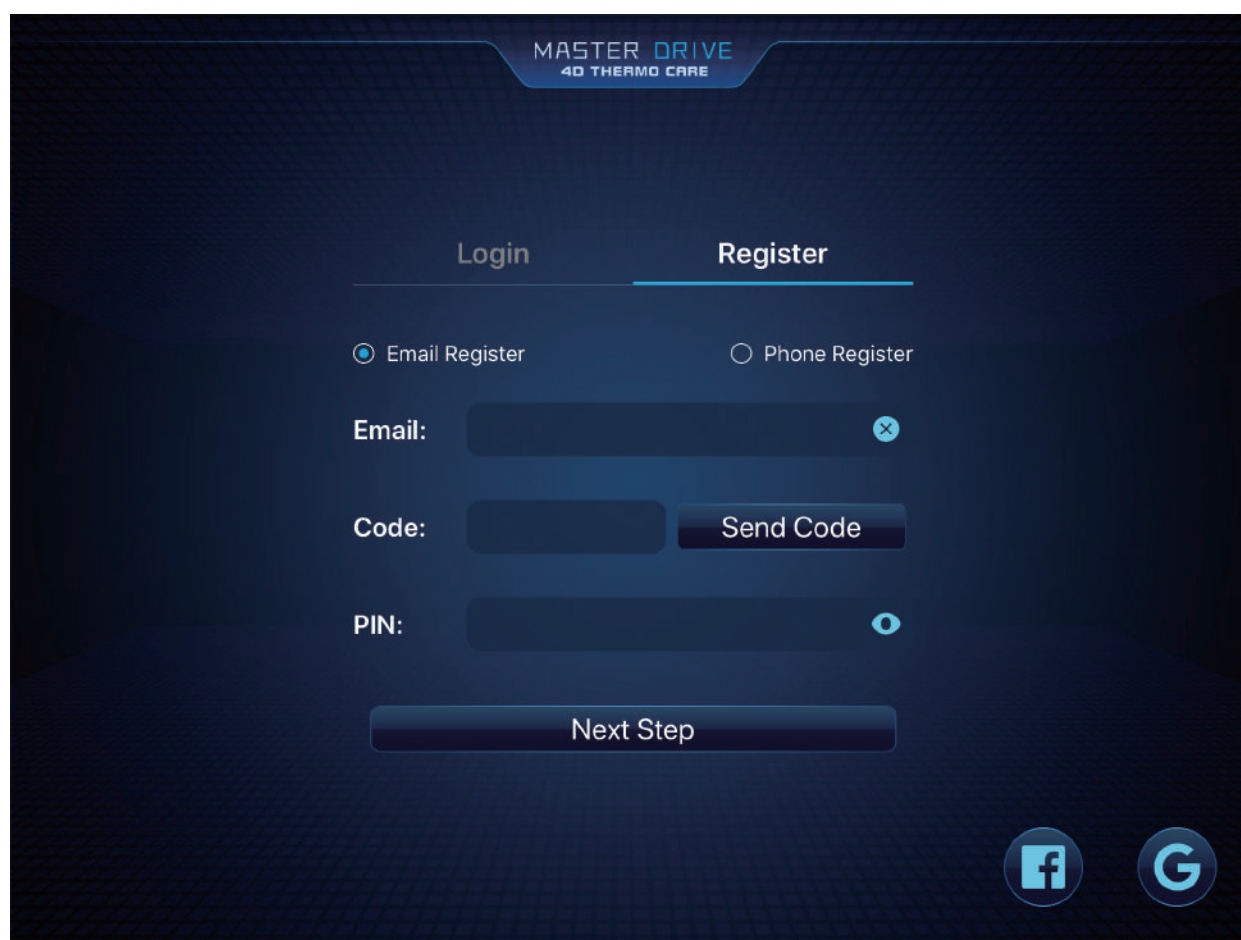

(figure 1)

3. To use APP, you must first register an account number, which can be registered by mobile phone number or email address. (figure 2)
4. If you already have an account and have bound face information, you can log in directly using face.
5. You can log in to APP, using the accounts of Google and Facebook and provide access to APP after binding your mobile phone number or email address.

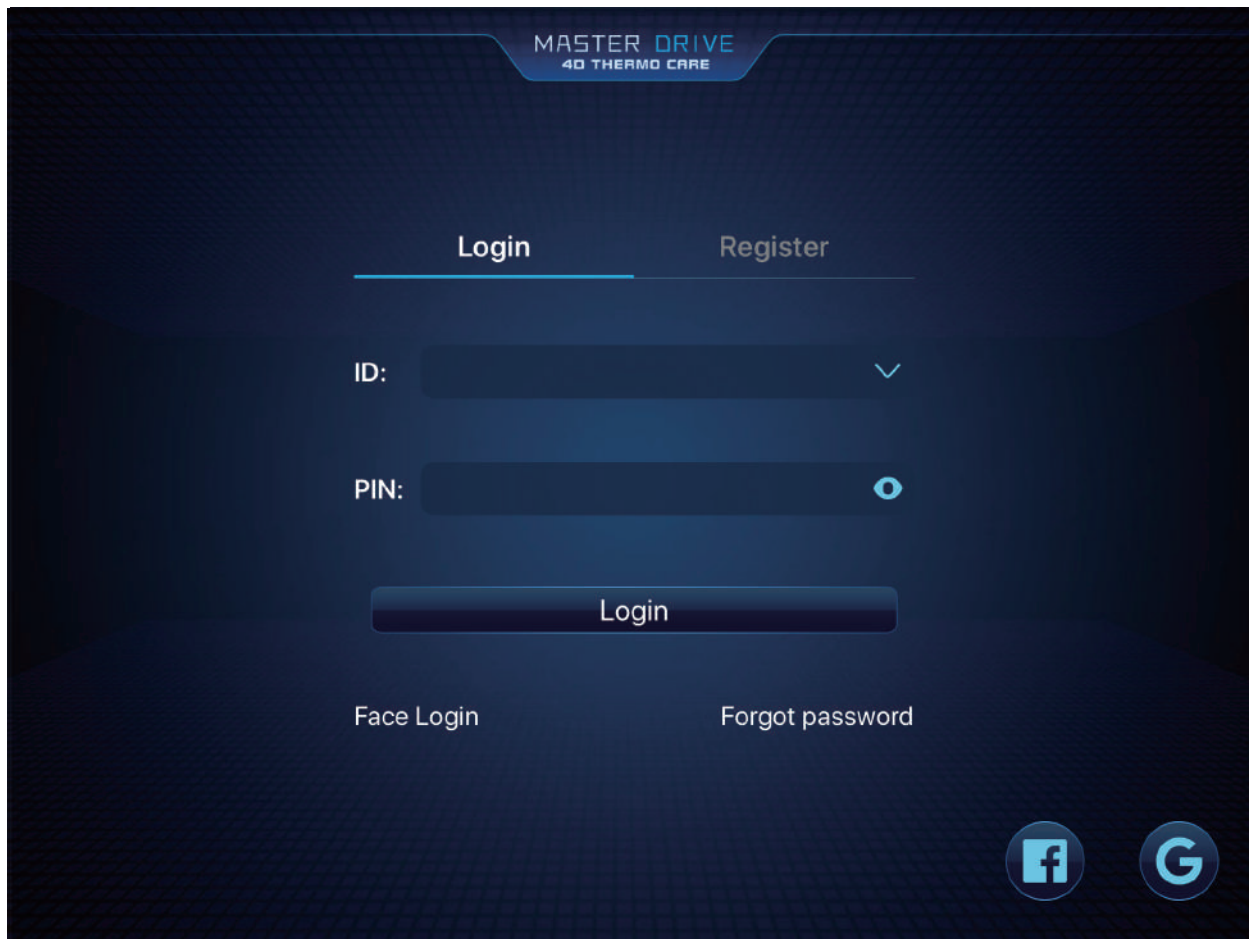

(figure 2)

Bind a device for the first time


1. After entering the home page, APP first determines whether the current account is bound to the device.
2. If you have not bound the massage chair, you need to enter the device management page, scan the exclusive QR code to identify the massage chair information, and bind it (figure 3).




(figure 3)



Warm reminder: Please tear the QR code sticker and stick on ipad holder. To ensure that subsequent QR codes are not easily lost.

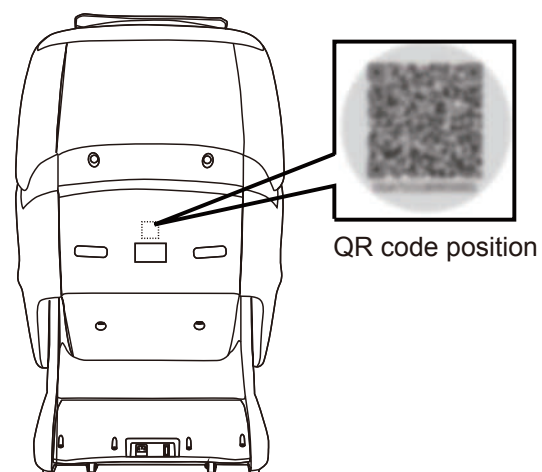

3. If the current account has been bound to the massage chair, you can directly select the massage chair in the device management page to make a Bluetooth connection (figure 4).

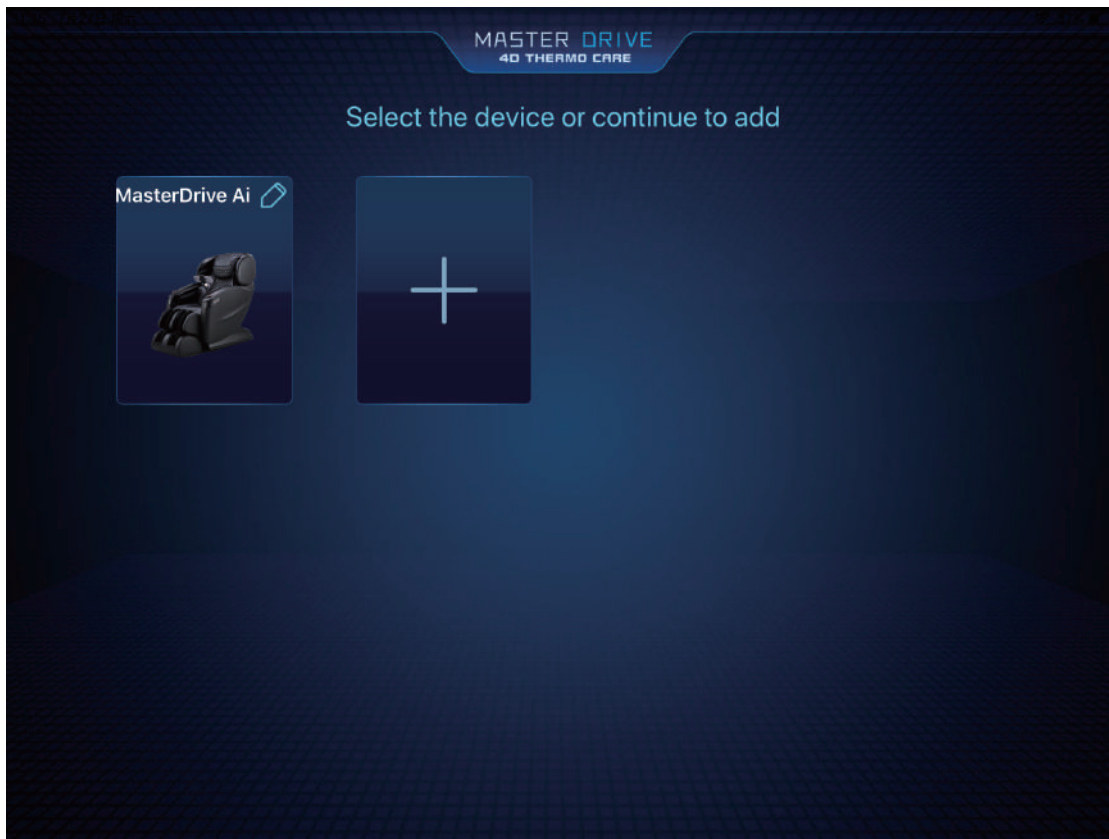

(figure 4)

4. If the WIFI in the APP is not distributed, you need to connect to the network through the WIFI icon on the home page (figure 5)

Note: The WIFI distribution network in APP only supports 2.4G WIFI, and does not support 5G WIFI



(figure 5)


Voice control command

This product built-in voice control system, in the standby state, can use the voice wake-up word "Hey OGAWA", massage chair control and adjustment.

* For more information on the use of voice control, see the list of voice control instruction sets.

! NOTE


- Please just sit down and use voice control again.
- When using a voice control chair, make sure there are no people, pets, or other objects around the machine.

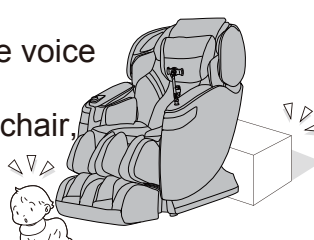

Massage evaluation

- You can quickly start the massage evaluation by detecting the start button on the handle. After 15 seconds of evaluation, the massage chair automatically pushes the exclusive massage procedure.

- You can turn on massage evaluation through "Intelligent Evaluation" under "Intelligent Massage" in the APP main interface. During the evaluation, the APP page displays the detection status and the final evaluation results in real time. 15 seconds after the evaluation is completed, the massage chair automatically pushes the exclusive massage procedure.

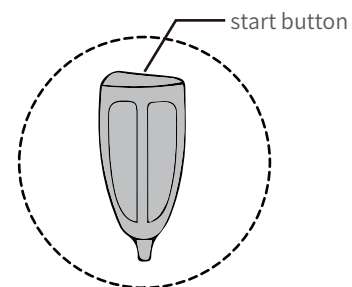

- During the massage evaluation, please sit still and lean back against the massage chair to keep quiet. The palm of the left hand is close to the electrode piece, and the belly of the index finger is gently placed on the side test point of the test handle to ensure that the test point is completely covered and that the hands are placed naturally on both sides.

! NOTE

1) Before massage evaluation, wipe your left hand clean to ensure that the palm and index finger are dry and clean.

2) Before massage evaluation, wipe the test handle clean to ensure that the electrode and side test point lenses are dry and clean.

3) In the process of massage evaluation, do not press the blood oxygen sensor test point on the side of the handle, and ensure that the forefinger abdomen is completely covered with the blood oxygen sensor.


- 4) During the massage evaluation, please keep quiet and do not shake your fingers.
- 5) Do not apply nail polish, antifreeze or manicure on your left finger.
- 6) Do not evaluate massage immediately after exercise.
- 7) The paralysis state after continuous measurement will affect the blood circulation and may affect the detection parameters. Please do not measure it many times for a long time.
- 8) If the finger skin is too thick or pigmented, the detection parameters may not be accurate.
- 9) Long-term exposure to low temperature environment, cold fingertip skin and poor peripheral circulation can lead to insufficient pulse signal, unable to measure or inaccurate measurement results.

For more information on how to use APP, see the "APP usage Guide" in the "user Center" help bar in the APP interface.


The password for bluetooth connection is "9999".

After massage

- 1** Put the detection handle back on the holder.

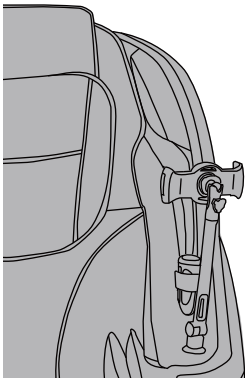

- 2** Make the foot massage section slide back to its original position.

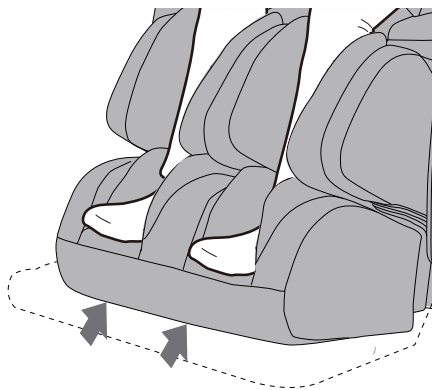

- 3** Move the feet from the Lower/Foot massage section.

For safety, the footrest must be retracted after use.


Retracting method of the Lower Leg/Foot massage section

- Make sure there are no articles in the retracting position.




Warning


- Keep children from using the product, playing on its main body, or climbing onto its Lower Leg/Foot massage section, seat surface, backrest or armrests; otherwise accidents or injuries may happen.

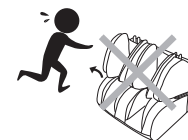

4 Power off the product.

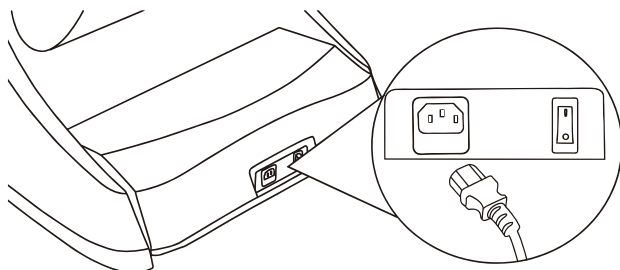

- ① Turn off the power switch.
- ② Pull out the power plug.

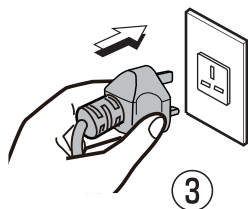

Warning

- After use each time, pull the power switch to the **O** position and pull out the power plug; otherwise accidents and injuries by playing with them by children may happen.

Timer function

Massage will end automatically when time is up.

- The Lower Leg/Foot massage section will descend automatically.
- The massage wheels will move to the retracting positions.
- The backrest will not raise automatically.

To stop the massage in halfway

Press 

- The Lower Leg/Foot massage section will descend automatically and the massage wheels will back to the retracting positions.
- After the massage wheels are retracted, the backrest will raise.

If abnormal feeling

Press 


- All the movements will stop immediately.
- Step down the product carefully to avoid turnover of the product.

Cleaning and maintenance

Cleaning of the synthetic leather

Wipe the synthetic leather with a soft dry cloth.

- **Do not clean the product with chemicals such as thinners, gasoline and alcohol.**
- **When using a leather maintenance product (cleaning cloth) sold on the market, follow its directions for use.**
- **If the synthetic leather is very dirty, wipe it with the method below.**
 - ① Put a piece of soft cloth into water or 3% to 5% neutral detergent contained hot water and wring it out.
 - ② Wipe surface of the synthetic leather with the soft cloth.
 - ③ Wipe the detergent with a piece of cloth once soaked in clean water and wrung out.
 - ④ Wipe with a piece of wrung soft cloth.
 - ⑤ Have the synthetic leather take natural air drying.
- **If it is difficult to remove the stains on the synthetic leather, soak a piece of melamine foam bought from the market into a neutral detergent and use it wipe the product.**
- **Do not dry the surface by a hair drier.**
- **Surface of the synthetic leather may be dyed by fabric colors; therefore, be careful when wiping the product with denim or colored cloth.**
- **Keep these positions from long-time contact with plastics to avoid fading.**
- **Synthetic leather may discolor, so the position in contact with the hair dye used should be covered by a towel.**

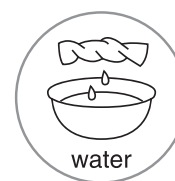

Cleaning of the plastic parts



1 Put a piece of soft cloth into water or neutral detergent contained hot water, wring it out and wipe the plastic parts.

- **Do not clean the product with chemicals such as thinners, gasoline and alcohol.**

2 Wipe with a piece of cloth once soaked in clean water and wrung out.

- **Wring the cloth out before using it to wipe the remote controller.**

3 Have the plastic parts take natural air drying.

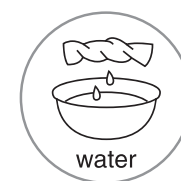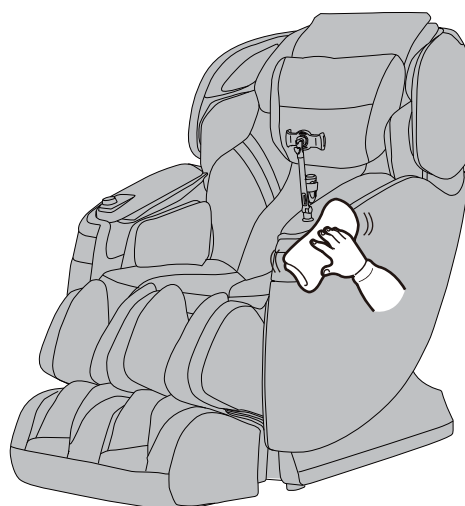

Questions and answers (Q&A)

Q Can persons paying frequent visits to hospitals because of diseases use the product?

A These persons should consult physicians before using the product. Massage is the so-called “touch-pressure stimulation”: Muscles are compressed to relieve their tension and promote hemokinesis. Some diseases may get worsened because of massage. Thus, consult the attending doctors before using the product.

Q How about the body height requirement for use of the product?

A The body height requirement differs with the specific body type. See the rough reference below when using the product. If a person shorter than 145 centimeters or taller than 185 centimeters uses the upper body massage function and the Lower Leg/Foot massage function of the product at the same time, it will be possible that his soles will have poor contact with the foot massage section or that his knees will need to be bent.

For a taller person with knee bending when using the product:

Select method **A** or **B** below:

- A** Tilt the backrest and lower the Lower Leg/Foot massage section; or
- B** Massage the upper body only with the help of the footrest.
(Massage the feet and the upper body separately.)

For a short person difficult to touch the foot massage section:

Select method **A** or **B** below:


- A** Raise the backrest and lift the Lower Leg/Foot massage section.
- B** Massage the upper body only with the help of the footrest.
(Massage the feet and the upper body separately.)

Q Are there any things needing special attention during moving?

A Pay attention to the following things during moving.

For convenience during moving, tilt backrest of the product till the lowest position.

During handling, do not sit on the product.

- ① Press ON button power on the product.
- ② Press  to make the backrest completely tilt.


Press the button until backrest and footrest stop



- ③ Turn off the power switch and pull out the power plug.
- If the original packing box is unavailable, make sure the power line is not wound on the product, wind it and place it on the seat surface. When handling the product, keep the power line from falling off and rubbing with ground.
- If the original packing box is unavailable, properly keep other packing auxiliary materials and wrap the product with them to avoid scratch and vibration during handling.

Q Where is serial number of the product?

A It is on back of the main body.

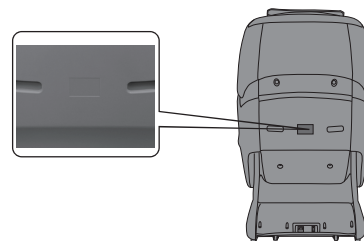

Q What should I do if I do not feel warm in the knee?

A [Knee Warm] Only fabrics in the tiptoe positions are warm. Make the tiptoes in close contact with the warm transfer part. When the knee massage section is being raised, the warm transfer part is in close contact with the knee make you feel warm. You may cover your knees with a blanket to get warmer.

Q I care about the sounds the product makes when being used.

A It is caused by the core structure.

Q Does it matter if the massage wheels have different massage intensities?

A This phenomenon possibly exists during massage because of the core structure. To simulate the most natural massage effect, the product is designed with a core structure allowing alternate back massage by a left massage wheel and a right massage wheel. During massage, the massage wheels possibly have slightly different positions on the back. That's why you have that feeling. It is not a fault.

Q The acupressure force is too large.

A Set the air bag intensity to be “1” through the Air Bag button. You can also lower the Lower Leg/Foot massage section to reduce the acupressure force on the feet.

Q How about monthly power consumption of the product?

A Supposing you massage for 30 minutes in two times (15 minutes for each time) on each day, about 3 kilowatt-hours will be consumed each month.

Troubleshooting

After a fault happens, inspect and try the corresponding method below.

If the fault still exists after that, contact the shop from which you bought the product.

Fault	Cause and elimination method
<p>The massage wheels stop during use (The product beeps and all icons and buttons on the remote controller flicker and then go out.)</p>	<p><u>For safety, the massage wheels will possibly stop upon a too large external force during use.</u> If all marks and buttons on the remote controller begin to flicker, it suggests an extreme abnormality. In this case, turn off the power switch and turn it on about 10 seconds later. If the massage wheels stop again, adjust your sitting posture and do not lean on the backrest completely. (Users, particularly those heavier than 100 kilograms, should follow relevant precautions.)</p>
<p>The product cannot tilt, or the footrest cannot be raised or lowered (The product beeps, the running light on the remote controller goes out and the product stops)</p>	<p><u>For safety, the product will stop upon an obstruction or a too large force.</u> If all contents and buttons are flickering and the backrest or the footrest has stopped, turn off the power supply and turn it on about 10 seconds later and then operate the product.</p>
<p>The massage wheels cannot reach the shoulders or the neck</p>	<p>If the head is not in contact with the headrest, or the back is not in contact with the backrest, the shoulder position in body type detection will possibly be lower than the actual position. Sit in the deepest position of the product, lean your head on the headrest and operate from the beginning again.</p>
<p>The left and right massage wheels have different heights (intensities)</p>	<p>It is not a fault but a normal phenomenon because the product is provided with a massage core allowing alternate beats of the massage wheels.</p>
<p>The product cannot run at all.</p> <ul style="list-style-type: none"> ● Upper body (the neck to the waist) massage ● Lower leg/foot massage 	<ul style="list-style-type: none"> ● The power line is disconnected. ● The power switch is not turned on. ● No program is selected after ON button on the remote controller is pressed.
<p>Neither the massage wheels nor the knee massage section provides a warm feeling</p>	<ul style="list-style-type: none"> ● The Back and knee heating button is set to be OFF. ● [Knee Warm] Only fabrics in the tiptoe positions are warm. The warm feeling depends on factors such as body type, massage method, clothes and room temperature. When the knee massage section is being raised, the warm transfer part is in close contact with the knee make you feel warm. You may cover your knees with a blanket to get warmer.
<p>The product cannot cool down even if the Dual-temperature function is disabled</p>	<ul style="list-style-type: none"> ● Due to the heater structure, the product will still feel warm shortly after heating because of the residual heat. ● If a single part is continually massaged even after the heating function is disabled, you will feel increasingly warmer.
<p>The heater does not heat even if the Back and knee heating is enabled function</p>	<ul style="list-style-type: none"> ● If neither upper body massage nor knee massage is enabled, the heating function will not work separately.
<p>The product is damaged</p>	
<p>The power line or the power plug has abnormal heating</p>	<p>To avoid accidents, contact an authorized service center.</p>

Common problems and troubleshooting methods in Massage Evaluationt

Common problem	Possible cause	Solution
The detection results change greatly in a short time.	1. The test handle is not held correctly	1. Please follow the check handle operation instructions to hold the handle correctly
	2. Detect that the finger or body is in a state of wobble	2. Do not shake your fingers or body
Unable to obtain pulse rate and blood oxygen measurement results	1. The index finger is not placed correctly	1. Please follow the check handle instructions to place the index finger correctly
	2. The strength of fingers is too strong in the process of detection.	2. Please gently cover the belly of the index finger over the test point, do not press the finger hard
	3. Apply nail polish, antifreeze or manicure	3. Please remove or remove nail polish and antifreeze during inspection

If above solution are not applicable, kindly refer to “Product Warranty Card” and contact OGAWA service Center.

Troubleshooting (Continued)


The sounds and feelings you care about in use of the product

You will hear or have the following sounds or feelings when using the product. It is not abnormal phenomena but results of the product structure.

- Sound when the stretching massages are retracted
- Sound and feeling when the massage wheels rub patterns on the fabric
- Sound of movements such as kneading and beat
- Friction sound of the running massage wheels
- Sound of up-down movement
- Sound of the conveyor belt
- Motor sound
- Sound of the squeezing massage wheels when they begin to stretch
- Sound when a person is sitting on the seat
- Friction sound between the armrests and the back cushion when the backrest is tilting
- Friction sound between the massage wheels and the fabric
- Sound of the inflator pump during Air Bag massage
- Sound of air exhaust during Air Bag massage
- Running sound of the solenoid valve at bottom of the product during Air Bag massage.
- Swing of the footrest
- Sound when the shoulders are stretched or moved
- Running sound of the air bags
- Sliding sound of the foot massage section
- Friction sound between the back cushion and the back cover leather when the backrest is tilting

If the sound is loud, it is also possible that the product has failed.

- In this case, have the product inspected and repaired by an authorized service center.

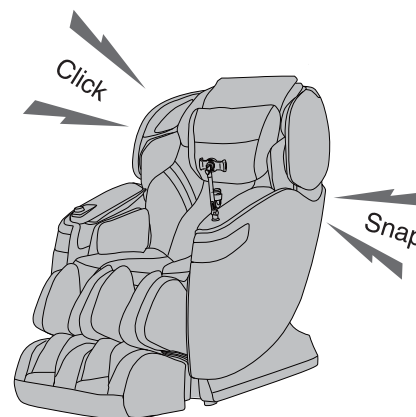

Warning

- **Do not refit, disassemble or repair the product without permission.** Otherwise fires, abnormal movements or personal injuries may happen.

Warning

- **In the case of any abnormality or fault, stop the product immediately and pull out the power plug to avoid fuming, fires and electric shocks.**
 - < Abnormality and fault examples >
 - The product fails to work after the power switch is turned to the ON position;
 - After the power line is moved, the product is discontinuously powered on;
 - In use, the product gives off a burning smell or an abnormal sound;
 - The product is deformed or abnormally heating
 - In any of these abnormalities and faults, have the product inspected and repaired by an authorized service center immediately.

Specifications

Power supply		AC 220-240V~, 50-60Hz	
Power consumption		200W (Approx. 0.3W when the remote controller is OFF)	
Upper body massage	Range of massage (up-down direction)	Approx. 1.35 m	
	Range of massage (left-right direction)	Massage wheel spacing (including massage wheel width) during use of the product Massage wheel spacing (including massage wheel width) during rolling on the back and up-down moving: Approx. 4.5cm~16.6cm	
	Range of massage (front-back direction)	Quantity of protruding massage wheels (adjustable intensity): Approx. 10cm	
	Massage speed	Kneading: Approx. 7 times/min. ~ approx. 30 times/min. Beat: Approx. 300 times/min. ~ approx. 520 times/min. (single side) Moving speed: Approx. 1.3 cm/s ~ approx. 4.2 cm/s	
Angle of inclination		Backrest: Approx. 128° ~ 154° Footrest: Approx. 4° ~ 86°	
Automatic power-off		Approx. 15 minutes (automatic power-off)	
Dimensions	When it is not tilting: (L × W × H)	Approx. 158cm X 84cm X 121cm	
	When it is tilting: (L × W × H)	Approx. 196cmx84cmx105cm	
Weight		Approx. 125kg	
Dimensions of packing box (L × W × H)		3 Carton boxes package Approx. : Searest: 146x77x103cm Side cover: 127x37x66cm Footrest: 57x49x60cm	2 Carton boxes package Approx. : Seatrest: 158x85x100cm Footrest: 57x49x60cm
Weight (including the packing box)		3 Carton boxes package Approx:146kg	2 Carton boxes package Approx:144kg
Maximum body weight of user		Approx.:120kg	

For a user heavier than 100 kilograms, the product may have bigger noise and its fabric housing may be worn quicker.

Contact Us



MALAYSIA
Healthy World Lifestyle Sdn Bhd
No. 22 Jalan Anggerik Mokara 31/47
Kota Kemuning, 40460 Shah Alam
Selangor Darul Ehsan, Malaysia
Tel : +603-5121 4286
Fax: +603-5121 4386



HONG KONG, CHINA
OGAWA Health Care International (HK) Ltd
31/F,YHC Tower,1Sheung Yuet Road
Kowloon Bay
Kowloon
Hong Kong
Tel:+852 3465 6262
Fax:+852 2410 0119



SINGAPORE
OGAWA Health-Care Pte Ltd
27 Tampins Industrial Avenue 5,
T5 @ Tampines
Singapore 528623


Tel:+065-6846 8588
Fax:+065-6846 7677



VIETNAM
OGAWA Vietnam Co Ltd
2nd floor,Petroland Tower,
12 Tan Trao,Tan Phu ward
District 7
Ho Chi Minh
Tel:+84 54133 222/54133223
Fax:+84 5416 1736



PHILIPPINES
O-Healthcare Solution Phil. Inc.
2303, 4th Floor, G&A Building,
Chino Roces Avenue Extension,
Makati City, Philippines
Tel : +632 889 0676 / + 632 844 6851
Fax: +632 812 0421

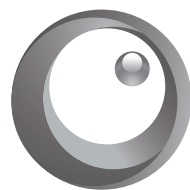

OGAWA

MASTERDRIVE AI 2.0
MORE THAN A.I

User Manual

All information is correct at the time of print

目录

使用前

- 重要的安全事项 SC1
- 接地说明 SC5
- 产品结构 SC6
- 设置按摩椅 SC8
- 组装 SC9
- 使用前 SC10

使用方法

- 快捷操作 SC14
- 操作说明 SC15
- 按摩结束 SC20

维护

- 清洗及保养 SC21



Q&A/重要事项

- Q&A SC22
- 故障检修 SC23
- 规格 SC26
- 联系我们 SC27

重要的安全事项 必须遵守



下文列举的是使用中为防止人身、财产损害而必须严格遵守的安全事项。

■ 所有安全事项将根据因错误使用而导致危害或损害的程度，予以说明。





 警告	可能造成重伤或死亡后果的事项内容。
 注意	可能造成轻伤或财产损害的事项内容。

■ 请注意各安全事项前的符号。（下文为符号范例）

 绝对禁止事项。	 必须执行事项。
--	--

 警告	
 必须遵守	<ul style="list-style-type: none"> ● 正在接受治疗或有以下症状的人，在使用本机前，应咨询医师。 <ul style="list-style-type: none"> <li style="width: 50%;">(1) 佩戴起搏器或其他易受电子干扰的体内植入型电子医疗器械的人 <li style="width: 50%;">(8) 按摩部位受伤的人 <li style="width: 50%;">(2) 恶性肿瘤病人 <li style="width: 50%;">(9) 体温 38℃ 以上(有发热症状)的人 (例：急性炎症症状[如倦怠感、寒颤、血压变动等]强烈时、身体虚弱时) <li style="width: 50%;">(3) 心脏病病人 <li style="width: 50%;">(10) 必须静养或身体显著不适的人 <li style="width: 50%;">(4) 被查证丧失辨别温度能力的人 <li style="width: 50%;">(11) 脊椎异常或脊椎弯曲的人 <li style="width: 50%;">(5) 孕妇或刚完成分娩的人 <li style="width: 50%;">(12) 患有椎间盘突出症的人 <li style="width: 50%;">(6) 因糖尿病等高度末梢循环障碍引起知觉障碍的人 <li style="width: 50%;">(13) 除上述之外，身体感觉特别不适的人 <li style="width: 50%;">(7) 骨质疏松症患者、脊椎骨折病人、患有扭伤或肌肉拉伤等急性疼痛性疾病的人 <p>否则恐发生事故或造成身体不适。</p>
	<ul style="list-style-type: none"> ● 使用中感到身体异常、或使用后觉得没有效果时，请立即停止使用，并咨询医师。 否则恐发生事故或造成身体不适。
	<ul style="list-style-type: none"> ● 按摩中或移动靠背、小腿·脚部按摩部时，请事先确认本机周围（本机后面、下面、前面和侧面）没有人或宠物。 ● 使用前请务必确认靠背和后盖之间无异物或者宠物。 否则恐发生事故或造成身体不适。
	<ul style="list-style-type: none"> ● 在使用本机前，一定要掀开靠垫，以检查靠背覆盖在按摩轮活动范围上的面料是否破损或者其他部位的面料是否破损。 (无论发现多么细小的破损，都请立刻停止使用，拔掉电源插头，并将本机报修。) 在面料破损的情况下使用本机，可能引发受伤或触电的危险。
	<ul style="list-style-type: none"> ● 使用最初，请选择轻度按摩的“清晨唤醒”程序。 ● 每次按摩请控制在 30 分钟内。 ● 请将对身体同一部位的按摩控制在 5 分钟内。 否则可能出现负面效果并造成伤害。
	<ul style="list-style-type: none"> ● 每次使用完毕，应将电源开关滑到“O”（关闭）位置，拔掉电源插头。 否则可能因儿童顽皮引发事故或造成伤害。
	<ul style="list-style-type: none"> ● 请严格遵守插座和配线器具的使用规定。 ● 请使用 220-240V~, 50/60Hz 交流电。 (请勿在国外使用本品，或擅自连接变压器。) 否则可能引发触电、机体故障或因过热导致火灾。
	<ul style="list-style-type: none"> ● 请务必将电源插头插到底，使其确实地插入插座中。 否则可能引发触电或因过热导致火灾。

警告

 必须遵守	<ul style="list-style-type: none"> ● 请定期清理电源插头上的灰尘等脏污。 否则可能因湿气等原因引发绝缘不良，从而导致火灾。 （请用干燥的抹布擦拭电源插头。） ● 发生异常、故障时，立即停止使用，拔掉电源插头。（否则可能冒烟、起火、触电） <异常、故障事例> <ul style="list-style-type: none"> • 接通电源开关后可能不动作 • 移动电源线，有时通电有时不通电 • 运行中发出焦臭味、异常声响 • 按摩椅变形或者异常发热 → 请立即委托授权服务中心检查和修理。
 禁止	<ul style="list-style-type: none"> ● 请勿将靠垫伸入靠背和后盖之间。 否则可能会导致机体故障。 ● 请握住边框进行本机搬运。 否则可能会导致机体故障或人身伤害。 ● 下列人员请勿使用本机。 被医生禁止按摩的人（例：患有血栓症、重度动脉瘤、急性静脉瘤、各种皮肤炎或皮肤感染症〔包括患皮下组织炎症〕的人等） 否则可能会导致病情恶化。 ● 下列人员请勿使用腰部按摩。 <ul style="list-style-type: none"> • 患有急性腰痛、椎间盘突出症、腰椎移位症的人 • 罹患变形性髋关节症等髋关节不适的人 否则可能会导致病情恶化。 ● 在使用中请勿将手、手臂、脚塞入靠背覆盖在按摩轮活动范围上的面料。 ● 儿童禁止使用本机。此外，请勿让儿童在本机上玩耍，或者爬到小腿·脚部按摩部、座面、靠背或扶手上。 ● 请勿攀爬靠背或者扶手。 ● 请勿倚靠或坐在靠背上。 ● 请勿将头伸入靠背和后盖之间的活动区域。 ● 请勿让不能表达自己意思的人或没有能力操作本机的人使用本机。 ● 按摩颈部时，请注意按摩轮的动向，请勿按摩前颈，请避免过重地按摩颈部。 否则可能会引起事故或造成伤害。 ● 请勿损坏电源线及电源插头。 （请避免此类行为：损伤、加工、强行弯曲、扭转、拉长电源线及电源插头，或将电源线及电源插头靠近发热器，或在电源线及电源插头上系重物、或任意捆绑。） 使用破损的电源线或电源插头，可能引起触电、短路或引发火灾。请到购买本品的商店或指定的维修中心咨询修理电源线或电源插头的方法。 ● 使用“温热”按摩轮时，不要让按摩轮长时间接触同一位置。 ● 请勿长时间使用“膝盖温热”按摩。 可能出现低温烫伤*。 *即使温度相对较低（40℃～60℃），长时间接触皮肤的同一部位没有发热、疼痛等自觉症状，也可能导致低温烫伤。 ● 请勿损膝盖部温热（加热器）。 <ul style="list-style-type: none"> • 不要将别针、针扎进本机。 • 不要用刀具损伤。 损伤内部加热器可能导致火灾或者触电事故。
 湿手禁止	<ul style="list-style-type: none"> ● 请勿用沾湿的手插、拔电源插头。 否则可能导致触电事故。
 分解禁止	<ul style="list-style-type: none"> ● 请勿擅自改造本机。请勿自行分解或修理本机。 否则可能导致起火、异常动作、人身伤害。

注意



必须遵守


- 下列人员即使目前身体健康，也请咨询医师后再使用本机。
(1) 因年龄增长而导致肌肉萎缩的人或身体纤瘦的人 (2) 因骨头或内脏问题而感觉腰痛的人
(3) 容易扭伤或容易瘀伤的人 (4) 晕车、晕船或乘坐其它交通工具时，反应异常激烈的人
(5) 过去曾被施予心脏手术或其它内脏手术的人
否则可能有损自身健康。
- 就坐前，请先确认本机各个部件之间没有异物。
(确认后盖、靠背、座面、小腿·脚部按摩部、靠垫内侧没有夹杂异物。)
否则可能因手、脚或其它物件被本机夹住，而引发事故、造成伤害或机体故障。
- 头部佩戴任何硬质饰物（如发卡等）时请勿使用本机。
● 当裤子口袋内部有硬物时（如手机、钥匙等），将其取出，然后按摩。
● 按摩手、手臂时，取下手表、指甲套、戒指等。
否则可能导致伤害。
- 就座前，确认按摩轮处在收纳位置。
● 按摩途中若想离开座位，必须先停止按摩椅运作，再离开座位。
否则可能引发事故或造成伤害。
- 请勿扯电源线试图拔出电源插头，一定要握住插头本身将其拔出。
否则可能引发触电或短路。
- 移动本机前，必须把小腿·脚部按摩部的角度调节回最初位置。
否则可能造成伤害。
- 如果使用滑轮移动本机，在地板上垫上垫子等。
否则可能在地板上留下伤痕。
- 请勿让儿童使用遥控器托架的固定螺丝。
否则可能因儿童误食或顽皮引发事故或造成伤害。
- 使用滑轮移动本机前，须先清空周围障碍物。抬起小腿·腿部按摩部座面到略低于腰的位置，慢慢移动。
否则可能因机身翻倒引发事故或造成伤害。
- 须将本机放置在水平面上使用。
否则可能因机身翻倒引发事故。
- 因使用本产品而产生出疹、红肿、发痒等症状时，请立即停止使用，并咨询医师。
否则可能引发事故或导致身体不适。
- 闲置一段时间后使用本品，请先重新阅读一遍产品使用说明书，并确认机体运作正常后，再开始使用。
否则可能引发事故或造成伤害。



禁止

- 请勿和其它器械同时使用。
否则可能造成事故或引起身体不适。
- 请勿将头部、腹部或皮肤紧贴按摩轮。此外，请勿将手或脚伸入按摩轮之间。
- 请勿将膝盖夹在小腿和脚部按摩部之间。
- 勿在使用本机时入睡。此外，饮酒后请勿使用本机。
- 当鼓起的座面气囊里的空气没有被排完时，不要站在座面上，或者跳上去，或者在上面放东西。
否则可能导致事故、伤害。

⚠ 注意

 禁止	<ul style="list-style-type: none"> ● 请勿将手或脚伸入本机与小腿·脚部按摩部之间。 ● 请勿将手·手臂或头伸入小腿·脚部按摩部（腿置台）的缝隙间。 安全起见，结束按摩后，请一定要收纳好小腿·脚部按摩部。 ● 请勿将手·手臂或头伸入靠背和后盖之间。 ● 请勿将宠物放在按摩椅上（后盖、靠背、扶手等）。 ● 按摩中，请勿突然拔出电源插头，或突然关闭电源开关。 否则可能造成伤害。
	<ul style="list-style-type: none"> ● 请勿站立或坐在后盖上。 否则可能导致本机翻倒，造成人身伤害。
	<ul style="list-style-type: none"> ● 请勿站立或坐在扶手上。 否则可能导致人身伤害。
	<ul style="list-style-type: none"> ● 请勿站立或坐在小腿·脚部按摩部及腿置台上。 否则腿置台前部旋转或者本机倾倒可能导致事故、伤害。 小腿·脚部按摩部底部撞到地板时，可能损坏地板。
	<ul style="list-style-type: none"> ● 请勿在已安装好的状态下拖动或推动本机。 否则可能损坏地板。
	<ul style="list-style-type: none"> ● 请勿在有人入座时移动本机。 否则可能因机身翻倒引发事故或造成伤害。
	<ul style="list-style-type: none"> ● 请勿在电热毯等加热设备上使用本机。 否则可能引起火灾。
	<ul style="list-style-type: none"> ● 请勿将遥控器放置在座面上。 否则可能损坏本机。
 禁止湿手触碰	<ul style="list-style-type: none"> ● 请勿在浴室或其它潮湿的地方使用本机。 否则可能引发触电或机体故障。
 禁止沾湿	<ul style="list-style-type: none"> ● 请勿将水滴等物质撒在本机或遥控器上。 否则可能引发触电、短路或引起机体故障。
 拔出电源插头	<ul style="list-style-type: none"> ● 清洗及保养本机，必须先从插座上拔出电源插头。 否则可能引发触电或造成伤害。 ● 停电时立刻拔出电源插头。 否则可能在恢复供电时导致事故、伤害。 ● 不用时，一定要从插座上拔出电源插头。 否则灰尘、湿气可能导致绝缘老化，引发漏电火灾。


接地说明

- 本机必须接地。如果本机发生功能故障，可以使用接地来减少触电危险。
- 本机装备了具有设备接地导线和接地插头的电源线。必须将该插头插入已完全依照当地代码和法令进行正确安装和接地的、合适的插座。

注意

- 若设备接地导线的连接不当，则会导致触电危险。如果您对本机的接地是否正确存有疑问，请委托专业电工进行检查。即使本机附带的插头与插座不配，也不能对其进行改造。请委托专业电工安装合适的插座。
- 本机具有接地插头。请确认本机连接至具有与插头形状匹配的插座。
- 本机不能使用转接插座。
- 如果电源线损坏，必须使用专用的电源线或从其制造商或维修部买专用组件来更换。


产品结构

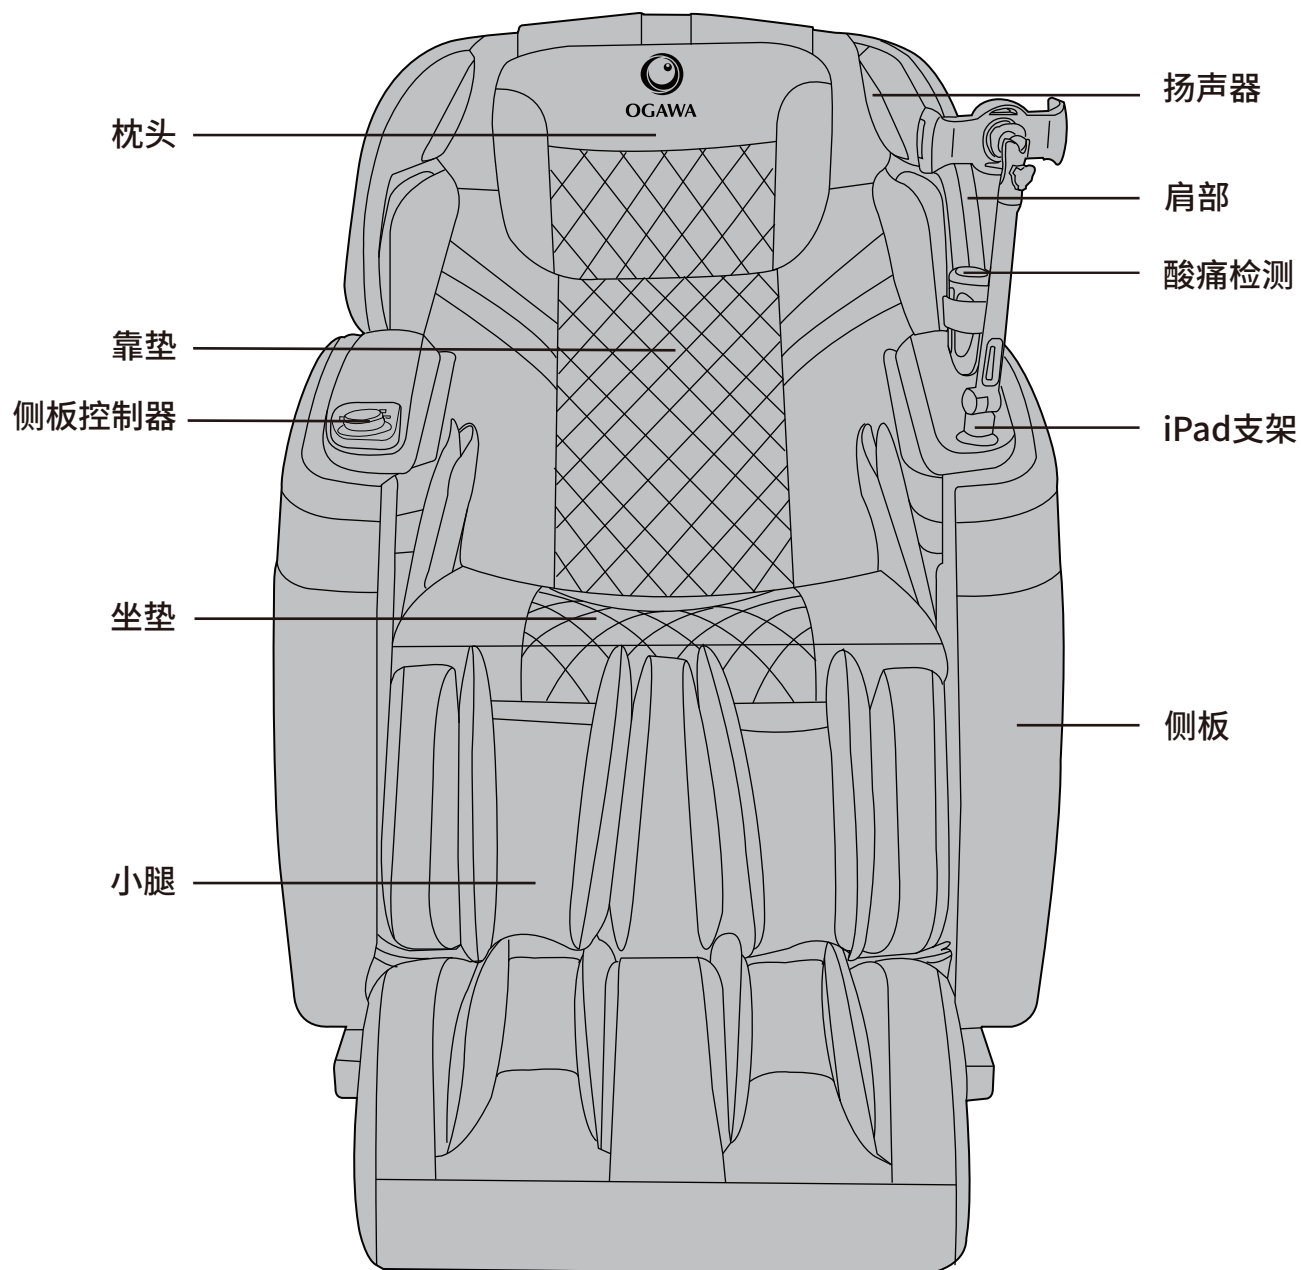

重要提示-由于产品质量的提高，
产品图片或内容描述可能会略有不同。

产品结构


气囊按摩位置

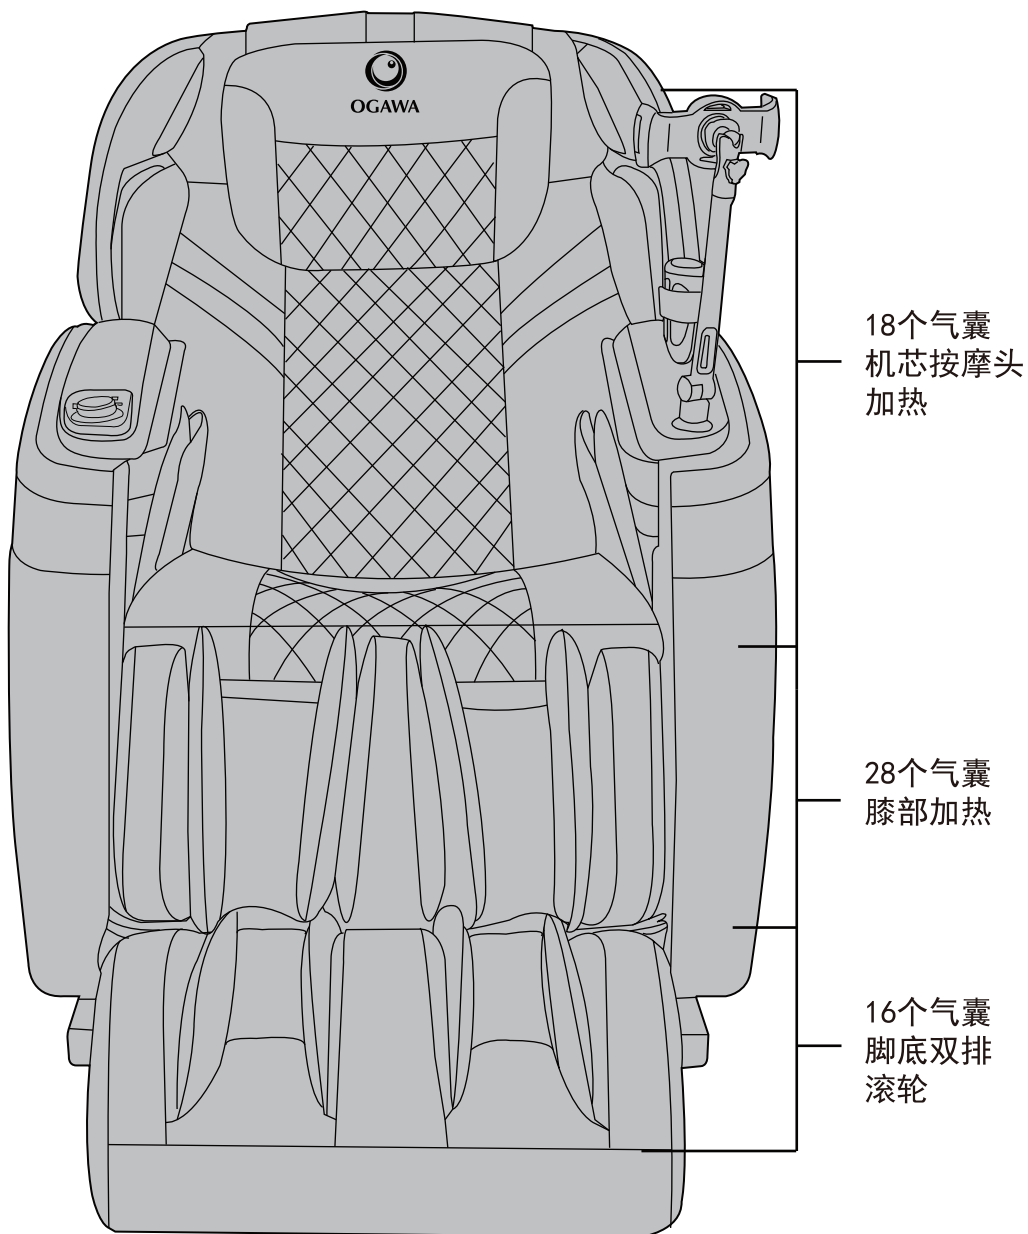

设置按摩椅

1 使用前(安装位置)


- 确保足够空间以便按摩椅可以倾斜。

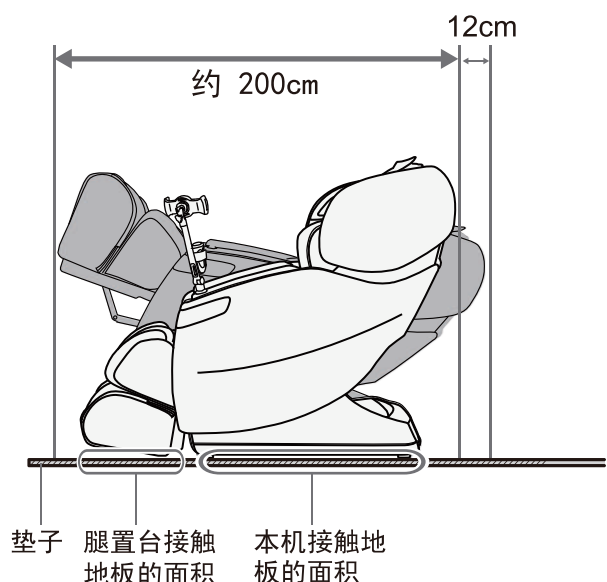

- 请勿将按摩椅暴露于阳光直射或高温环境下(如, 加热设备前), 因为这样可能导致按摩椅合成皮革褪色或硬化。
- 为避免地板损伤, 请在本机下铺上垫子。平铺垫子时, 垫子的大小应足以盖住本机接触地板的范围与腿置台接触地板的范围(至少200cm X 90cm), 如图所示。
- 安装本机时应靠近电源插座。

2 产品移动说明

方法一: 拖住两边侧板, 然后抬起

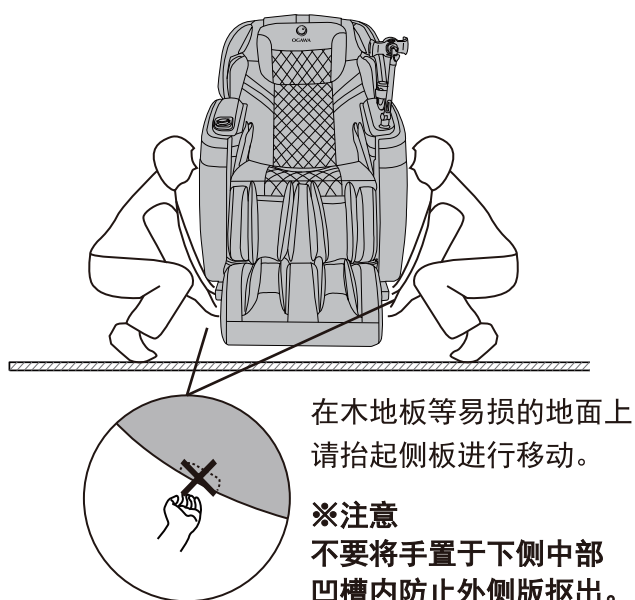

- 由于本机较重, 因此搬运时请小心, 以免造成背部拉伤。(本机必须由两人或多人搬运。)

本机重量

约125kg

将本机放置在地板上

- 缓慢地放下本机, 小心脚部被压伤。
- 直到机身完全放平前, 请勿放开腿置台。突然松手, 将导致腿置台弹回最初位置。
- 地板可能受损, 因此, 建议在地板上铺上垫子等物品。

⚠ 注意

- 请勿在已安装好的状态下拖动或推动本机。
- 请勿握住窗口边框进行本体搬动。
否则可能会导致机体故障或人身伤害。
- 不要在地板上使用滑轮移动。
否则可能在地板上留下伤痕。
- 请勿在有人入座时移动本机。
否则可能因跌倒导致事故、伤害。
- 移动本机时，不要握持脚部按摩部分。
移动在滑动可能导致伤害。


方法二：使用滑块移动本机

⚠ 注意

以右图方式 推动按摩椅，但此方法不适用于木地板推动，否则可能在木地板上留下划痕。

- 1 按下开关键按钮。
- 2 将靠背和小腿返回至其原始位置。
将电源开关滑到“0”（关闭）位置，拔下本机插头。

将酸痛检测和电源线放在座位上。

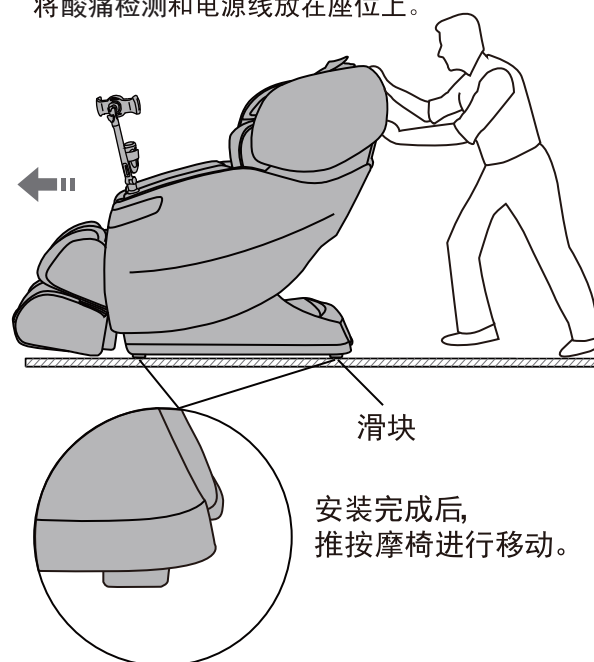


组装

（请翻阅产品安装说明）

使用前


1 检查周围

确定本机周围没有人、宠物及其它物体。

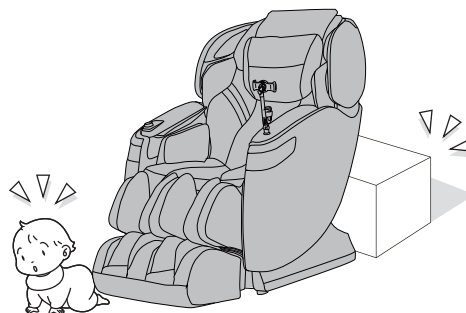

2 卷起靠垫并以拉链固定

卷起靠垫并以拉链固定在本体上。

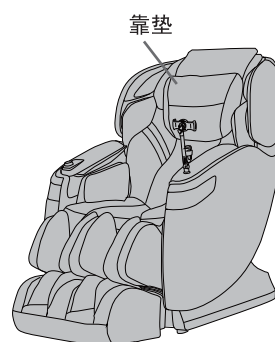


3 确保本机缝隙间没有异物。

小腿. 脚部按摩前, 确认没有夹住异物

⚠ 注意


- 不要将手、手指、脚、头伸进小腿与座面、扶手的间隙中间
- 就坐前, 请先确认本机各个部件之间没有异物。
- 请勿将手、手臂或头伸入靠背与后盖之间。
- 请勿将宠物放在按摩椅上 (后盖、靠背、扶手等)。

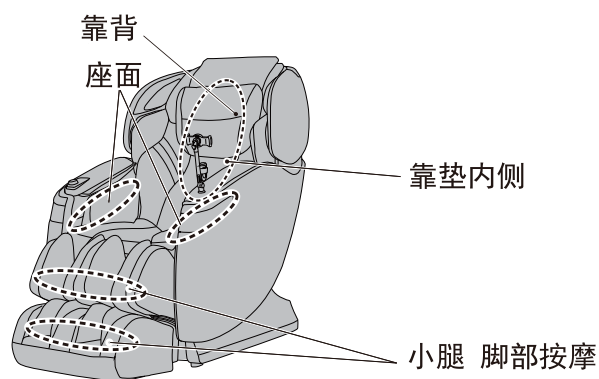

4 检查电源线及电源插头


警告

- 请定期清理电源插头上的灰尘等脏污。
否则可能因湿气等原因引发绝缘不良，从而导致引发火灾。
(请用干燥的抹布擦拭电源插头。)
- 请勿损坏电源线及电源插头。
(请避免此类行为：损伤、加工、强行弯曲、扭转、拉长电源线及电源插头，或将电源线及电源插头靠近发热器，或在电源线及电源插头上系重物、或任意捆绑。)
使用破损的电源线或电源插头，可能引起触电、短路或引发火灾。请到购买本品的商店或指定的维修中心咨询修理电源线或电源插头的方法。

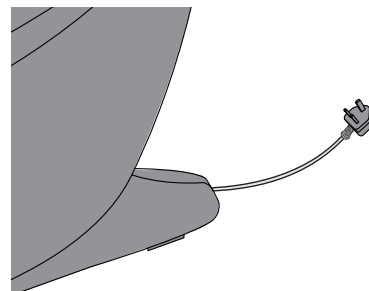

请注意，不要被电源线绊住脚部等。

务必将接口完全推入设备电源输入插口。


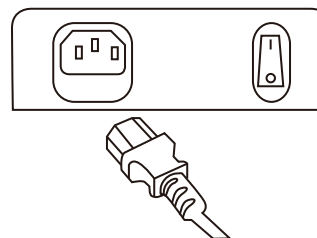


5 打开电源

- ① 将电源插头插入电源插座。
- ② 将电源开关滑到“|”（开启）的位置。


警告

- 请务必将电源插头插到底，使其确实地插入插座中。
否则可能引发触电或因过热导致火灾。
- 请严格遵守插座和配线器具的使用规定。
- 请使用 220-240V~,50/60Hz 交流电。
(请勿在国外使用本品、或擅自连接变压器。)
否则可能引发触电、机体故障或因过热导致火灾。
- 请勿用沾湿的手插、拔电源插头。

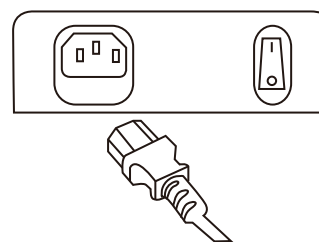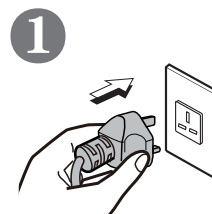


使用前 (续)

6 确认按摩轮处于收纳位置

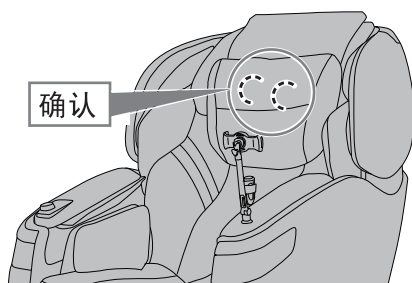

按摩轮不处于收纳位置时，
按下开机键返回收纳位置。


7 确认面料未破损或存在裂缝

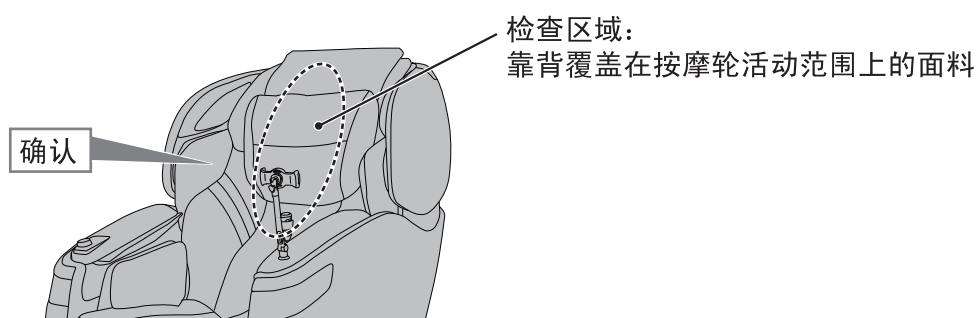

警告

- 在使用本机前，一定要掀开靠垫，以检查图示区域面料是否破损。其他部分也要确认面料是否破损。（无论发现多么细小的破损，都请立即停止使用，拔掉电源插头，并将本机送修。）
在面料破损情况下使用本机，可能引发伤害或触电的危险。


8 根据需要调整椅子

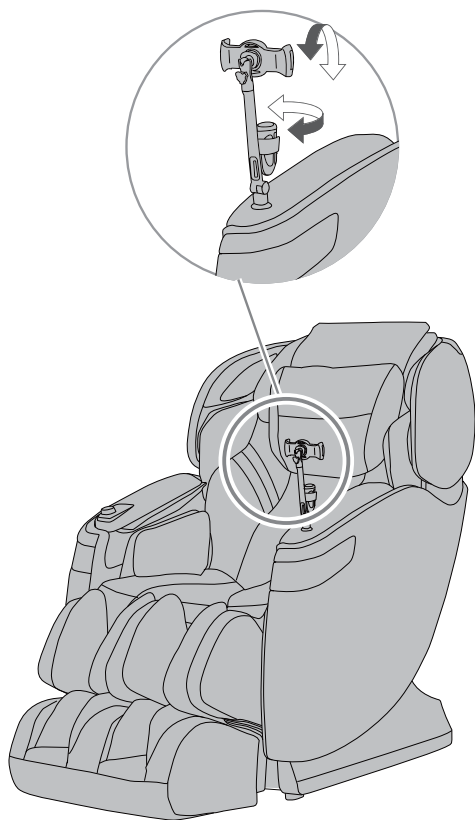

调节支架

- 可调节左右方向。

9 根据需要调节脚部按摩部长度

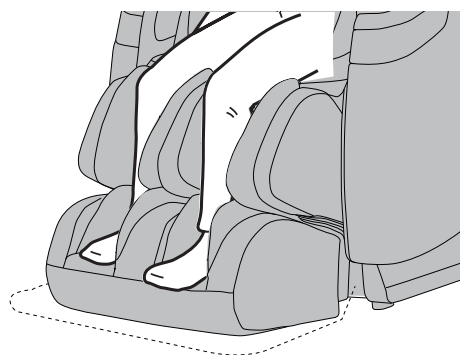


身材高大的人士

- 电动调节脚部按摩部长度，膝盖就不容易悬空。

当下小腿自动调整到舒服位置时，用脚跟踩下底部感应器以便停止调整。

快捷操作

右侧板设置快捷按键，具体功能描述如下

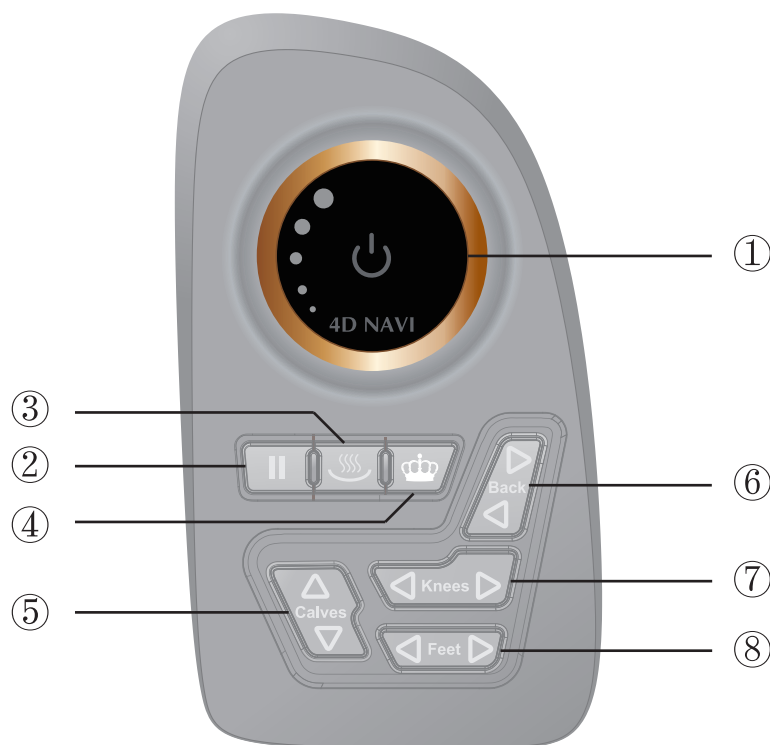

1. 电源键、4D大小调节组合按键：

开关功能，关机状态下，长按1秒开机，再长按1秒关机。

4D强度调节，顺时针旋转加强4D按摩强度，反之减弱。

2. 暂停键：按下此键后，按摩椅功能停止运行。再按一次解除暂停。

3. 加热键：按下此键后，按摩椅开始加热。再按一次解除加热。

4. 大师精选自动按摩按键：按下此键后，可进入快速自动按摩。

5. 小腿升/降按键：按上半部分键，小腿上升。按下半部分键，小腿下降。


6. 背部仰/躺按键：按上半部分键，背部仰起。按下半部分键，背部躺下。

7. 腿部伸/缩按键：按左半部分键，膝部伸出。按右半部分键，膝部内缩。

8. 脚部伸/缩按键：按左半部分键，脚部伸出。按右半部分键，脚部内缩。

智能按摩快速启动按键

按摩椅开机状态下，按下检测手柄快速启动键，启动按摩评估，按摩评估完成15秒后自动推送专属定制程序。

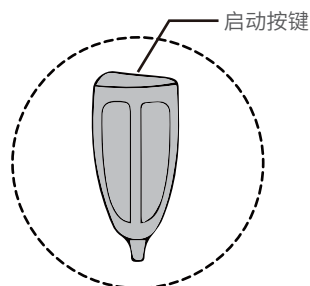

下载APP

1、使用iPad和Iphone从App Store、安卓手机从google paly，搜索关键词下载应用。


关键词：OGAWA Wellness、奥佳華健康管家、奥佳华健康管家

2、或直接扫描右边的二维码下载应用，APP所安装的软硬件配置要求：

硬件要求：iPad mini 2及以上、Iphone、安卓手机

IOS系统要求：IOS10.0及以上版本

安卓系统要求：Android系统4.3及以上版本



首次使用APP

1.首次打开APP，选择所处地区后进入到登录注册页面。

2.使用APP须先注册一个账号，可通过手机号码或邮箱方式进行注册（图1）。



(图1)

- 3.如果已拥有账号，可以直接登录使用APP（图2）。
- 4.如果已拥有账号并且绑定过人脸信息，可以直接使用人脸登录。
- 5.也可以使用Google和Facebook的账户登录APP，并通过绑定手机号码或邮箱后进入APP。



(图2)

首次绑定设备


- 1.进入首页后，APP会先判断当前账号是否已绑定按摩椅。
- 2.如果未绑定过按摩椅，需要进入设备管理页面，扫描专属二维码识别按摩椅信息，进行绑定（图3）；



(图3)



温馨提醒: 建议请将产品专属二维码卡上的二维码撕下来贴在iPad支架上, 以保证后续二维码不易丢失。

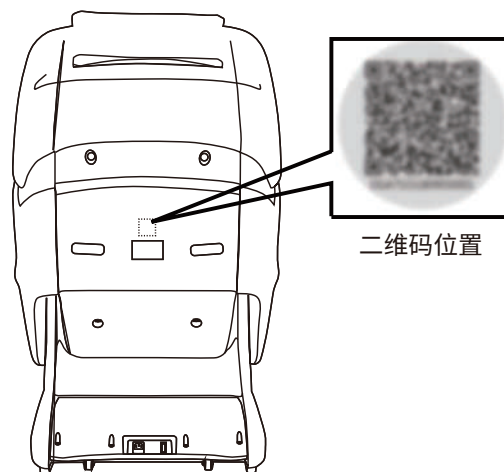


3.如果当前账号已经绑定过按摩椅，可以直接在设备管理页面中选中按摩椅后，进行蓝牙连接（图4）



(图4)

4.如果APP内的WIFI未配网，需要通过首页WIFI图标进行网络连接（图5）
注意事项：APP内的WIFI配网只支持2.4G的WIFI，不支持5G的WIFI

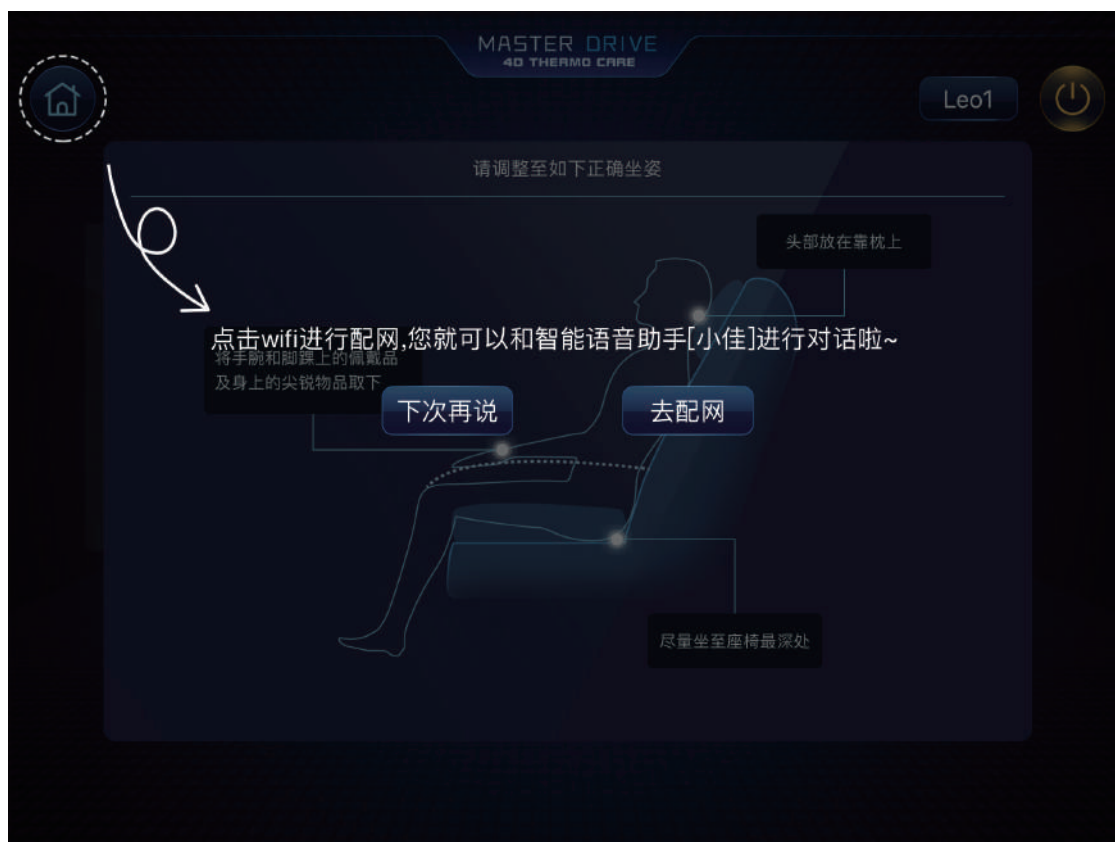

(图5)

语音控制

本产品内置语音控制系统，在待机状态下，可使用语音唤醒词“小佳小佳”，进行按摩椅控制及调节。

★ 语音控制使用说明详见语音控制指令集一览表


 **注意**

- 请就坐再使用语音控制。
- 使用语音控制椅子工作时，要确定本机周围没有人、宠物及其他物体。



按摩评估

- 您可以通过检测手柄上的启动按键快速开始按摩评估。评估完成15秒后，按摩椅自动推送专属按摩程序。
- 您可以通过APP主界面“智能按摩”下的“智能评估”开启按摩评估。评估过程中，APP页面实时显示检测状态及最终评估结果，评估完成15秒后，按摩椅自动推送专属按摩程序。

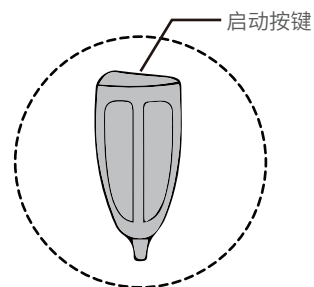

- 按摩评估时，请静坐并背靠在按摩椅上，保持安静状态。左手掌心紧贴电极片，食指指腹轻轻放在检测手柄侧面测试点上，确保测试点被完全覆盖，双手自然放于两侧。

注意事项

- 1)按摩评估前，请将左手擦拭干净，确保掌心和食指干燥、清洁。
- 2)按摩评估前，请将检测手柄擦拭干净，确保电极片和侧面测试点镜片干燥、清洁。
- 3)按摩评估过程中，请勿用力按压手柄侧面血氧传感器测试点，同时确保食指指腹完全覆盖血氧传感器。


- 4)按摩评估过程中,请保持安静状态,勿抖动手指。
- 5)请勿在左手食指上涂指甲油、防冻霜或贴美甲。
- 6)请勿在运动后马上进行按摩评估。
- 7)连续测量后的麻痹状态会影响血液循环,可能会影响检测参数,请勿长时间连续多次测量。
- 8)手指皮肤过厚或色素沉积者,检测参数可能不准确。
- 9)长期暴露在低温环境中、指尖皮肤冰冷、末梢循环差可导致脉搏信号不足,无法测量或测量结果不准确。

APP具体使用操作详见APP界面中“用户中心”的帮助栏中“APP使用引导说明”。


蓝牙首次连接需要输入PIN码。密码：9999

按摩结束

- 1** 将检测手柄放回手柄托架上。

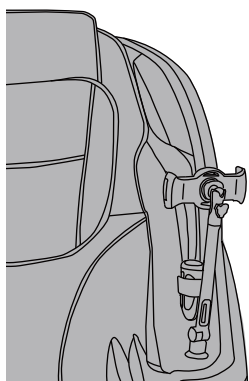

- 2** 使脚部按摩部收回最初位置。

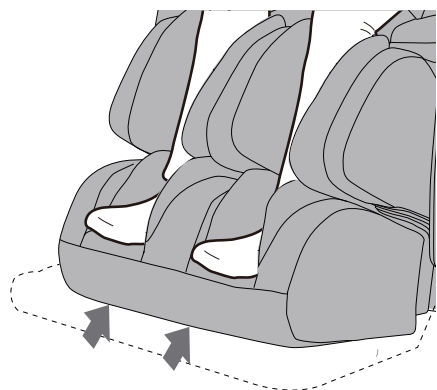

- 3** 将脚从小腿·脚部按摩部上移开。

为确保安全,使用完毕后,请务必收起小腿。


小腿·脚部按摩部的收回方法

- 确认小腿内没有任何物品
慢慢地将腿从小腿·腿部按摩部上移开。
在调节页,将小腿调回原点。




警告


- 儿童禁止使用本机。此外,请勿让儿童在主体上玩耍,或者爬到小腿·脚部按摩部、座面、靠背或扶手上。否则可能会引起事故或造成伤害。

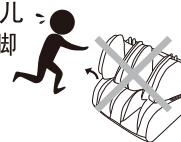

4 切断电源

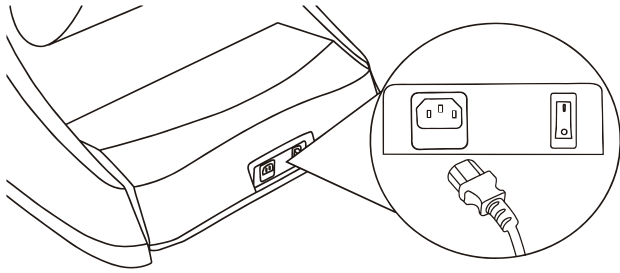

- ① “关闭”电源开关。
- ② 拔下电源插头。

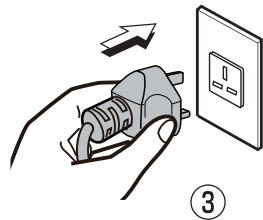

警告

- 每次使用完毕，应将电源开关滑到“0”（关闭）位置，拔掉电源插头。

否则可能因儿童顽皮引发事故或造成伤害。

关于定时器功能

按摩开始后启动定时功能，定时时间到后将自动结束。

- 小腿，脚部按摩部将自动下降。
- 按摩轮将移动到收纳位置。
- 靠背不会自动升起。

希望中途停止按摩时

按下  按钮

- 小腿，脚部按摩部自动下降，按摩轮退回到收纳位置。
- 按摩轮收起后，靠背升起。

感觉异常时

按下  按钮


- 所有操作将立即停止。
- 小心走下按摩椅，以防按摩椅翻到。

清洗及保养

清洁合成皮革部分

使用柔软的干布擦拭皮革。

- 切勿使用诸如稀释剂、汽油、酒精等化学品清洁本机。
- 使用市面销售的皮革保养品(抹布)时,请遵照其使用说明。
- 如果合成皮革特别脏,则通过以下方式擦拭。
 - ① 将软布浸入水中或含3%至5%中性洗涤剂的热水中,然后彻底拧干。
 - ② 使用上述软布擦拭皮革表面。
 - ③ 使用浸过清水且已彻底拧干的布料擦掉清洁液。
 - ④ 使用拧干的软布擦拭。
 - ⑤ 使其自然风干。
- 难以去除污渍时,请将在市面上购买的三聚氰胺泡棉浸入中性洗涤剂中,然后用它擦拭本机。
- 不要使用吹风机吹干表面。
- 由于布料的颜色会染到合成皮革的表面上,因此在使用牛仔布和彩色布料擦拭本机时务必小心。
- 不要使这些部位长时间与塑料接触,因为这会导致褪色。
- 合成皮革有变色的可能,所以在使用染发剂时,请将接触的部分用毛巾覆盖。

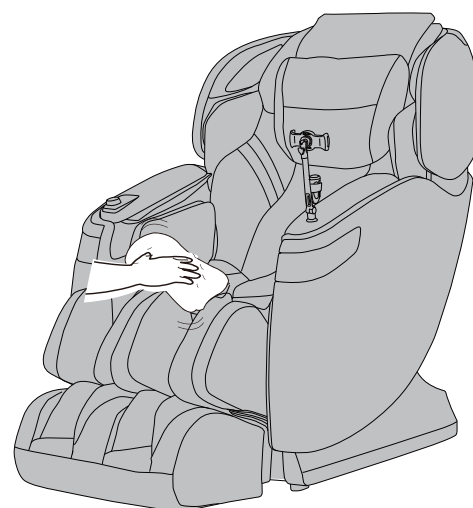


1 将软布浸入水中或含有中性洗涤剂的热水中,拧干后,擦拭本机塑料部。

- 切勿使用诸如稀释剂、汽油、酒精等化学品清洁本机。

2 使用浸有清水且已彻底拧干的布料擦拭。

- 擦拭遥控器前请务必拧干布料。

3 使其自然风干。

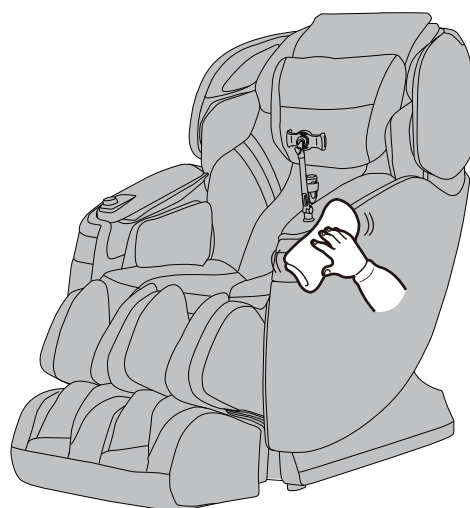

疑问解答(Q&A)

Q 因为生病而经常出入医院的人可以使用本品吗？

A 经常出入医院的人，请在与医生商量的前提下使用本品。

按摩即所谓“触压刺激”，即通过对肌肉进行压迫，缓解肌肉紧张，促进血液流动。根据不同的病因，按摩有可能造成病情恶化，因此请务必在和主治医生商量之后使用本品。

Q 身高多少的人适合使用本品？

A 根据体型的不同多少会有所差异。请大致参考下文使用本品。

- 身高小于145 cm的用户，及身高超过185 cm的用户同时使用上半身按摩和小腿·脚部按摩时，可能出现足底与脚部按摩部接触不充分，或膝盖弯曲的情况。

身高较高的用户感觉膝盖部位弯曲时

请选用下述方法**A**或方法**B**

- A** 放倒靠背，降低小腿·脚部按摩部位置。
- B** 利用腿置台，只对上半身进行按摩。
(足部按摩与上半身按摩分开使用)

身高较矮的用户难以向下触到足底按摩部时

请选用下述方法**A**或方法**B**

- A** 抬起靠背，升高小腿·脚部按摩部位置。
- B** 利用腿置台，只对上半身进行按摩。
(足部按摩与上半身按摩分开使用)

Q 搬家时，有什么需要特别注意的地方？


A 请注意以下事项。

- 为了方便搬运，请先将按摩椅靠背倾斜到最低位置。
- 搬运时，人不要坐在座椅上。

① 按下开机键，接通电源。

② 按下  使靠背呈完全倾斜状态。

再按下此按钮
靠背和小腿停此移动。

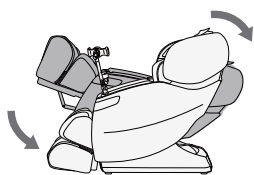


③ 关闭电源开关，拔出电源插头。

- 在有原装纸箱的情况下，请先确认电源线未被缠绕在本机上，将电源线缠好放在座面上；搬运的时候，请注意电源线没有掉落且未与地面发生摩擦。
- 在没有原装纸箱的情况下，为了防止机体划伤和搬运中的震动，请妥善使用其它包装辅材包裹本品。

Q 请问在哪里可以看到产品的制造编号？

A 在按摩椅主体背面的座面下。

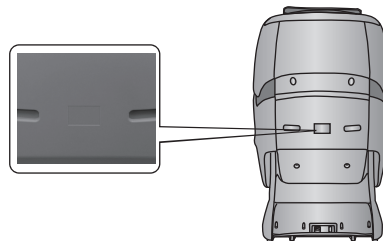

Q 未从膝部感受到温热怎么办？

A 「膝盖温热」只有膝盖部位的布料有温热感。请将膝盖紧贴在温感传递部。脚部按摩部分抬高时，膝盖与温感传递部紧密接触，使用户感到温暖。另外，用户可以通过用毛毯盖住膝盖，增加温暖感。

Q 有点在意按摩椅运作时发出的声音……

A 按摩椅运作时产生的声音，一般是由于机芯构造而发出的。

Q 按摩中感觉左右两边按摩轮的按摩力度有差异，要紧吗？

A 由于机芯构造，在按摩过程中，确有可能感觉左右按摩轮的力度有差异。

为了能够模拟出最自然的按摩手法，本品机芯采用了允许左右按摩轮交替捶背的机芯构造。在按摩过程中，左右按摩轮接触背部的具体位置可能稍有差异，从而导致了使用者产生左右两侧按摩力度有所不同的感觉。此时，本品本身并未发生故障。

Q 感到足底指压过于用力……

A 使用气囊按钮将气囊强度设置为“1”。另外，降低小腿·脚部按摩部，也可以减轻足底的指压力度。

Q 使用本品时每个月耗电量是多少？

A 按每日30分钟，使用频率来计算，每月本品耗电量约为3度。

发现故障后，首先检查并尝试以下方法。
如果在尝试后，故障依然存在，请联系销售店。

问 题	原因和解决方法
<p>在使用本机过程中按摩轮停止 (按摩椅发出“哔哔”的声音，遥控器上所有的显示图标和按钮闪烁然后熄灭)</p>	<p>在使用过程中，按摩轮遇到过大的外力时，出于安全考虑，按摩轮可能会停止移动。 如果遥控器上的所有标记和按钮开始闪烁，这种情况极为异常，请关闭电源开关，等待约10秒钟，然后再次打开电源。 如果按摩轮再次停止，请调整自己的坐姿，不要使背部完全贴在靠背上。(应注意遵守相关注意事项，尤其在体重为100 kg或以上的人使用时。)</p>
<p>不能倾斜 小腿不能升高降低 (发出“哔哔”的声音，遥控器的运行指示灯熄灭并停止运行)</p>	<p>如果本机遇到了障碍物或者在使用本机时用力过大，出于安全考虑，本机将停止工作。 当所有显示的内容及按钮在闪烁时，且靠背或小腿已停止工作，关闭本机电源一次，约10秒钟后再次打“开启”电源，然后操作本机。</p>
<p>按摩轮没有达到肩部或颈部的位置</p>	<p>如果头部没有接触到靠枕，或背部没有接触到靠背，在体型检测过程中肩部位置可能低于实际位置。坐在座椅的最深位置，将头部靠在靠枕上，然后从头开始重新操作。</p>
<p>左右按摩轮的高度(强度)不同</p>	<p>因为搭载了可进行按摩轮交互捶拍动作的按摩机芯，出现这种情况纯属自然。并非机体故障。</p>
<p>本机根本无法运行。 ●上半身(颈部至腰部)按摩 ●小腿和脚部按摩</p>	<ul style="list-style-type: none"> ● 电源线连接已断开。 ● 没有打开本机电源开关。 ● 按下遥控器上的 开机键 按钮后，没有选择任何程序。
<p>按摩轮和膝盖温感都没有温热感</p>	<ul style="list-style-type: none"> ● 按摩轮和膝盖温感按钮被设定为关闭状态。 ● 膝部温感只有膝盖部位的布料有温热感。 温感的感知程度根据用户的体型，按摩手法，衣服，室温而有所不同。脚部按摩部分抬高时，膝盖与温感传递部紧密接触，使用户感到温暖。另外，用户可以通过用毛毯盖住膝盖，增加温暖感。
<p>即使关闭温热功能，温度也降不下来</p>	<ul style="list-style-type: none"> ● 由于加热器的结构，加热后片刻依然会因为余热而感到温暖。 ● 即使关闭温热功能，持续按摩同一部位，也会使体感温度上升。
<p>即使按下按摩轮和膝部温感，加热器也不发热</p>	<p>如果上半身按摩或膝盖按摩部都没有加热，温热功能无法单独使用。</p>
<p>本机已受损</p>	<p>为防止事故发生，请务必与授权服务中心联系。</p>
<p>电源线或电源插头异常发热</p>	<p>为防止事故发生，请务必与授权服务中心联系。</p>

按摩评估常见问题及排除方法

常见问题	可能原因	解决方法
短时间内检测结果变化大	1、未正确握持检测手柄	1、请按照检测手柄操作说明正确握持手柄
	2、检测手指或身体处于抖动状态	2、请勿抖动手指或身体
无法获得脉率或血氧测量结果	1、食指未正确放置	1、请按照检测手柄操作说明正确放置食指
	2、检测过程中手指力度过大	2、请将食指指腹轻覆盖在测试点上,切勿用力压迫手指
	3、涂指甲油、防冻霜或贴美甲	3、检测时请将指甲油、防冻霜去除或卸下美甲

若以上处理方法无效, 请参阅《产品保修单》, 联系OGAWA服务中心。


关于运行过程中本机发出的声音和令人在意的感觉

在使用中会发生下述动作音、感觉，不过这是因按摩椅的结构而发生的，并非异常。

- 按摩轮由“伸出”改为“收回”时的声音
- 动作时按摩轮擦过面料上的皱纹时发出的声音和感觉
- 揉按、捶拍动作等的动作音
- 按摩轮动作时的摩擦声
- 上下动作时的动作音
- 传送带的转动音
- 电机音
- 按摩轮从“挤压”改为“拉伸”时的声音
- 落座时的声音
- 靠背倾斜时扶手与靠垫的摩擦声
- 按摩轮与布料的摩擦声
- 气囊按摩运作时的充气泵工作音
- 气囊按摩运作时的排气音
- 气囊按摩运作时座椅下电磁阀发出的工作音。
- 腿置台的晃动
- 肩部伸展、动作时的声音
- 气囊的动作音
- 脚部按摩部的滑动音
- 靠背倾斜时，靠垫与后盖上皮革摩擦时发出的声音

当声音变大时，也有可能发生了故障。

- 此时，请委托授权服务中心进行检查和修理。

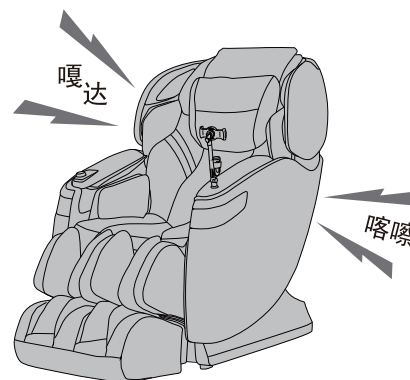

警告

- 请勿擅自改造本机。请勿自行分解或修理本机。否则可能导致起火、异常动作、人身伤害。

警告

- 发生异常、故障时，立即停止使用，拔掉电源插头。（否则可能冒烟、起火、触电）
〈异常、故障事例〉
 - 接通电源开关后可能不动作
 - 移动电源线，有时通电有时不通电
 - 运行中发出焦臭味、异常声响
 - 按摩椅变形或者异常发热→ 请立即委托授权服务中心检查和修理。

规格

	AC 220-240V~, 50-60Hz	
	200W (用遥控器“关闭”时大约0.3W)	
	约1.35m	
	在使用本机过程中按摩轮间的距离(包括按摩轮的宽度) 背部滚动和上下移动过程中按摩轮间的距离(包括按摩轮的宽度): 约 4.5cm~16.6cm	
	按摩轮的突出量(强度可调节) 约10cm	
	揉按 约7次/分钟~约30次/分钟 捶拍 约300次/分钟~约520次/分钟(单侧) 移动速度 约1.3cm/秒~约4.2cm/秒	
	靠背: 约 128° ~ 154° 小腿按摩部分: 约 4° ~ 86°	
	约15分钟(自动断电)	
	约158cm X 84cm X 121cm	
	约196cm X 84cm X 105cm	
	约125kg	
	3箱包装 座部: 146x77x103cm 侧板: 127x37x66cm 小腿: 57x49x60cm	2箱包装 座部: 158x85x100cm 小腿: 57x49x60cm
	3箱包装: 约146kg	2箱包装: 约144kg
	约120kg	

对于体重100 kg 或以上的人士, 产品运作时可能产生更大的噪声而且面料外罩可能磨损得更快。

联系我们



MALAYSIA
Healthy World Lifestyle Sdn Bhd
No. 22 Jalan Anggerik Mokara 31/47
Kota Kemuning, 40460 Shah Alam
Selangor Darul Ehsan, Malaysia
Tel : +603-5121 4286
Fax: +603-5121 4386



HONG KONG, CHINA
OGAWA Health Care International (HK) Ltd
31/F, YHC Tower, 1 Sheung Yuet Road
Kowloon Bay
Kowloon
Hong Kong
Tel: +852 3465 6262
Fax: +852 2410 0119



SINGAPORE
OGAWA Health-Care Pte Ltd
27 Tampines Industrial Avenue 5,
T5 @ Tampines
Singapore 528623


Tel: +065-6846 8588
Fax: +065-6846 7677



VIETNAM
OGAWA Vietnam Co Ltd
2nd floor, Petroland Tower,
12 Tan Trao, Tan Phu ward
District 7
Ho Chi Minh
Tel: +84 54133 222/54133223
Fax: +84 5416 1736



PHILIPPINES
O-Healthcare Solution Phil. Inc.
2303, 4th Floor, G&A Building,
Chino Roces Avenue Extension,
Makati City, Philippines
Tel : +632 889 0676 / +632 844 6851
Fax: +632 812 0421

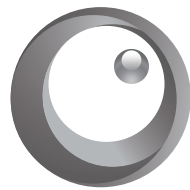

OGAWA

MASTERDRIVE AI 2.0
MORE THAN A.I

User Manual
All information is correct at the time of print

目次

ご使用前に

- 安全上のご注意 JP1
- アース取付け JP5
- 椅子構造 JP6
- 設置する JP8
- 組み立てる JP9
- 毎回マッサージを始める前に JP10

使い方

- 簡単な使い方 JP14
- 操作説明 JP15
- マッサージ終了 JP20

お手入れ

- 掃除及び手入れ JP27



Q&A/重要事項

- Q&A JP23
- 故障修理 JP24
- 定格・仕様 JP27
- アフターサービス JP28

安全上のご注意 必ずお守りください



人への危害、財産の損害を防止するために、必ずお守り頂くことを説明しています。

■ 誤った使い方をしたときに生じる危害や損害の程度を区分して、説明しています。





 警告	「死亡や重傷を負う恐れがある内容」です。
 注意	「軽傷を負ったり、財産の損害が発生したりする恐れがある内容」です。

■ お守りいただく内容を次の図記号で説明しています。（次は図記号の例です）

 してはいけない内容です。	 実行しなければならない内容です。
---	---

 警告			
 必ず守る	<p>● 医師の治療を受けているときや下記の人は、必ず医師と相談の上使用する。</p> <table style="width: 100%; border: none;"> <tr> <td style="width: 50%; vertical-align: top;"> <ul style="list-style-type: none"> (1) ペースメーカーなどの電磁障害の影響を受けやすい体内植込み型医用電気機器を使用している人。 (2) 悪性腫瘍のある人 (3) 心臓に障害のある人 (4) 温度感覚喪失が認められる人 (5) 妊娠中や出産直後の人 (6) 糖尿病など高度な末梢循環障害による知覚障害のある人 (7) 骨粗鬆症の人、脊椎を骨折している人、ねんざ、肉離れなどの急性とう痛性疾患の人 </td> <td style="width: 50%; vertical-align: top;"> <ul style="list-style-type: none"> (8) 施療部位に創傷のある人 (9) 体温38℃以上（有熱期）の人（例：急性炎症症状[倦怠感、悪寒、血圧変動など]の強い時期、衰弱しているとき） (10) 安静を必要とする人や著しく体調の優れないとき (11) 背骨に異常のある人、曲がっている人 (12) 椎間板ヘルニア症の人 (13) 上記以外に身体に特に異常を感じている時 </td> </tr> </table> <p>守らないと事故や体調不良を起こす恐れがあります。</p>	<ul style="list-style-type: none"> (1) ペースメーカーなどの電磁障害の影響を受けやすい体内植込み型医用電気機器を使用している人。 (2) 悪性腫瘍のある人 (3) 心臓に障害のある人 (4) 温度感覚喪失が認められる人 (5) 妊娠中や出産直後の人 (6) 糖尿病など高度な末梢循環障害による知覚障害のある人 (7) 骨粗鬆症の人、脊椎を骨折している人、ねんざ、肉離れなどの急性とう痛性疾患の人 	<ul style="list-style-type: none"> (8) 施療部位に創傷のある人 (9) 体温38℃以上（有熱期）の人（例：急性炎症症状[倦怠感、悪寒、血圧変動など]の強い時期、衰弱しているとき） (10) 安静を必要とする人や著しく体調の優れないとき (11) 背骨に異常のある人、曲がっている人 (12) 椎間板ヘルニア症の人 (13) 上記以外に身体に特に異常を感じている時
<ul style="list-style-type: none"> (1) ペースメーカーなどの電磁障害の影響を受けやすい体内植込み型医用電気機器を使用している人。 (2) 悪性腫瘍のある人 (3) 心臓に障害のある人 (4) 温度感覚喪失が認められる人 (5) 妊娠中や出産直後の人 (6) 糖尿病など高度な末梢循環障害による知覚障害のある人 (7) 骨粗鬆症の人、脊椎を骨折している人、ねんざ、肉離れなどの急性とう痛性疾患の人 	<ul style="list-style-type: none"> (8) 施療部位に創傷のある人 (9) 体温38℃以上（有熱期）の人（例：急性炎症症状[倦怠感、悪寒、血圧変動など]の強い時期、衰弱しているとき） (10) 安静を必要とする人や著しく体調の優れないとき (11) 背骨に異常のある人、曲がっている人 (12) 椎間板ヘルニア症の人 (13) 上記以外に身体に特に異常を感じている時 		
	<p>● 使用中に身体に異常を感じたときや使用しても効果があらわれない場合は、直ちに使用を中止し、医師に相談する。（守らないと事故や体調不良をおこす恐れがあります。）</p>		
	<p>● マッサージ使用中や背もたれ、脚のせ台を動かすときは必ず周囲（本体の後部、下部、前部、側部）に人やペットがいないことを確認する。）</p> <p>● ご使用前には必ず背もたれと裏カバーの間に異物がないことを確認する。 守らないと事故や体調不良をおこす恐れがあります。</p>		
	<p>● ご使用前には、必ずくつろぎクッションをめくり上げて、施療子の移動部の布地が破れていないか確認する。また、その他の部分にも布地の破れがないか確認する。 （わずかな破損でも直ちにご使用をおやめください。電源プラグを抜いて、椅子の修理をご依頼ください。 布地が破れた状態で使用するとけがや感電の恐れがあります。</p>		
	<p>● はじめは弱い刺激の「AM習慣」を選択する。</p> <p>● マッサージは1回30分以内にする。</p> <p>● 同一箇所への使用は5分以内にする。</p> <p>守らないと逆効果やけがの恐れがあります。</p>		
	<p>● ご使用後は必ず電源スイッチを「○」にし、電源プラグを抜く。 守らないとお子様のいたずらによる事故やけがの恐れがあります。</p>		
	<p>● コンセントや配線器具の使用に関する規制に従う。</p> <p>● 交流220V～240V、50/60HZで使用する。（海外での使用や変圧器を用いた使用はできません。） 守らないと感電・故障や発熱による火災の原因になります。</p>		
	<p>● 電源プラグは根元まで確実に差し込む。 守らないと感電や発熱による火災の原因になります。</p>		

⚠ 警告

 必ず守る	<ul style="list-style-type: none"> ● 電源プラグのほこり等は定期的にとる。 守らないと湿気等で絶縁不良となり、火災の原因になります。 (乾いた布で電源プラグをふいてください) ● 動かない場合や、異常を感じたときは使用を中止し、すぐに電源プラグを抜いて点検修理を依頼する。(守らないと発煙や発火、感電の恐れがあります。) <異常、故障の例> <ul style="list-style-type: none"> ・ 通電後本体が動かない ・ 電源コードを動かすと、通電したり通電しなかったりする ・ 動作中焦げ臭いにおいがする又は異音がある ・ マッサージチェアが変形するまたは異常に発熱する → これらの異常や故障が発生したら、直ちに正規アフターサービスセンターに相談して、点検修理を行ってください。
 禁止	<ul style="list-style-type: none"> ● 背もたれと裏カバーの隙間に背クッションを入れない。 守らないと故障のおそれがあります。 ● フレームを持って移動する。 守らないと故障やけがのおそれがあります。 ● 次の人は使用しない。 医師からマッサージを禁じられている人 (例：血栓 (塞栓) 症、重度の動脈りゅう、急性静脈りゅう、各種皮膚感染症 [皮下組織の炎症を含む]) など 症状を悪化させる恐れがあります。 ● 次の人は骨盤ストレッチを使用しない。 <ul style="list-style-type: none"> ・ 急性腰痛、椎間板ヘルニア、腰椎すべり症の人 ・ 変形性股関節症など股関節の悪い人 症状を悪化させる恐れがあります。 ● 使用中にもみ玉移動範囲の布地部分に手、腕や足を入れない。 ● お子様に使わせない。また本体の上で遊ばせたり、脚・足裏マッサージ部、座面・背もたれ・肘掛の上にのらせない。 ● 背もたれや肘掛の上にのらない。 ● 背もたれに寄り掛かったり、座ったりしない。 ● 背もたれと裏カバーの隙間に頭を入れない。 ● ご自分で意思表示ができない人、または操作できない人は使わない。 ● 首周辺をマッサージする時に、もみ玉の動きに注意して、首の前方や過度に強いマッサージはしない。 事故やけがの恐れがあります。 ● 電源コード・電源プラグを破損するようなことはしない。 (傷つけたり、加工したり、無理に曲げたり、ねじったり、延長したり、コードやプラグを熱機器に近づけたり、コードやプラグを重い物の下敷きにして束ねたりまとめたりしない。) 傷んだまま使用すると、感電、ショート・火災の原因になります。 電源コードや電源プラグのお手入れ方法は、お買い上げの販売店または「修理ご相談窓口」にご相談ください。 ● 「ヒーター」もみ玉を利用する時は、もみ玉が同一箇所にも長時間触れるような使い方をしない。 ● 「足ヒーター」マッサージを長時間利用しない。 低温やけどのおそれがあります。 *比較的低い温度 (40℃-60℃) でも、長時間皮膚の同じ箇所に触れていると、熱い・痛いなど自覚症状がなくても、低温やけどのおそれがあります。 ● 足温感 (ヒーター) 部を傷めない。 <ul style="list-style-type: none"> ・ 本体にピンや針を突き刺さない。 ・ 刃物で傷つけない。 内部のヒーターを傷つけ、火災・感電の原因になります。
 ぬれ手禁止	<ul style="list-style-type: none"> ● ぬれた手で、電源プラグの抜き差しはしない。 感電の原因になります。
 分解禁止	<ul style="list-style-type: none"> ● 絶対に改造しない。また、ご自分で分解したり、修理をしたりしない。発火したり、異常動作したりして、けがをする恐れがあります。

⚠ 注意



必ず守る




- 現在健康でも下記のような人は必ず医師と相談の上使用する
(1) 加齢により筋肉の衰えた人や痩身の人 (2) 骨や内臓に起因する腰痛の人
(3) 打ち身やねんどのしやすい人 (4) 乗り物酔いの激しい人
(5) 過去に心臓や内臓の手術をされた人
守らないと健康を損なう恐れがあります。
- 本体に異物が挟まっていないか確認してから座る。
(裏カバー、背もたれ、座部の表面、オットマン、脚のせ台、背パッドの内側に異物が挟まっていないか確認する。)
手、足やほかの異物が挟まると、事故やけが、故障の恐れがあります。
- 頭部につけた髪飾りなどの硬いものは外してから座る
- ズボンのポケットに異物が入っている場合 (例：携帯、鍵など)、それを取り出してマッサージする。
- 手や腕をマッサージする時は、時計、つけ爪、指輪など硬い物は外す。
守らないとけがの恐れがあります。
- もみ玉が収納位置にあることを確認してから座る
- マッサージ中に本体から降りるときは、必ず動作を止めてから降りる。
守らないと事故やけがの恐れがあります。
- 電源プラグを抜くときは電源コードを持たず、必ず電源プラグを持って抜く。
守らないと感電やショート of の恐れがあります。
- オットマンや脚のせ台のマッサージ部を初期位置に戻してからマッサージチェアを移動する。
守らないとけがの恐れがあります。
- キャスターを使って移動させる時は、床にマットなどを敷く。
守らないと床を傷つける恐れがあります。
- パッドホルダーの取り付けネジは、子供の手の届かない場所に保管する。
守らないと誤飲やいたずらによる事故やけがの恐れがあります。
- キャスターで移動する時に、周囲の障害物を取り除き、脚のせ台を腰より低く持ち上げ、ゆっくり移動する。
守らないと転倒による事故やけがの恐れがあります。
- 水平な場所で使用する。
守らないと転倒による事故の恐れがあります。
- 本品の使用による発疹、発赤、かゆみなどの症状があらわれた場合は、使用を中止し医師に相談する。
守らないと事故や体調不良の恐れがあります。
- 長期間使用していない時は、この取扱説明書をもう一度お読みの上、製品が正常に動作することを確認してから使用する。
事故やけがの恐れがあります。



禁止

- 他の治療器と同時に使用しない。
事故や体調不良の恐れがあります。
- もみ玉に頭、おなか、素肌をあてない。また、もみ玉に手や足を挟まない。
- オットマンや脚のせ台に膝を挟まない。
- 使用中眠らない。また、飲酒後の使用はしない。
- エアー動作のエアアが完全に抜けきっていない時に、座面の上に立ったり、飛び乗ったり、物をのせたりしない。
事故やけがの恐れがあります。

⚠ 注意

 禁止	<ul style="list-style-type: none"> ● 本体とオットマンや脚のせ台の間に手や足を入れない。 ● オットマンや脚のせ台に手・腕や頭を入れない。 安全のため、使用後はオットマンを完全に収納位置に戻す。 ● 背もたれと裏カバーの隙間に手・足や頭を入れない。 ● 本体の上（裏カバー、背もたれ、肘かけなど）にペットをのらせない。 ● ご使用中、急に電源プラグを抜いたり、電源スイッチを切ったりしない。 ケガの恐れがあります。
	<ul style="list-style-type: none"> ● 裏カバーに立ったり、座ったりしない。 転倒やけがの恐れがあります。
	<ul style="list-style-type: none"> ● 肘掛に立ったり、座ったりしない。 ケガの恐れがあります。
	<ul style="list-style-type: none"> ● オットマンと脚・足裏マッサージ部に立ったり、座ったりしない。 脚のせ台前部の回転或いは本体転倒による事故やけがのおそれがあります。 脚・足裏マッサージを床に当たると床に傷がつくおそれがあります。
	<ul style="list-style-type: none"> ● 設置後、本体を引きずったり押ししたりしない。 床に傷がつく恐れがあります。
	<ul style="list-style-type: none"> ● 人をのせたまま移動しない。 転倒による事故やけがの恐れがあります。
	<ul style="list-style-type: none"> ● ホットカーペットなどの暖房器具の上で使わない。 火災の恐れがあります。
	<ul style="list-style-type: none"> ● 座面にタッチパッドを置かない。 本体を傷つける恐れがあります。
 ぬれ手禁止	<ul style="list-style-type: none"> ● 浴室などの湿気の多い場所で使わない。 感電や故障の原因になります。
 水ぬれ禁止	<ul style="list-style-type: none"> ● 本体やタッチパッドに水などをこぼさない。 感電やショート、故障の原因になります。
 電源プラグをぬく	<ul style="list-style-type: none"> ● お手入れの際は必ず電源プラグをコンセントから抜く。 感電やけがなどの恐れがあります。 ● 停電の時は直ちに電源プラグを抜く。 停電復帰時、事故やけがの恐れがあります。 ● 使用時以外は電源プラグをコンセントから抜く。 ホコリや湿気で絶縁劣化になり、漏電火災の原因になります。


アースを取り付ける

- 製品には必ずアースを取り付け、製品の機能が故障した場合に起こる感電の危険性を抑える。
- 電源コードはアース線とアース付プラグを備えています。プラグは、正しく設置され、かつ、地域の基準を完全に満たしたアースを取り付けたコンセントに差し込む。

注意

- アース線を正しく接続しないと、感電の恐れがあります。アースを正しく取り付けられたか判断が難しい場合は、プロの電気技師に点検を依頼する。また、ご家庭のコンセントに本製品のアース付プラグが合わない場合でも、自分で改造したりせず、プロの電気技師に依頼して、適切なコンセントを取り付ける。
- 製品にはアース付プラグが付属されています。アース付プラグの形状に合うコンセントを使用する。
- 製品を分岐プラグに接続しない。
- 電源コードのプラグが破損している場合、OGAWAか正規代理店で入手可能な専用プラグと交換する。


椅子構造

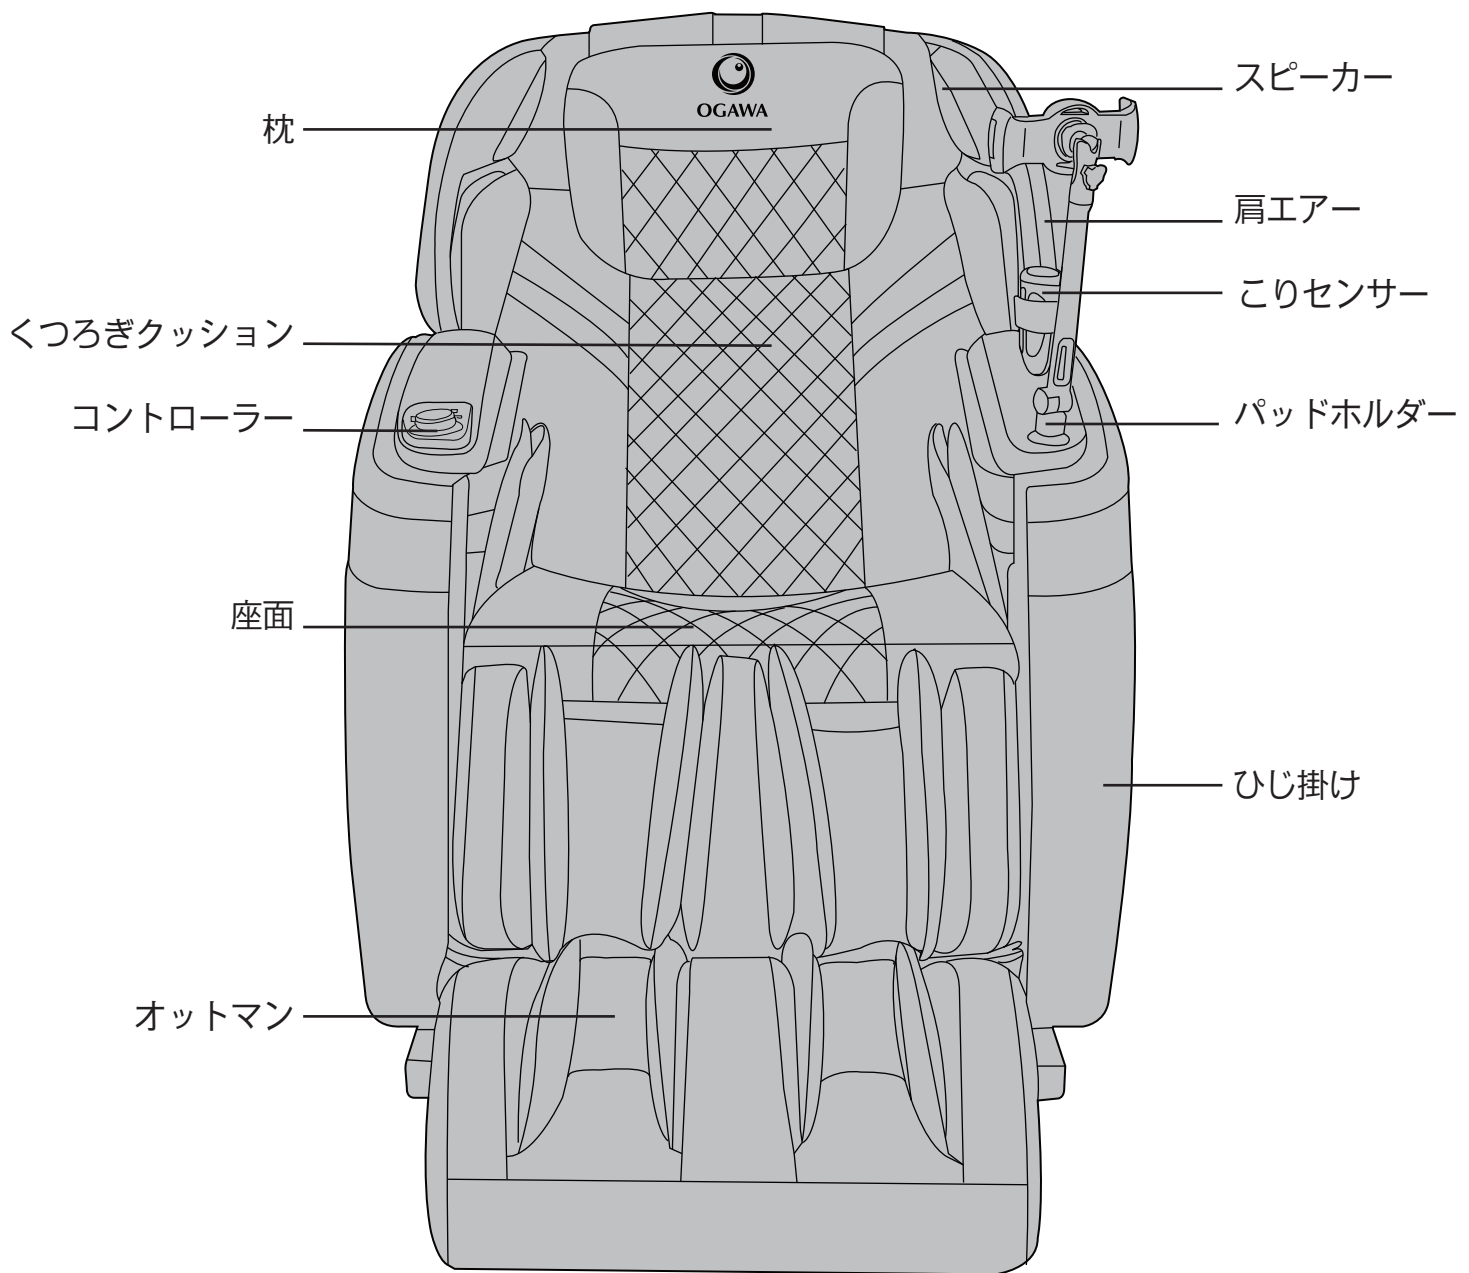

重要-製品の品質向上のため、
製品の画像またはコンテンツの説明が若干異なる場合があります。

椅子構造


エアバッグ内蔵の位置

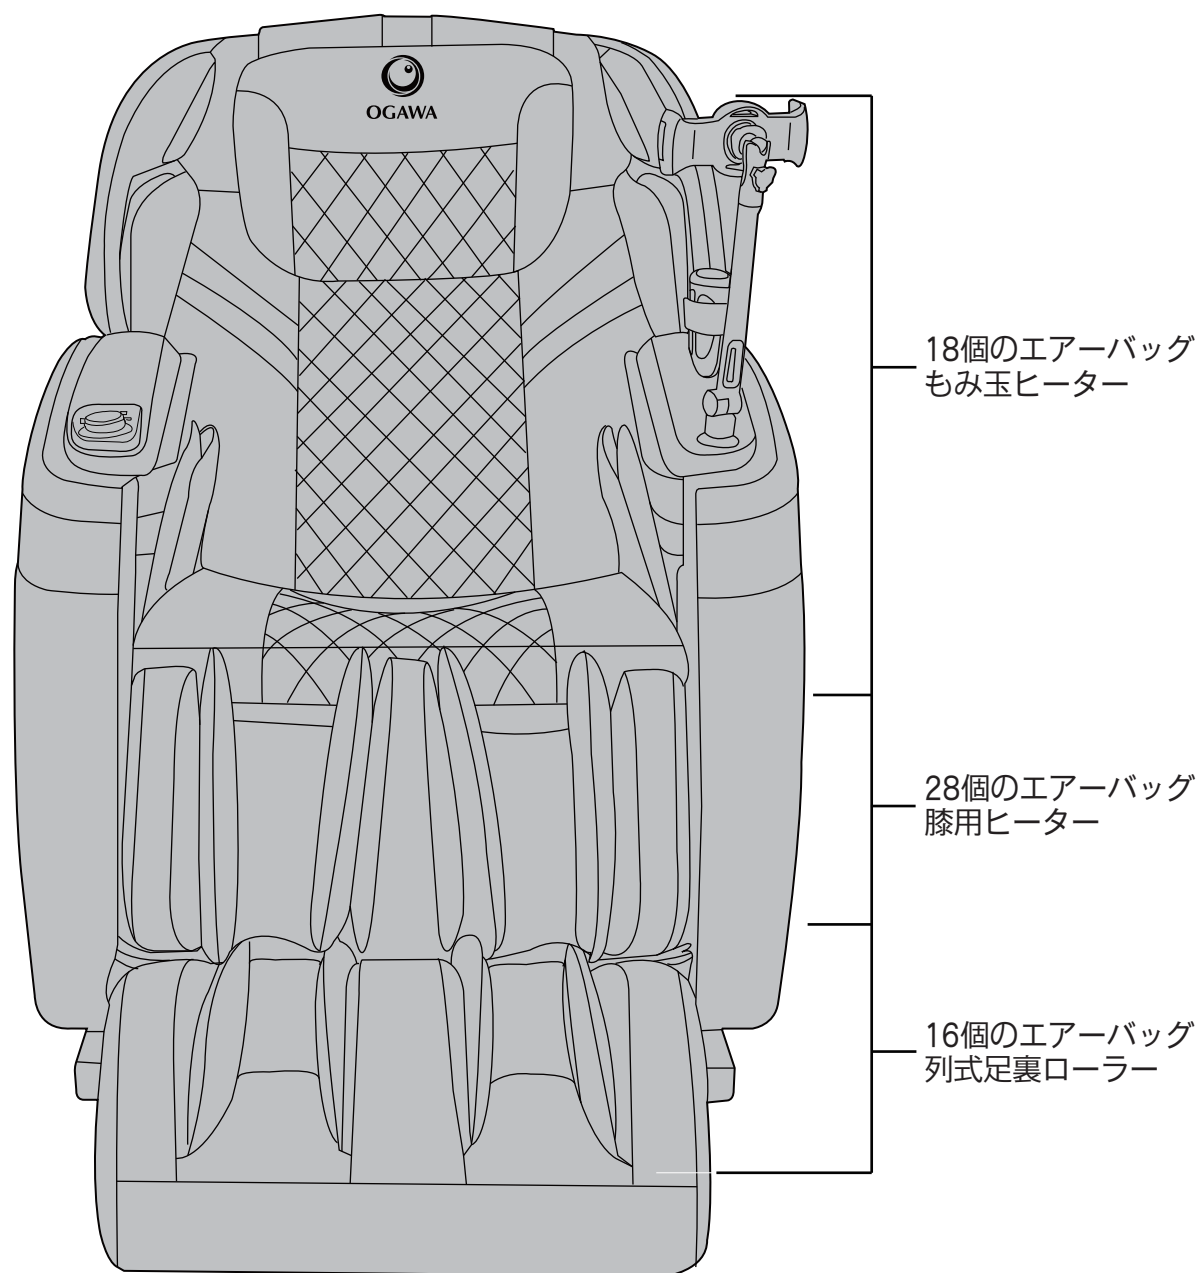

設置する

1 使用の前に（設置する場所を決める）


- リクライニングできるスペースを確保してください。

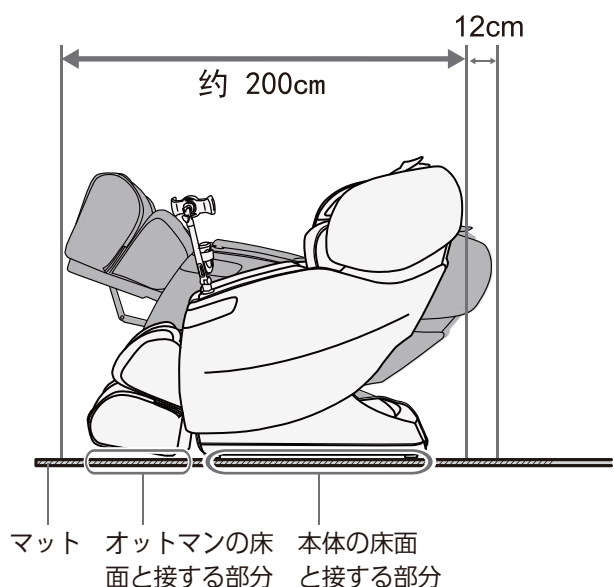

- 直射日光にあたる場所や、高温の場所（例：加熱機器の近く）への設置は避けてください。合成皮革が変色したり、変質するおそれがあります。
- 床を傷つけることがありますので、本体下にマットなどを敷くことをお勧めします。本体とオットマンが床に接する部分を覆える大きさ（最低寸法: 200cm×90cm）のものをご用意ください。
- 製品はコンセントの近くに設置してください。

2 移動について

方法1：両側のひじ掛けを持って、持ち上げる。

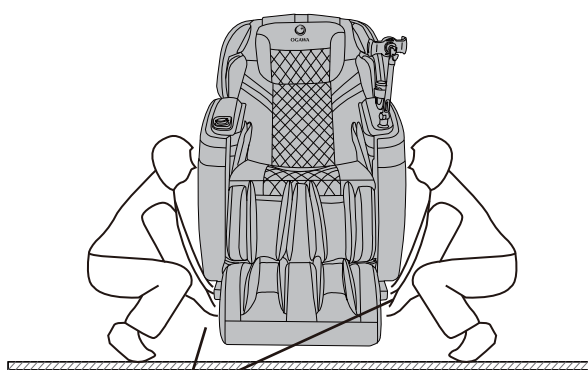

フローリングの床など傷付きやすいところはひじ掛けを持ち上げてください。

***注意**
ひじ掛けの外れを防ぐために、ひじ掛けの下にある中部の溝に指をかけないでください。

- 重量物ですので搬入時には腰などを痛めないようにご注意ください。（必ず2人以上で運んでください。）

本体質量

約125kg

本体を下ろすときは

- 十分足元に注意してゆっくり下ろしてください。
- 脚のせ台は最終まで手をそえて下ろしてください。途中で手を放すと勢いよく戻ります。
- 床を傷つけることがありますので、床にマットなどを敷くことをお勧めします

⚠ 注意


- 設置後、本体を引きずったり押ししたりしない。
- フレームを持って移動する。
守らないと故障やけがのおそれがあります。
- 床面で直接キャスターを使って移動させない。
床を傷つけるおそれがあります。
- 人をのせたまま移動しない。
転倒し事故やケガのおそれがあります。
- 本体を移動するときは、足裏マッサージ部を持たない。
守らないと移動中にスライドし、けがをするおそれがあります。

⚠ 注意

右図のように椅子をそっと引いたり押し
たりして移動させます。この方法は、木
製の床には適しません。床を傷つけるお
それがあります。

- ① 電源スイッチを押し、背もたれとオットマンを初期位置に戻します。
- ② 背もたれと脚のせ台を元の位置に戻ります。
電源スイッチを「0」の位置にし、電源プラグを抜いてください。

こりセンサーと電源コードを座面に置きます。

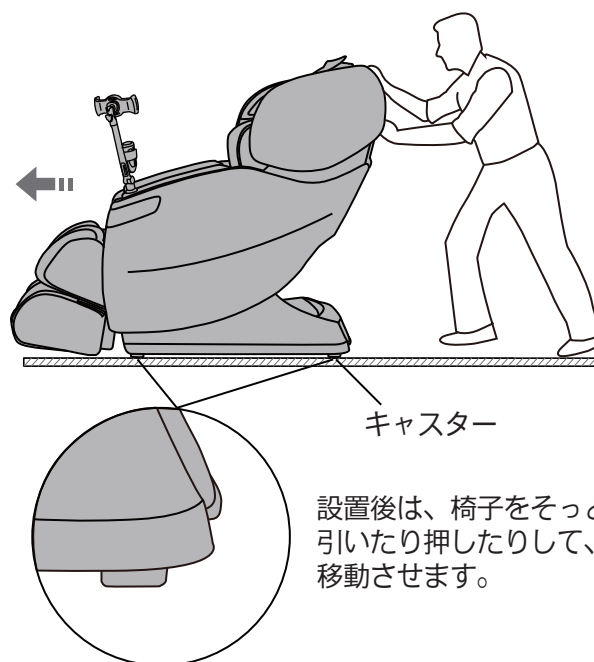


組み立てる

(組立説明書をご覧ください。)

毎回マッサージを始める前に

1 周囲を確認する


周囲に人やペットがいないか、物を置いていないか確認する。

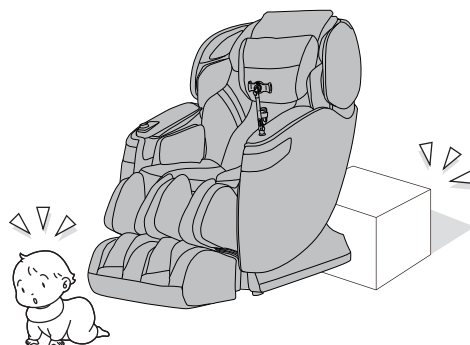

2 くつろぎクッションをめくり、ジッパーで留める。

くつろぎクッションをめくり、ジッパーで本体に取り付ける。

くつろぎクッション

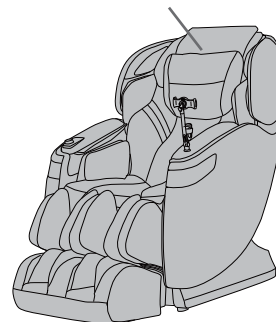


3 製品の縫製部分に異物が付着していないか確認する

脚や足裏のマッサージ部を確認する際は、オットマンを手で前方に押し、縫製部分に異物がないか確かめます。

⚠ 注意


- オットマン、座面、肘掛けのそれぞれの間の縫製部分に手、指、足、頭部を入れない。
- 上述の各2箇所間に異物がないことを確認してから座る。
- 背もたれと裏カバーの隙間に手・腕や頭を入れない。
- 本体の上（裏カバー、背もたれ、肘かけなど）にペットをのらせない。

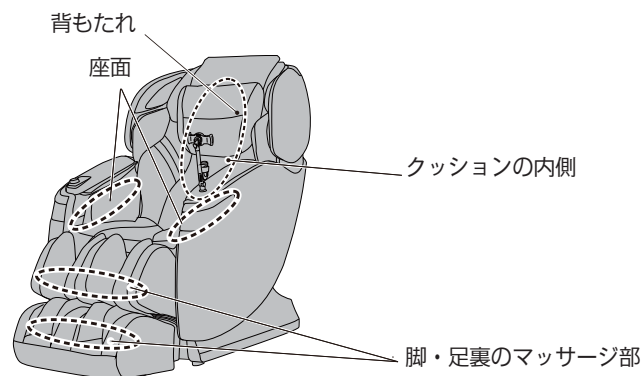

4 電源コードや電源プラグを確認する


警告

- 電源プラグのほこりなどを定期的にとる。
守らないと、湿気等で絶縁不良となり、火災の原因になります。
(ほこりは乾いた布でふいてください。)
- 電源コード・電源プラグを破損するようなことはしない。(傷つけたり、加工したり、熱機器に近づけたり、無理に曲げたり、ねじったり、引っ張ったり、重いものをのせたり、束ねたりしない。) 傷んだまま使用すると、感電、ショート、火災の原因になります。電源コードや電源プラグの修理は販売店または「修理相談窓口」にご相談ください。

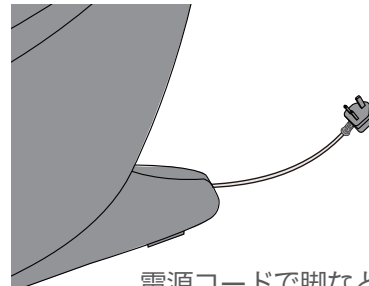

電源コードで脚などをひっかけないようにご注意ください。

電源プラグは根元まで確実に差し込む。


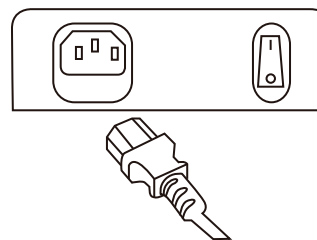


5 本体の電源を入れる

- ① 電源プラグをコンセントに差し込む
- ② 電源スイッチを「I」(入)にする


警告

- 電源プラグは根元まで確実に差し込む。
守らないと過剰に発熱し感電や火災の原因になります。
- コンセントや配線装置は必ず決まりを守って使用してください。
- 交流220-240V、50/60Hzの電源を使用してください。
(海外での使用や変圧器を用いた使用はできません。)
感電・故障や発熱による火災の原因になります。
- 濡れた手で、電源プラグの抜き差しはしない。
感電の原因になります。

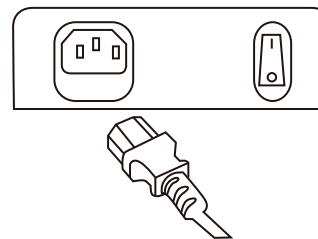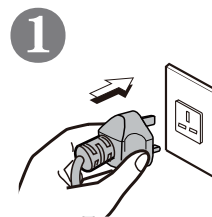


毎回マッサージを始める前に (つづき)

6 もみ玉が収納位置にあることを確認する

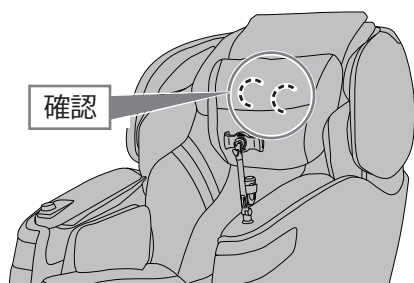

もみ玉が収納位置にない場合、
「入」を押すと収納位置に戻ります。

7 生地に破れがないか確認する

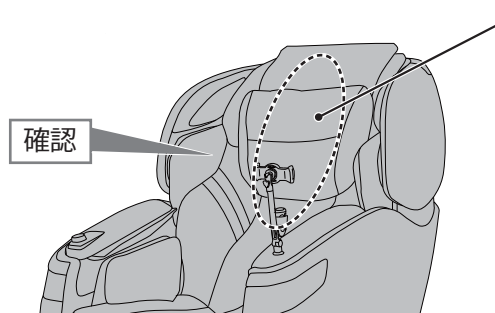


確認箇所：
背もたれのもみ玉移動範囲部分の生地

⚠ 警告

- 使用前には、必ずくつろぎクッションをめくり上げて、上記に示した位置の生地に破れがないかを確認します。他の部分の生地も確認してください。
(どんなに小さな破れでも、直ちに使用を中止し、電源プラグを抜き、修理を依頼してください。)
生地が破れた状態で使用するとけがや感電のおそれがあります。

8

必要に応じて椅子を調整する

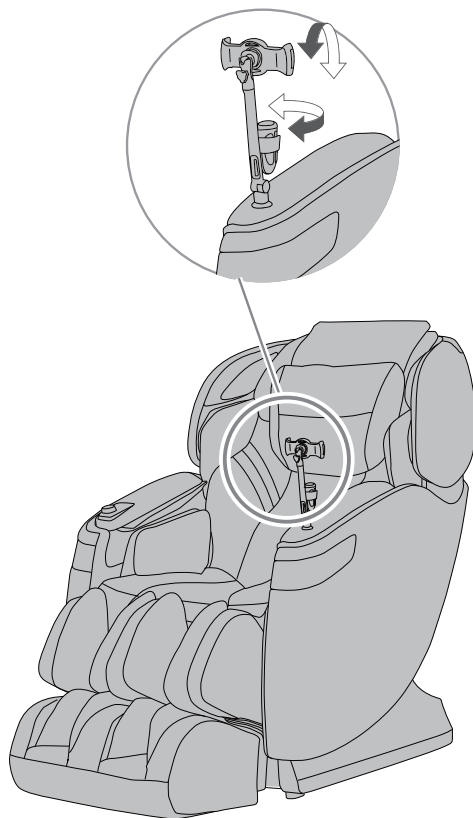


スタンドの調整

- 左右方向の調整

9

足裏マッサージ部をお好みの位置にスライドさせる

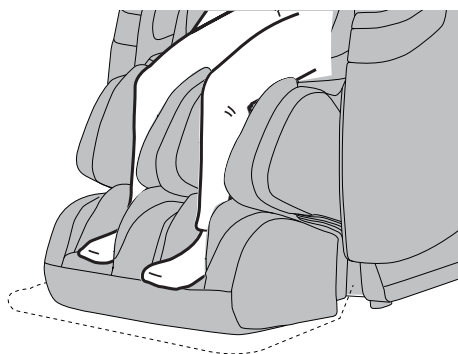


背の高い方

- 電動で足裏マッサージ部をスライドさせて、膝が浮かないようします。

お好みの位置に達したら、かかとの下にあるセンサーを踏んで、自動位置調整を停止させます。

簡単な使い方

右ひじ掛けに設置された簡単操作ボタンで、下記の操作が可能です。

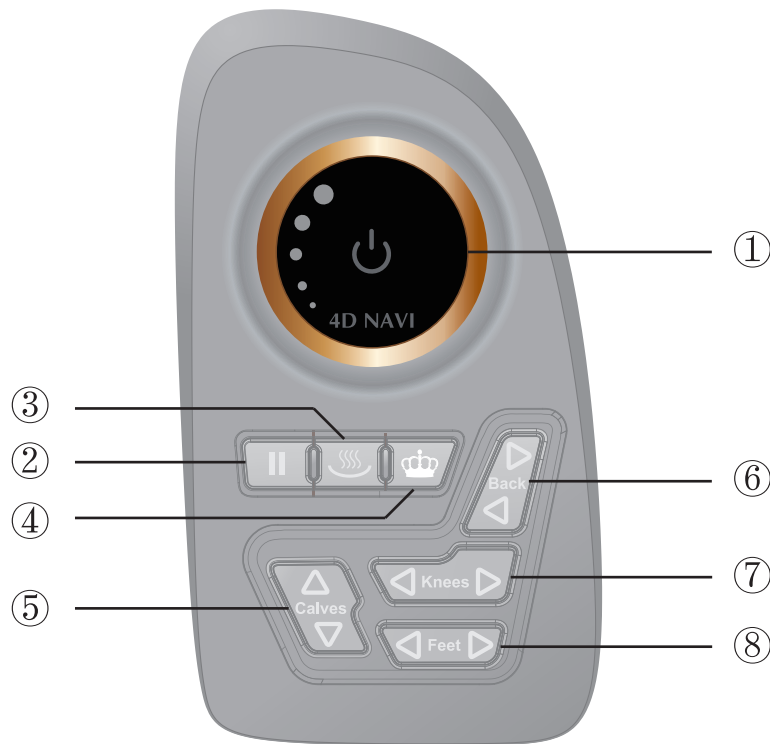

1、電源と4D調整のボタン

入/切の機能で、電源が切れた状態で1秒長押しで電源が入り、再度1秒長押しで電源が切れます。4D強さ調整、時計回りで4D強さを強く、反時計回りで弱くします。

2、一時停止ボタン：本ボタンを押すと全てのマッサージ機能が一時停止します。もう一回押すと停止解除になります。

3、ヒーターボタン：本ボタンを押すと、ヒーターが作動、もう一度押すと停止します。

4、プロ技コース：プロ技コースへのショートカットボタンです。

5、オットマン上げ/下げ：上矢印を押すとオットマンが上がり、下矢印を押すと下がります。


6、背もたれ上げ/下げ：上矢印を押すと背もたれが起き、下矢印を押すと倒れます。

7、オットマン上部伸縮：左矢印を押すとオットマンが伸び、右矢印を押すと縮みます。

8、オットマン下部伸縮：左矢印を押すとオットマンが伸び、右矢印を押すと縮みます。

智能的マッサージの便利なオンボタン

椅子をオンにした状態で、こりセンサーのオンボタンを押してから、マッサージ評価を始めます。評価終了の15秒後、専属作成プログラムを自動的におすすめします。

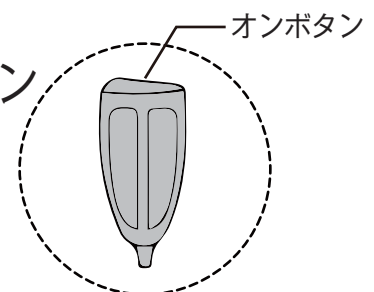


APPダウンロード

1、iPadとIphoneがApp Storeで、アンドロイド携帯電話がgoogle playでアプリのキーワード検索でダウンロードします。
キーワード：OGAWA Wellness、奥佳華健康管家、奥佳华健康管家


2、又は右のQRコードをスキャンしてダウンロードできます。
ダウンロードのソフトウェア&ハードウェアの条件は下記の通りです。

ハードウェア：iPad mini 2込み&以上、Iphone、アンドロイド携帯電話
IOSシステム：IOS10.0込み&以上
Androidシステム：Android4.3込み&以上




APPの初回使用

- 1、APPに入って、所属地域を選んでから、ログイン・登録の画面に行きます。
- 2、アカウントがあれば、APPに直接的ログイン（図1）ができます。

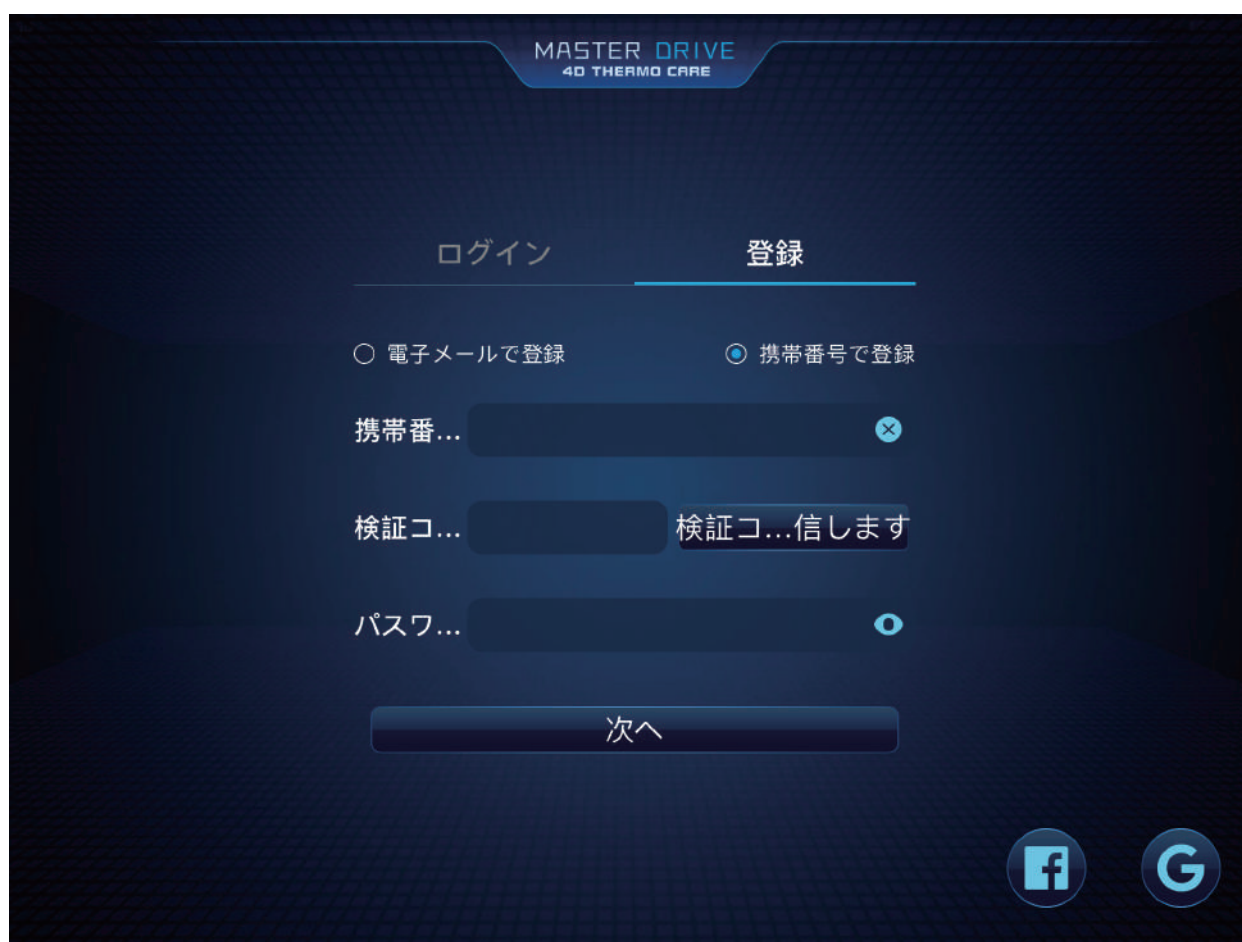

(図1)

- 3、APP使用にアカウントの登録が必要です。携帯番号或いはメールアドレスによる登録ができます。（図2）
- 4、アカウントを使って、顔認証がバイディング終了後、顔ログインができます。
- 5、GoogleかFacebookのアカウントでAPPにログインして、携帯番号又はメールアドレスにバイディングしてAPPに入ります。

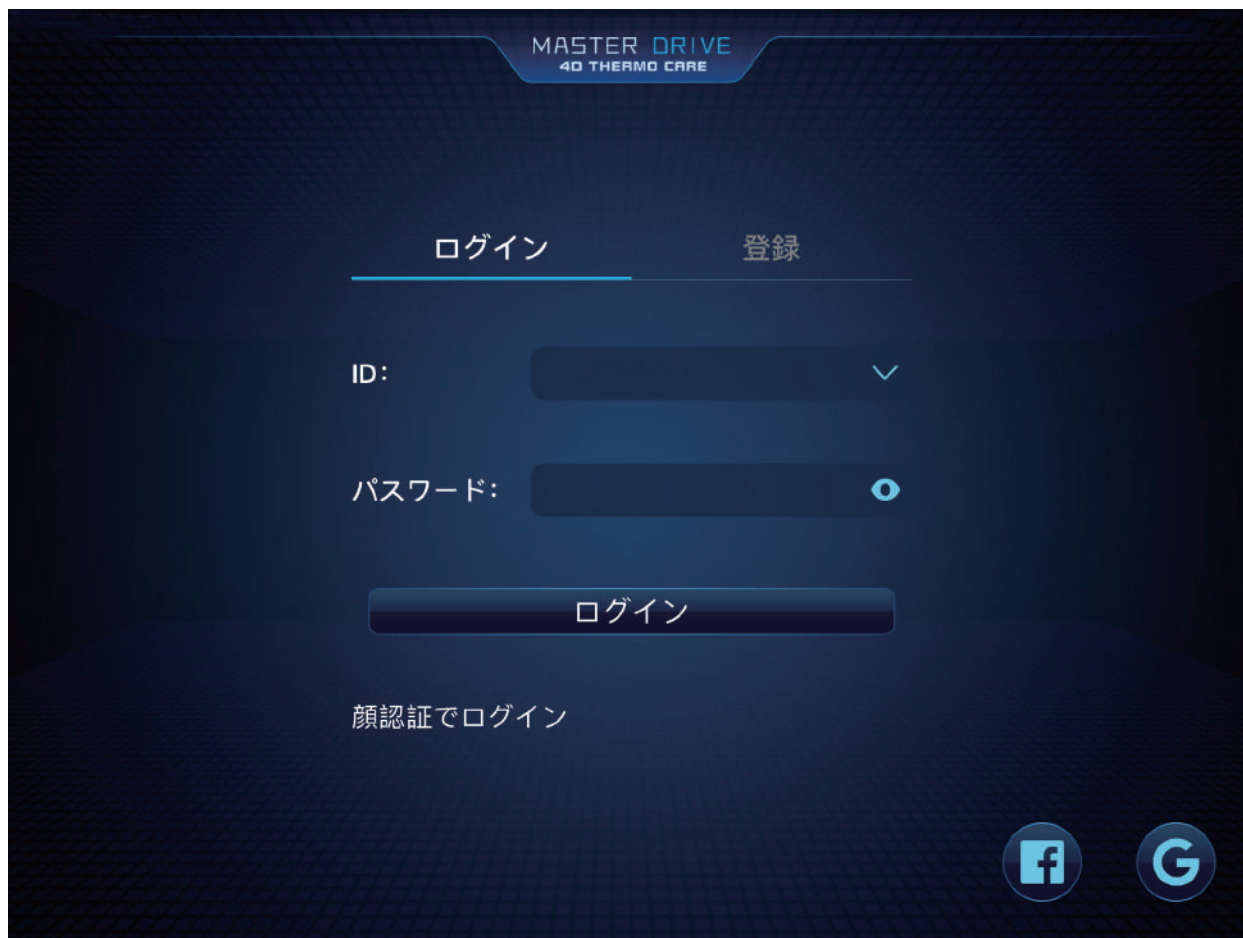

(図2)

初回設備バイディング

- 1、トップページに入ってから、APPより当該アカウントが設備にバイディングされたのか判断します。
- 2、設備に未バイディングの場合、設備管理ページに入って、専属QRをスキャンしてマッサージチェアを認識して、バイディングします。(図3)



(図3)

QR code card
専用QRコードのカード


Scan the product unique QR code, to recognize the massage chair and provide the massage experience.
商品専用QRコードをスキャンして、マッサージチェア情報を認証して、専用マッサージ体験を行います。

▲ Suggestion:
Please tear the QR code sticker and stick on iPad holde.

▲ 提案:
カードのQRコードシールを取って、IPADのスタンドにお貼りください。



注意：QRコードをなくさないように商品専用QRコードのシールを取って、IPADのスタンドにお貼りください。

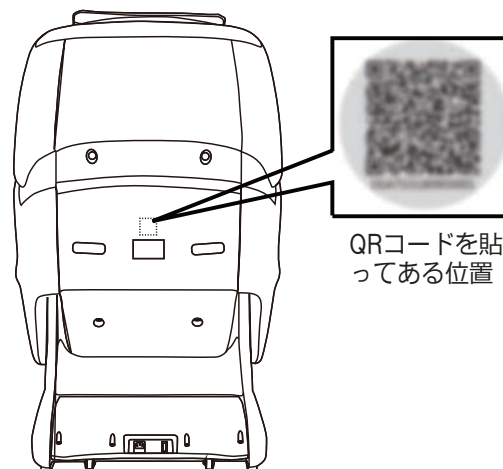


3、当該アカウントがマッサージチェアにバイディングした場合、設備管理ページでマッサージチェアを選んでから、Bluetoothを接続します。(図4)



(図4)

4、APPのWIFIがネットワークアロケーションしない場合、トップページのWIFIアイコンから接続します。(図5)
注意事項：APPのWIFIネットワークアロケーションは2.4Gのみ適用できますが、5GWIFIに適用不可能です。

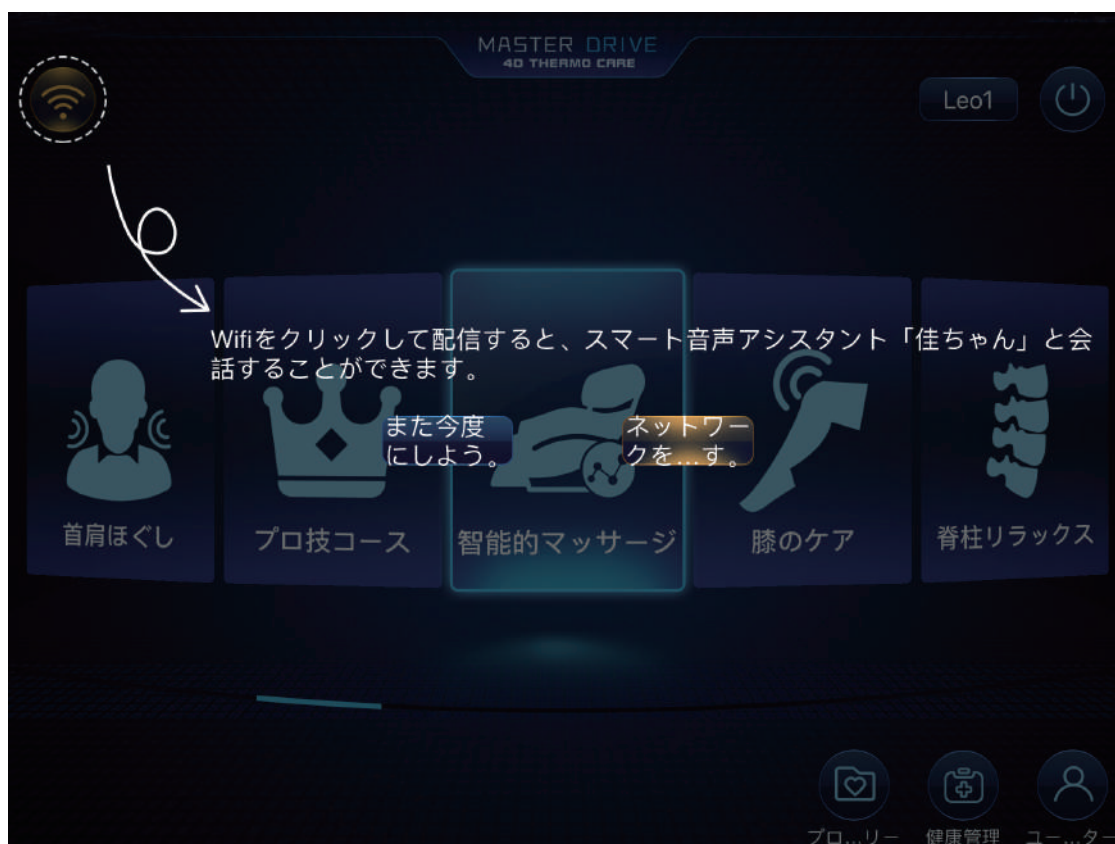

(図5)

音声制御


APPのWIFIにネットワークアロケーションができてから、オンライン音声制御及びオンライン音声サービスが実現できます。

音声キーワード：“Hey OGAWA”

★ 音声制御の詳細は一覧表をご参考ください。

⚠ 注意

- マッサージチェアに座ってから、音声制御をご利用ください。
- 音声制御ご利用の際に、椅子周りに人、ペットや物がないかご注意ください。

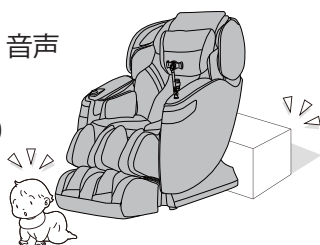


マッサージ評価

● こりセンサーのオンボタンでマッサージ評価を開始します。評価終了15秒後、専属マッサージプログラムを自動的におすすめします。

● APPメインページの「智能的マッサージ」にある「智能的評価」を通じて、マッサージ評価を始めます。評価においてAPP画面に検査状態及び最終評価結果を即時に表示できます。評価終了15秒後、専属マッサージプログラムを自動的におすすめします。

● マッサージ評価の際に、マッサージチェアに座りながら背もたれにかかって、静かな状態になります。左手の平で電極シートをしっかりと握って、親指を軽くこりセンサーのテストエリアに触って、テストエリアを完全に覆って、両手を自然に両側に置きます。

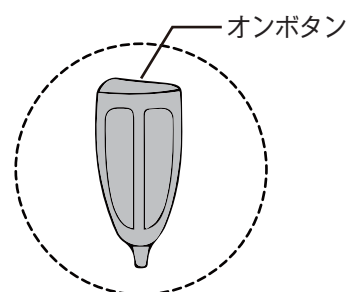

⚠ 注意事項

- 1) マッサージ評価前、手のひらと親指の乾燥と清潔を守るために、左手をきれいにしてください。
- 2) マッサージ評価前、電極シートとテストエリアの乾燥と清潔を守るために、こりセンサーのハンドルをきれいにしてください。
- 3) マッサージ評価において親指でセンサーを完全に覆うために、こりセンサーの側面のテストエリアをしっかりと握らないでください。


- 4) マッサージ評価において指を動かさないでください。
- 5) ネイルの左手親指でマッサージ評価ができません。
- 6) 運動直後にマッサージ評価をしないでください。
- 7) 連続的測定後の麻痺状態が血液循環に影響が出て、検査データを影響する恐れがあります。
- 8) 指の皮膚が厚かったり、色素がたまったりした場合、検査データを影響する恐れがあります。
- 9) 低温環境に長時間でいて、指先が冷たくなって、末梢循環が悪くて、脈拍が不足になる恐れがあります。検査不可能又は検査結果のずれが発生しかねません。

APP具体的操作はAPPホームページの「ユーザーセンター」のヘルプにある「APP使用説明」をご覧ください。


ブルートゥースの初回接続にPINコードの入力が必要です。
パスワード：9999

マッサージ終了

- 1 こりセンサーのハンドルをスタンドに付けてください。

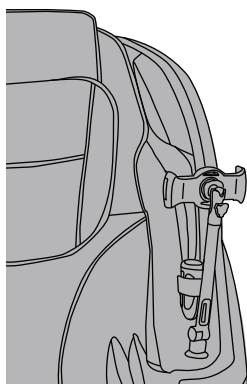

- 2 足裏マッサージ部のスライドを完全に戻す。

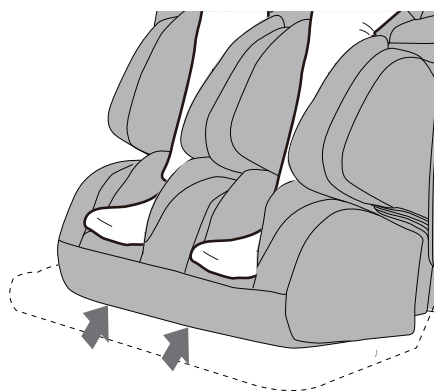

- 3 脚・足裏マッサージ部から脚を離れる。安全のために、使用後は必ずオートマンを上げさせてください。

足裏マッサージ部のスライドを完全に戻す。

- 足裏に物がなにかを確認する。


脚・足裏マッサージ部から脚をゆっくり離れます。

調節のページで足のせ台を原点に戻します。




警告


- 子供が使用禁止です。また、子供を本体で遊ばせたり、脚・足裏マッサージ部・座面・背もたれ・ひじ掛けにのぼさせたりしないでください。守らないと事故やけがおそれがあります。

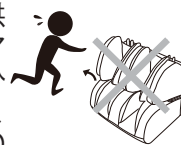

4 電源を切る

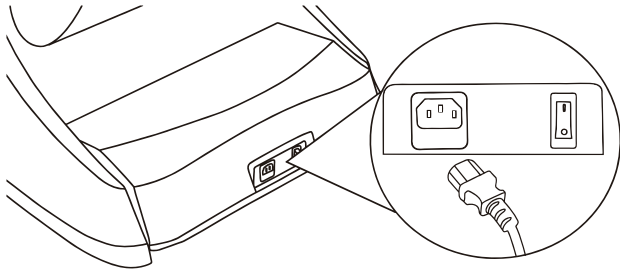

- ① 電源スイッチを切ります。
- ② 電源プラグを抜きます。

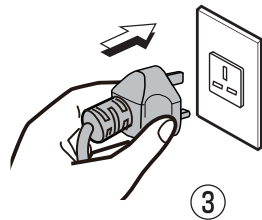

警告

- 使用終了後、電源スイッチを「0」（切）にスライドして、電源プラグを抜きます。


守らないと子供のいたずらによる事故やけがのおそれがあります。

タイマー機能について

マッサージを開始してから、タイマースタートでタイマー時間になると自動的に停止します。


- 脚・足裏マッサージ部が自動で下がります。
- もみ玉が収納位置まで動きます。
- 背もたれが自動では起きません。
パネルが閉まる場合、「入/切」を押せば、足のせ台が最初位置に戻ります。

マッサージを途中で終了したいときは

 をタッチします。

- 脚・足裏マッサージ部が自動で下がり、もみ玉が収納位置に戻ります。
- もみ玉収納後、背もたれが上がります。

異常を感じたときは

 をタッチします。


- すべての動作がその場で停止します。
- 転倒に十分に注意しながら、本体から降りてください。

お手入れのしかた

合成皮革部分

柔らかい乾いた布でふく。

- シンナーやベンジン、アルコールなどの薬品を絶対使用しないでください。
- 市販のレーザお手入れ用品（化学ぞうきん）をご使用の際に、その注意書きに従ってください。
- 汚れがひどい場合は、以下の手順でふきとってください。
 - 1：水又は中性洗剤をぬるま湯で3～5%に薄めたものに、柔らかい布をひたし、よくしぼる。
 - 2：表面にたたくようにふく；
 - 3：水を含ませた布をよくしぼってから、洗浄液をふきとる；
 - 4：柔らかい乾いた布でふく；
 - 5：自然乾燥させる。
- 汚れが落ちにくい場合は、市販の「メラミンフォーム材質のスポンジ」で同様に中性洗剤を含ませふき取ってください。
- ドライヤーなどで急激に乾燥させないでください。
- 合成皮革分に色移ることがありますので、ジーンズや色柄ものなど、色落ちしやすい衣類でのご使用はご注意ください。
- 変色の原因になりますのでビニール製品などを長時間接触させないでください。
- 合成皮革が変色の恐れがありますので、染髪剤を使用した場合は接触面をタオルで覆ってください。

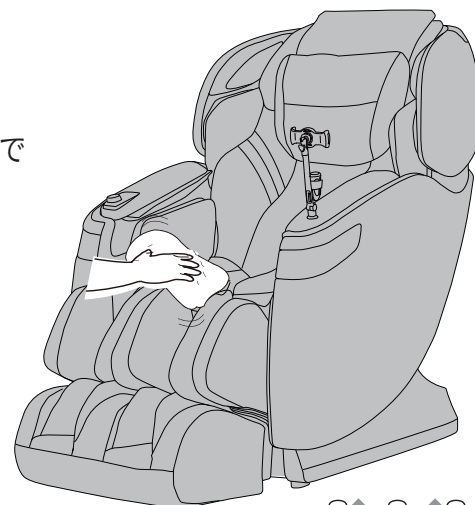


1 水又は中性洗剤をぬるま湯で柔らかい布をひたし、よくしぼってから本体のプラスチック部分をふく。

- シンナーやベンジン、アルコールなどの薬品は絶対使用しないでください。

2 仕上げに水を含ませた布をよくしぼってからふく。

- タッチパッドをお手入れする際は、特によくしぼってからふくようにしてください。

3 自然乾燥させる。

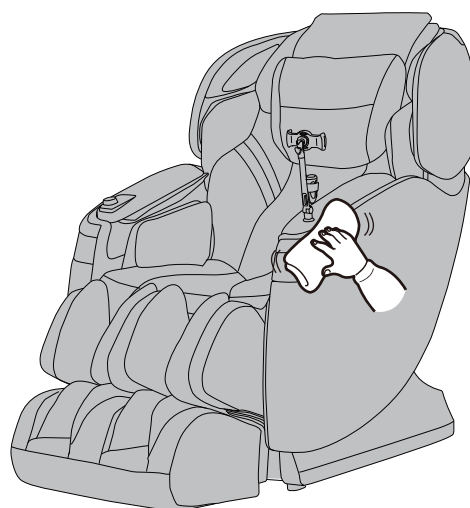

質問回答 (Q&A)

Q 病気で通院しているけど、使っても大丈夫？

A 通院先の先生と相談のうえ、使用してください。

マッサージは「触圧刺激」といって、筋肉に圧力をかけてほぐし、血液を促進する行為です。病気によっては、悪化を招く可能性もありますので、必ず医師に相談してください。

Q 身長どのくらいの方は商品を使用できる？

A 体型によって使用が異なる。下記内容をみてから、ご利用ください。

- 身長が約140cm未満の人や、約185cm以上の人は同時に上半身マッサージと脚・足裏マッサージ部を使う際に、足裏と足裏マッサージ部が十分に接触できない、または膝が曲がる。

身長の高い方は膝を曲げると感じる時、下記AかBを選んでください。

- A：背もたれを倒して、脚・足裏マッサージ部を下げる。
B：足載せ台で上半身のみマッサージする。
(脚マッサージと上半身マッサージを分けて利用する。)


身長の高い方は足裏マッサージ部に接触できない場合、下記AかBを選んでください。

- 下記AかBを選んでください。
A：背もたれを上げて、脚・足裏マッサージ部を上げる。
B：足載せ台で上半身のみマッサージする。
(脚マッサージと上半身マッサージを分けて利用する。)


Q 引っ越しなどで、本体を運搬する際の注意点は？

A 次の点にご注意ください。

- 運搬しやすくするために、背もたれを最低の位置まで下げてください。
- 人が座っていない状態で行ってください。

- ① 入/切を押して、電源を入れる。
- ②  を押して背もたれが倒れた状態にする。

また押せば背もたれと脚のせ台がストップになる。

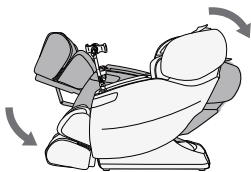


- ③電源スイッチを「切」にし、電源プラグを抜く。

- 梱包箱がある場合、電源コードやタッチパッドコードが本体にことを絡まっていないことを確認し、タッチパッドコードとともに座面の上にとめるなど、輸送時に地面に擦らないように配慮してください。
- 梱包箱がない場合、傷や振動策として梱包材で保護して、大切に扱ってください。

Q 商品の製造品番をどこから見える？

A 本体の後ろにある座面の下。

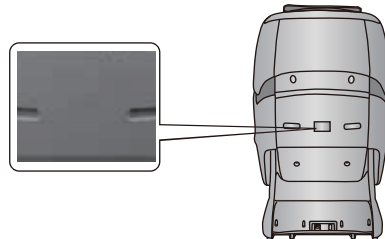

Q 膝の温感を感じない場合はどうする？

A 「膝温感」は膝の生地の温感のみ感じられる。膝をしっかりと温感伝導部に近いてください。足裏マッサージ部が上がる際に、膝と温感伝導部がしっかり接触して、温かさを感じる。また、膝に毛布を掛けて、温感をアップさせる。

Q 動作音を気になる。

A 作動時はモミキの構造で音が発生する。

Q 動作時は左右のもみ玉の強さ違いを感じたが、大丈夫？

A モミキの構造で作動中の左右もみ玉の強さ違いを感じる場合がある。

最自然なマッサージ手法を実現するために、左右もみ玉の交替たたき構造のモミキを使う。作動時は左右もみ玉が背中中の違う位置に接触して、利用者によりもみ玉の強さ違いを感じさせる。その際に商品自身の故障ではない。

Q 足裏指圧が強すぎると感じる時

A エアのボタンをタッチしてから、「1」の強さに設置する。

また、脚・足裏マッサージ部を下げて、足裏指圧の強さを下げる。

Q 一か月の電気代はいくらですか？

A 1日30分で毎日使用した場合、一か月の電気代は約3度です。

故障かな？と思ったとき

下記の点検と修理をお願いします。
修理後なお異常がある場合はお買い上げの販売店にご連絡ください。

症状	原因と処置
もみ玉が途中で止まる (椅子がビービービーの音がしながら、操作器の動作表示部やボタンがすべて点滅して消灯する。)	ご使用中、無理な力がかかった場合、安全のためにもみ玉の動きが止まることがあります。 ▶ 表示部やボタンがすべて点滅してもみ玉の動きが停止した場合、異常なので本体の電源スイッチを一度切り、約10秒後に再度「入」にしてから操作してください。再度止まる場合は、体を浮かし気味にしてご使用ください。 (関連注意事項を守り、特に100kg以上の方がご使用になるときはご注意ください。)
リクライニングができない 脚のせ台の上げ下げができない (ビービービーの音がしながら、操作器の動作表示部やボタンがすべて点滅して消灯する。)	障害物にあたるなど、ご使用中、無理な力がかかった場合、安全のために動作が止まることがあります。 ▶ 表示部やボタンがすべて点滅して背もたれ、または脚のせ台が停止した場合、本体の電源スイッチ一度切り、約10秒後に再度「入」にしてから操作してください。
もみ玉が肩や首の位置まで来ない	▶ 頭が枕から離れていたり、背中が浮いていると体型センシングのときに、肩の位置を実際より下に検知してしまう場合があります。深く腰かけ、頭を枕につけてマッサージを最初からやり直してください。
左右のもみ玉の高さ(強さ)が異なる	▶ 交互たたき機構を採用しているため、やむをえず発生するもので、故障ではありません。
椅子が動作できない。 ● 上半身(首から腰まで)のマッサージ ● 脚と足裏のマッサージ	▶ ● 電源コードが繋がっていない。 ● 本体の電源スイッチが入っていない。 ● タッチパッドの入/切をタッチしてから、選択できるプログラムがない。
もみ玉と膝から温感を感じない。	▶ ● 「温感」もみ玉、「膝温感」スイッチが「切」の状態に設定された。 ● 膝温感は膝部位の布のみ温感がある。 利用者の体型・マッサージ方法・服装・室温によって違う温感を感じる。足裏マッサージ部が上がる際に、膝と温感伝導部がしっかり接触して、利用者が温かさを感じる。また、膝に毛布をかけて、温感をアップさせる。
温感を閉めても温度が下がらない。	▶ ● ヒーター構造のため、加熱後にしても余熱で温感を感じる。 ● 温感を閉めても同じ部位にマッサージを続けると温感を感じる。
もみ玉と膝の温感を押してもヒーターが発熱しない。	▶ 上半身や膝のマッサージ部にヒーターがないと単独使用ができない。
椅子の故障	▶ 事故防止のため必ず量販店または「修理ご相談窓口」にご相談ください。
電源コードや電源プラグに異常の発熱	▶

マッサージ評価で常にある問題及び対応策

よくある問題	原因推定	対応策
短時間で検査結果に大きな変動	1、こりセンサーのハンドルを正しく握っていない。	1、こりセンサーのハンドルの説明通りに正しく握ってください。
	2、検査用の指や体が震えた状態である。	2、検査用の指や体が震えないでください。
脈拍や血酸素の検査結果を 獲得できない。	1、親指を正しく置いてない。	1、こりセンサーのハンドルの説明通りに正しく握ってください。
	2、検査用の指が握りすぎる。	2、親指をテストエリアに軽く覆って、力を入れすぎないでください。
	3、ネイルの指	3、検査際に指のネイルをきれいにしてください。


上記方法で対応できない場合、「商品修理保証書」をご覧ください。OGAWAサービスセンターにご連絡ください。

動作中発生する音や感覚について

ご使用中に下記のような動作音や感覚がありますが、

構造上発生するものですので異常ではありません。

- もみ玉が「出し」から「収納」に変わる際の音
- 動作時にもみ玉が生地のシワを乗り越えるときの音・感覚
- もみ・たたき動作などの動作音
- もみ玉動作時のキシミ音
- 上下動作時の動作音
- ベルトの回転音
- モーター音
- もみ玉が「押し」から「引き」に変わる際の音
- 着座時の音
- リクライニング時のひじ掛けとくつろぎクッションのこすれ音
- もみ玉と布のこすれ音
- 座面下からポンプ動作音
- エア排気音
- 座面下からバルブ動作音
- 脚のせ台のがたつき
- 肩ストレッチ、動作時のカクン音
- エアの動作音
- リクライニング時のくつろぎクッションとバックカバーのこすれ音

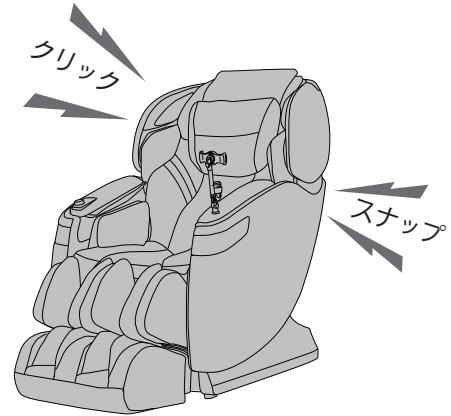

音が大きくなった場合、故障の可能性もあります。

- 点検修理のご依頼を量販店または「修理相談窓口」にご相談ください。

⚠ 警告

- 絶対に改造しない。また、ご自分で分解したり、修理をしない。
発火したり、異常動作して、けがをする恐れがあります。

⚠ 警告

- 動かない場合や、異常を感じたときは使用を中止し、すぐに電源プラグを抜いて点検修理を依頼する。
(守らないと感電や発火のおそれがあります。)
- (異常・故障の例)
- 電源スイッチを入れても動作しない。
 - 電源コードを移動して、電気が通らないときがある。
 - 動作中に焼け臭いと異音発生がある。
 - 椅子が変形したり、異常の発熱したりする。
- 直ちに点検修理のご依頼を量販店または「修理相談窓口」にご相談ください。

定格・仕様

使用電力	AC 220-240V~, 50-60Hz	
消費電力	200W (タッチパッドで「切」の時は約0.3W)	
上半身 マッサージ	施療範囲 (上下方向)	約1.35m
	施療範囲 (左右方向)	もみ動作ときのもみ玉間隔 (もみ玉の幅を含む) 背すじのばし、上下移動時のもみ玉間隔 (もみ玉の幅を含む) : 約4.5cm- 16.6cm
	施療範囲 (前後方向)	もみ玉の突出量 (強弱調節) 約10cm
	マッサージ 速度	もみ 約7回/分~約30回/分 たたき 約300回/分~約520回/分 移動速度 約1.3cm/秒~約4.2cm/秒
リクライニング角度	背もたれ: 約128° ~154° 脚のせ台: 約4° ~86°	
タイマー	約15分で自動で電気が切れる	
大きさ	リクライニング していないとき (奥行さ*幅*高)	約158cm X 84cm X 121cm
	リクライニン グしたとき (奥行さ*幅*高)	約196cm X 84cm X 105cm
質量	約 125kg	
梱包箱のサイズ (長さ*幅*高さ)	三つ梱包 座部: 146*77*103cm ひじ掛け: 127*37*66cm オットマン: 57*49*60cm	二つ梱包 座部: 158*85*100cm オットマン: 57*49*60cm
質量 (梱包箱込み)	三つ梱包: 約146kg	二つ梱包: 約144kg
利用者最大の体重	約 120kg	

本製品は体重が約100kg以上の方が使用された場合、動作音が大きくなったり、布カバーの磨耗が早まるなどの場合があります。

アフターサービスの連絡先



MALAYSIA
Healthy World Lifestyle Sdn Bhd
No. 22 Jalan Anggerik Mokara 31/47
Kota Kemuning, 40460 Shah Alam
Selangor Darul Ehsan, Malaysia
Tel : +603-5121 4286
Fax: +603-5121 4386



HONG KONG, CHINA
OGAWA Health Care International (HK) Ltd
31/F, YHC Tower, 1 Sheung Yuet Road
Kowloon Bay
Kowloon
Hong Kong
Tel: +852 3465 6262
Fax: +852 2410 0119



SINGAPORE
OGAWA Health-Care Pte Ltd
27 Tampines Industrial Avenue 5,
T5 @ Tampines
Singapore 528623

Tel: +065-6846 8588
Fax: +065-6846 7677



VIETNAM
OGAWA Vietnam Co Ltd
2nd floor, Petroland Tower,
12 Tan Trao, Tan Phu ward
District 7
Ho Chi Minh
Tel: +84 54133 222/54133223
Fax: +84 5416 1736



PHILIPPINES
O-Healthcare Solution Phil. Inc.
2303, 4th Floor, G&A Building,
Chino Roces Avenue Extension,
Makati City, Philippines
Tel : +632 889 0676 / + 632 844 6851
Fax: +632 812 0421

Ogawa is grateful
to have received
these awards:



PUTRA
BRAND AWARDS 2010
SILVER
In association with
MALAYSIA'S MOST VALUABLE BRANDS

Ogawa Wellness Hubs : Malaysia . Singapore . Vietnam . Philippines . Indonesia . Myanmar . India . China
Hong Kong . Taiwan . Turkey . Pakistan . Mauritius . Russia . France . Canada
Thailand . Korea . Australia . Dubai . K.S.A . Nigeria . Egypt . Lebanon . Denmark
Sweden . U.S.A