




Tinkle TOUCH


music massage pillow

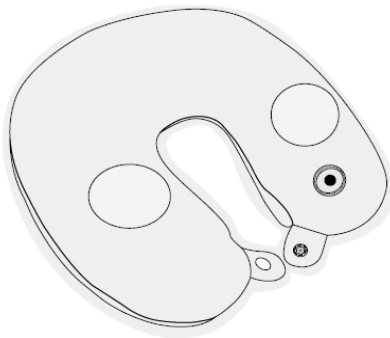

OL 0502 User Manual

Product Operation Guide

- Put the massager around your neck. Then press the ON/OFF button.
- Press the ON/OFF button again to switch off the massager.
- Pull open the zipper on the side of the massager to take out the connecting line.
- You can connect it to your mobile phone or Mp3 players, etc. Use the VOL switch to adjust the sound volume.

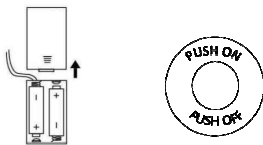

Battery installation:

- Pull open the zipper on the side of the massager to take out the battery box.
- Press down on the battery cover with your thumb and push according to the directional arrow shown on the cover.
- 2 AA batteries are required.
- Install the batteries, close the cover, and put the battery box back.
- Pull up the zipper.
- Please take out the batteries if the massager will not used for a long time.

Warranty Claims

- 1 Warranty is not transferable.
- 2 This warranty is effective only if the product is purchased from OGAWA.
- 3 Proof of purchase (original receipt) is required for all warranty repairs.
- 4 All implied warranties, including but not limited to these implied warranties of fitness and merchantability, are limited to the duration stated in the warranty policy.
- 5 Damage due to misuse, improper treatment and unauthorized modification and repair are not covered by this warranty.
- 6 Warranty does not cover accessories and attachments which do not belong to the massage unit.
- 7 Warranty is not effective to rental, business, commercial, institutional or other non-residential users.
- 8 All services covered by this warranty must be approved by OGAWA and repaired by authorize technicians only.
- 9 If replacement parts for defective materials are not available, OGAWA reserve the right to make substitution in lieu of repair or replacement.

Product Specifications

Product Name	Tinkle Touch Music Massage Pillow
Model number of the Product	OL 0502
Power consumption	3V
Dimension (Length/width/height)	L29* W30 *H10 cm
Weight	240g

Contact Us



MALAYSIA
Healthy World Lifestyle Sdn Bhd
No. 22 Jalan Anggerik Mokara 31/47
Kota Kemuning, 40460 Shah Alam
Selangor Darul Ehsan, Malaysia
Tel: +603-5121 4286
Fax: +603-5121 4386