

mobileseat XE DUO PRO



OZ1007

User Manual

Safety Instructions	2
Warranty Claims	4
Main Unit & Accessories	5
Controller Diagram	6
Product Features	8
Product Maintenance	9
Troubleshooting	10
Product Specifications	11
Contact Us	12

### I. Usage environment • Do not use the appliance in a wet condition or dusty environment as This may result in malfunction or electric shock.

Safety Instructions

## • Do not use the appliance in the bathroom.

- Do not place or store the appliance where it can fall or be pulled into a tub or sink. • Place the appliance in a safe location.
- Do not use or sit on the appliance when driving the car. • Do not expose the appliance to a heater or direct sunlight.
- II. Unsuitable user If you are experiencing health complications or conditions as stated below,
- Pregnancy - Any health concerns

Please consult your doctor before use: - Suffering from heart disease

- III. When the product should not be used • If the use exceeds 15 minutes at one time. • This unit should not be used by children or invalids without adult
- Do not use this product before sleep. • If the fabric cover is torn. • If liquid is spilled onto the appliance. • If the user feels abnormal or severe pain during the massage.

supervision.

2

- If the user detects any malfunction or other abnormal conditions during operation.
- If there is lightning. IV. Caution and warning
- Unplug the appliance from the outlet when not in use.
- Use the heated surfaces carefully. It should not be used by children or incapacitated persons. May be dangerous. • Do not lift or carry this appliance by the power cord or any cord. • This product is only intended for home use only.

• Do not use any attachments that are not recommended by OGAWA.

• Do not operate this appliance if it has a damaged cord or plug. Please

return the unit to OGAWA Service Center for examination or repairs. • Do not insert your hands or any object into the massager's vents and

Safety Instructions

- Do not cover the appliance during operation. • Do not crash appliance and avoid it from sharp folds.
- V. Note • Please read these safety notes thoroughly beforehand to ensure the safety and correct use of the appliance, • The appliance is not intended for use by persons suffering from physical,

# by a person responsible for their safety.

• Extensive usage could lead to excessive heating and shorter product

knowledge about the product. They need to be supervised and instructed

sensory or mental disability, or persons who lack experience and

lifespan. Should this occur, discontinue usage and allow the unit to cool before operating. • Some levels of noise during usage are normal due to vibration. • Consult the doctor before use if the person using it is under medication or with a medical condition. Please do not use the product if you are not feeling well.

• Do not increase the room temperature abruptly if the appliance is used

in the cold room. It is advisable that the temperature should increase

- gradually to a normal level. • If the appliance is stored in a cold place or in a warm environment, please wait for one hour before use to reach the optimum massaging level.

• Do not use the appliance if the electrical outlet is loose.

**Safety Instructions** 

2. This warranty is effective only if the product is purchased formogawa. 3. Proof of purchase (original receipt ) is required for all warranty repairs. 4. All implied warranties, including but not limited to these implied warranties of fitness and merchantability, are limited to the duration stated in the

• Do not remove the components as this result in malfunction or electric

## 5. Damage due to misuse, improper treatment and unauthorized modification and repair are not covered by this warranty.

**Warranty Claims** 

6. Warranty does not cover accessories and attachments which do not belong to the massage unit,

1. Warranty is not transferable.

7. Warranty is not effective to rental, business, commercial, institutional or other nonresidential users. 8. All services covered by this warranty must be approved by ogawa and repaired by authorized technicians only. 9. If replacement parts for defective materials are not available, OGAWA reserves the right to make substitution in lieu of repair or replacement.

### 5. Power cord 6. Power line connector 7. Car adaptor

Main Unit & Accessories

1. Massage head

2. Hand controller

4. Plug

3. Cushion vibration motor

8. Removable Flap(Equipped with a removable flap, allows you choose a softer or more intense massage) 9. Removable Pillow






5

# ON/OFF Heat

Controller Diagram

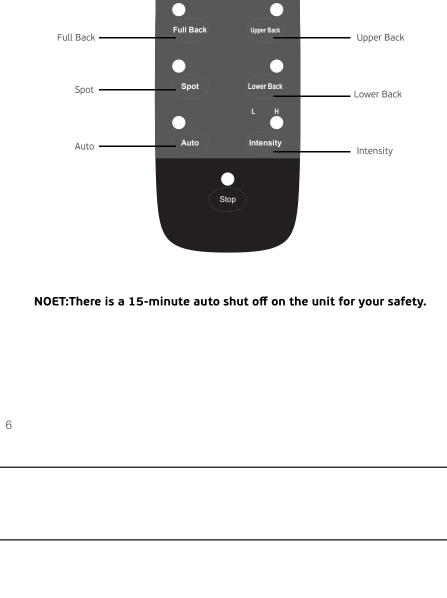

Vibration

Full Back Press "Full Back" button to activate this mode, the light will on. Massage head movement track: It moves from a low to the highest position, goes down to the lowest, repeats this cycle.

Press"Upper Back" button to activate this mode, the light will on.

Auto Mode: Select "Auto" mode, it cycle through "Full back", "Upper Back",

When ON/OFF button is pressed, the device will automatically move to the

lowest position before starting a massage program. The device will always

ON: Press the "ON/OFF" button to turn the device on, automatically into default low-intensity kneading and auto mode, the light will blink to

OFF: Press the "ON/OFF" button again, device turn off and massage

return to the lowest position after the device has been turned off.

Default Automatic runtime is 15 minutes

head automatically return to the lowest position.

indicate the active function.

"Lower Back", "Spot".

ON/OFF

Auto

# Press "Lower Back" button to activate this mode, the light will on.

Upper Back

Lower Back

Press "Spot" button, the light will on, keep massage function on one area, press again the device will stop in that place. Press "Intensity" button to set the massage intensity at high or low, the

Press "Vibration" button to activate the seat vibration. set vibration at high, low, or off settings, the light will blink to indicate the active function.

light will blink to indicate the active function.

To store

To clean

damage the wood.

any risk of injury.

Product Name

Weight

Dimensions(Length/Width/Height)

**Vibration** 

**Product Maintenance** 

• Keep the massager in the box or in a safe, dry and cool place.

• To avoid damage, do not warp the power cord around the unit.

• Avoid using abrasive cleaners, brushes, gasoline, kerosene, glass/

• Not recommended for using on wooden surfaces as the zipper may

• Only gentle force should be exerted against the unit in order to eliminate

• Driver is not recommended to use this product when driving as the heated function requires much more power. To avoid damaging your car's

9

11

cut or puncture the product's fabric surface.

• Do not hang the unit with the controller cord.

• Clean only with a soft, slightly damp sponge, • Keep the appliance away from water or any liquid.

• Avoid immersing unit in any liquid during cleaning. • Unplug the unit and allow it to cool before cleaning.

• Keep the massager away from sharp edges or pointy objects that might

### lower back or your entire back. 2. Heat function to indicate the massage effects and improve blood 3. Easy to use remote controller. 4. Auto shut-off after 15 minutes.

**Product Features** 

Controller Diagram

Press "Heat" button to set the massage heat at high, low, or off

can't be activated if massage function is not turned on.

Press "Stop" button to pause the massage, the light will on.

will blink to indicate the active function.

settings, the light will blink to indicate the active function. The heat

Press" Cool" button to set the cool function at high, low, or off settings, the light

1. 3 massage zones for your selection. Concentrate on your upper back,

# 5. LED light indicators. 6. Can be used in car.

8

Cool

Stop

Effects by using the appliance 1. Relieves the muscle ache and pain. 2. Relieves the tension and reduces the stress. 3. Improves blood circulation.

When not in use, press the [ON/OFF] button, and please don't cut off

the power immediately until the rollers have resumed to the bottom

and the indicator light is off.

### Caution • Do not lean on the dual massage mechanism in the cushion when adjusting your body position to avoid tears on the products cushion surface. • Do not jam or force any part or your body against the moving massage

furniture polish or paint thinner to clean the product.

**Product Specifications** 

### **Troubleshooting** This back massage cushion is controlled by an integrated chip and is susceptible to power surges form +10% to -15%. Due to this, the massage might display the following:

Conditions Solutions • Use the product when electricity is restored. Not operating • Reconnect the power code.

No light & heating

after pressing the

heat switch

10

During operation, the controller is working but the massage cushion is not operating back massager function cannot operate  • The massager could be overheated after prolonged use. It will automatically coordown to resume its normal condition. Please turn off the power and allow the massage cushion to cool off for 30 to 5 minutes.  • Turn on the power switch. • Reconnect the power cord.
cannot operate • Reconnect the power cord.
•
Sudden stop • Use the product when electricity is rest
• Reconnect the power cord.

• Turn on the power switch.

• For your safety, heat can not be turned on if

massage is not selected. Press the [Upper]/

[Full]/[Lower] button to start massage

function before using the heat function

### electricity system, connect the car plug to the product only after you activate your car's engine. • Do not attempt to repair the massage cushion, please contact OGAWA Customer Service for any servicing required.

OZ 1007 Model Power source 100~240V Frequency 50-60Hz Voltage 12V 3A Power consumption 36W

Mobile Seat XE Duo Pro

705x420x175(mm)

4.3 KG

геd.

# Contact Us



Healthy World Lifestyle Sdn Bhd No. 22 Jalan Anggerik Mokara 31/47 Kota Kemuning, 40460 Shah Alam Selangor Darul Ehsan, Malaysia Tel: +603-5121 4286 Fax: +603-5121 4386

MALAYSIA

SINGAPORE

**PHILIPPINES** 



OGAWA Health-Care Pte Ltd 27 Tampines Industrial Avenus S, T5 @Tampines Singapore 528623 Tel: +065-6846 8588 Fax: +065-6846 7677

O-Healthcare Solution Phil. Inc.





HONG KONG, CHINA



OGAWA Vietnam Co Ltd

VIETNAM



Fax: +632 812 0421

